KNOCK SENSOR
COMPONENTS

FI0X1-01

V-Bank Cover

Intake Air Connector Pipe

PS Air Hose

PCV Hose

Throttle Body

◆ Gasket

Intake Air Connector Pipe

18 (185, 13)
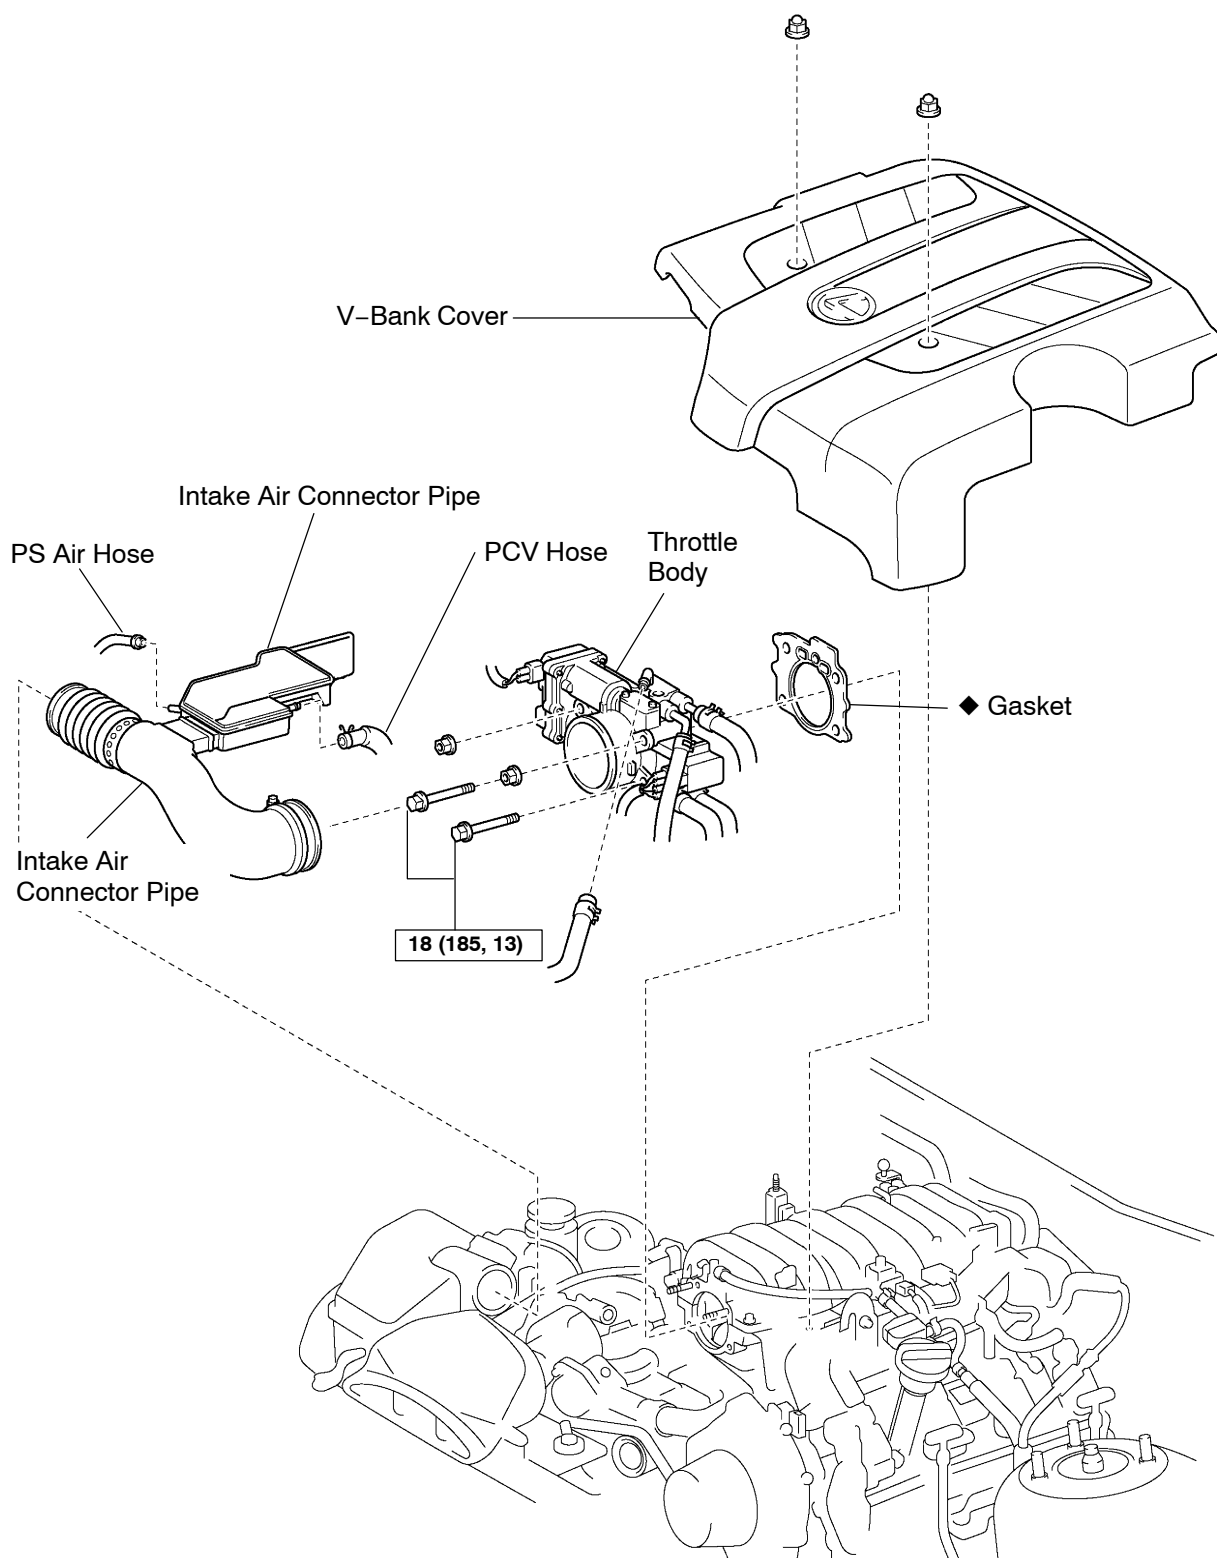
N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

B12553

Ground Strap

Engine Wire Protector

No. 1 V–Bank Cover Bracket

PS Air Hose

VSV connector for ACIS

Engine Wire Clamp

V–Bank Cover Bracket
Sub–assembly

No. 2 V–Bank
Cover Bracket
(with Noise Filter)

18 (185, 13)

18 (185, 13)

Upper and Lower
Intake Manifolds
Assembly

Injector
Connector

x 6

* 35 (360, 26)

◆ Gasket

No. 3 V–Bank
Cover Bracket

VSV for EVAP

VSV Connector
for EVAP

Knock Sensor 1
Connector

Knock Sensor 2 Connector

Engine Wire
Protector

EVAP Hose

Knock Sensor 2
45 (450, 33)

Knock Sensor 1
45 (450, 33)

| N·m (kgf·cm, ft·lbf) | : Specified torque |

◆ Non–reusable part

Y ***** For use with SST

B12559