


## **REAR FLOOR PAN (ASSY)**


**REMOVAL** (With the body lower back panel removed.)

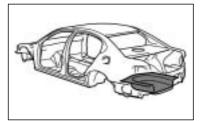

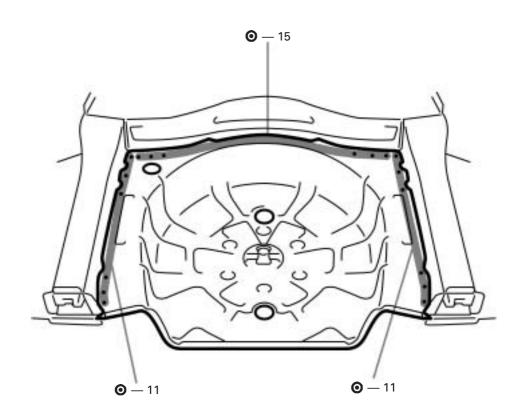

## **INSTALLATION**

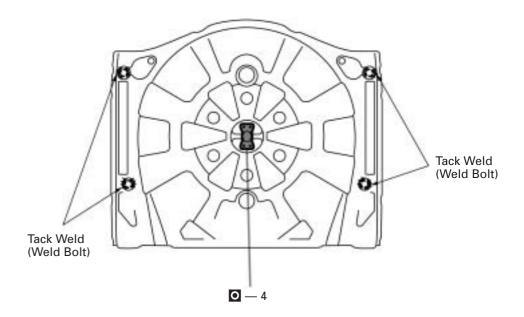

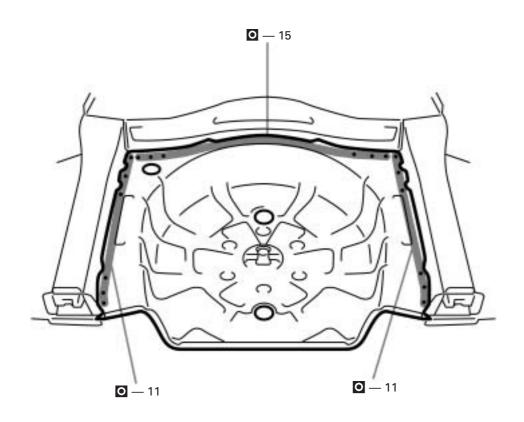

 Attach the weld bolt to the center of the bearing surface.