
CO0AI-02

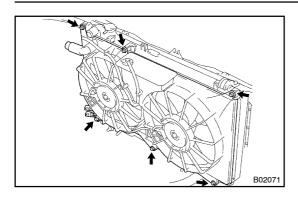

## INSTALLATION

- 1. INSTALL ELECTRIC COOLING FAN
- (a) Install the electric cooling fan with the 6 bolts.

Torque: 5.0 N·m (50 kgf·cm, 44 in.·lbf)

- (b) Connect these parts:
  - Upper radiator hose to radiator
  - ECU outlet duct to ECU box
  - Wire for electric cooling fan to clamp on electric cooling fan
  - 2 electric cooling fan connectors
  - Radiator reservoir hose to radiator
- 2. INSTALL AIR CLEANER AND AIR FLOW METER AS-SEMBLY
- 3. INSTALL AIR CLEANER INLET
- 4. FILL WITH ENGINE COOLANT
- 5. START ENGINE AND CHECK FOR COOLANT LEAKS