


## QUICK ASSEMBLY GUIDE

PAGE 1



The purpose of this guide is to assist you in correctly assembling your professional series electrotherapy cart. **PLEASE READ AND FOLLOW THE INSTRUCTIONS COMPLETELY BEFORE USING WITH A DEVICE.**

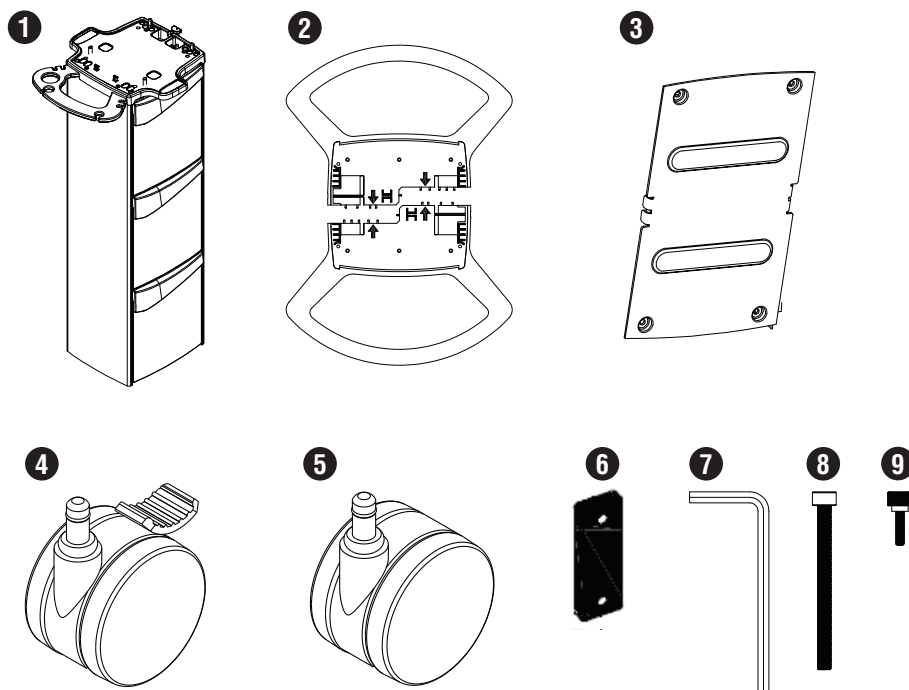

### PARTS LIST

- 1** (1) Cart body with 6 cabinet drawers and power cord
- 2** (2) Cart base pieces (left/right)
- 3** (1) Steel plate
- 4** (2) Front locking casters
- 5** (2) Back casters
- 6** (2) Anchor Pins
- 7** (1) Allen Key
- 8** (4) Hexagon Screws
- 9** (2) Thumb screws with cap

#### NOTE:

If you are missing any of the parts listed above, please contact your dealer immediately.

This cart was designed for use with TheraTouch EX4, CX4, and LX2 models, as well as Winner EVO and TheraSound devices.



## QUICK ASSEMBLY GUIDE

PAGE 2


**1**

Take the cart body (#1) and flip it upside down on a hard stable surface as shown. Clear handle should be near the floor.



**2**


Keeping the two cart base parts flat (#2), align the two sets of arrows and press together until they lock in place.

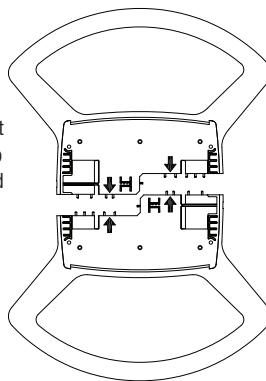

**3**


Flip the newly connected cart base over and turn it so the  are facing the same way.

**NOTE:** DO NOT attach the cart base to the cart body yet!

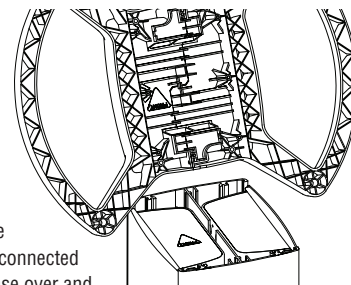


**4**

Feed the female end of the attached power cord through the hole located at the back of the cart base.

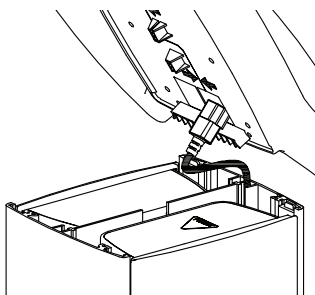


**5**

Feed the power cord through the cord grooves as shown; leaving 4.5" – 6" of slack hanging off the back of the cart. Snap the cart base to the cart body.

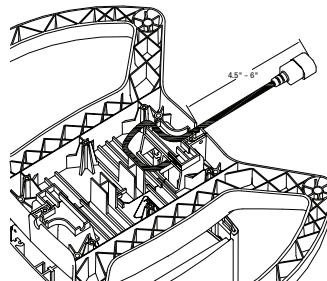


**6**

Place the steel plate (#3) over the bottom of the cart base; covering the power cord grooves.

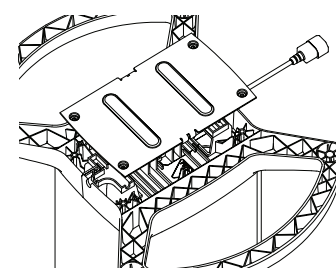


**7**

Use the provided Allen Key (#7) and tighten down the four hexagon screws (#8). Make sure they are snug. **DO NOT OVER TIGHTEN!**

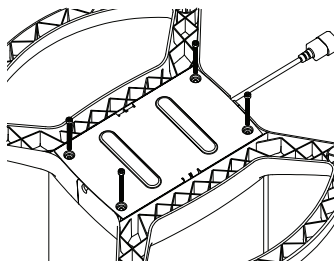

**8**

With the hexagon screws secure, insert the casters into the four holes as shown above. **NOTE:** Pay attention to the caster types!

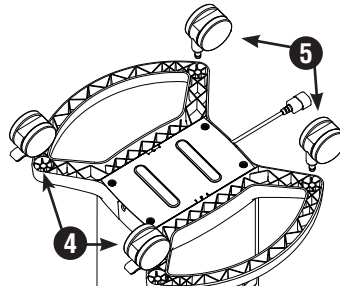

**9**

Carefully flip the cart over and stand it on its caster wheels. With the clear handle facing away from you, insert the two anchor pins (#6) into the holes as shown and secure them with the two thumb screws (#9).

