

FRAME REAR CROSSMEMBER (ASSY)




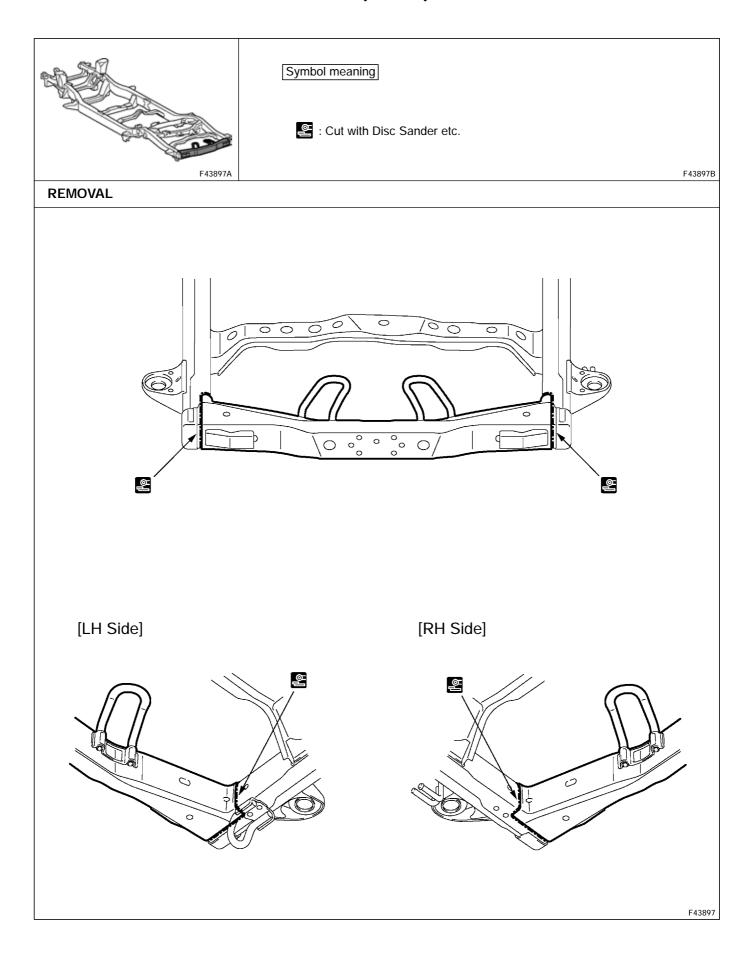




F43898B


INSTALLATION

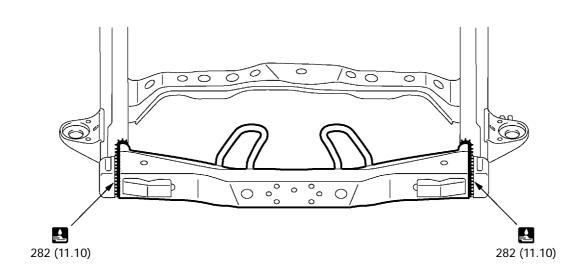

[LH Side]

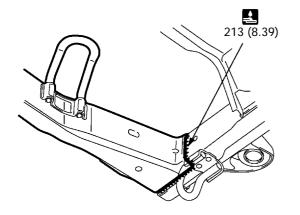

[RH Side]

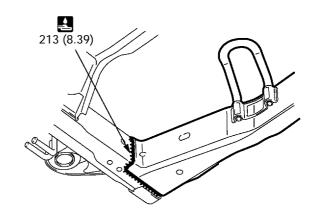


mm (in.)

F43898

INSTALLATION POINT

- 1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
- To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

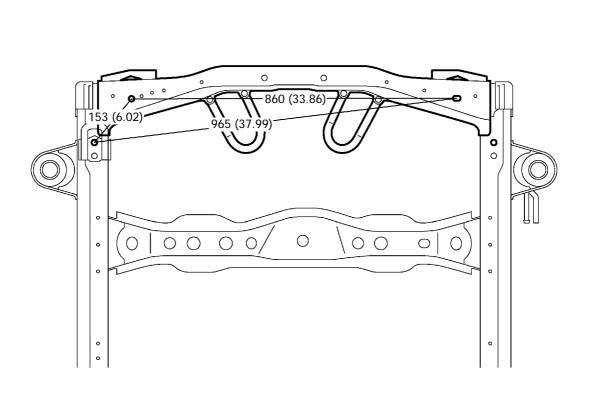

mm (in.)

F43356

INSTALLATION POINT

These values are reference values.