
## **CAB MOUNTING NO. 1 BRACKET (ASSY)**

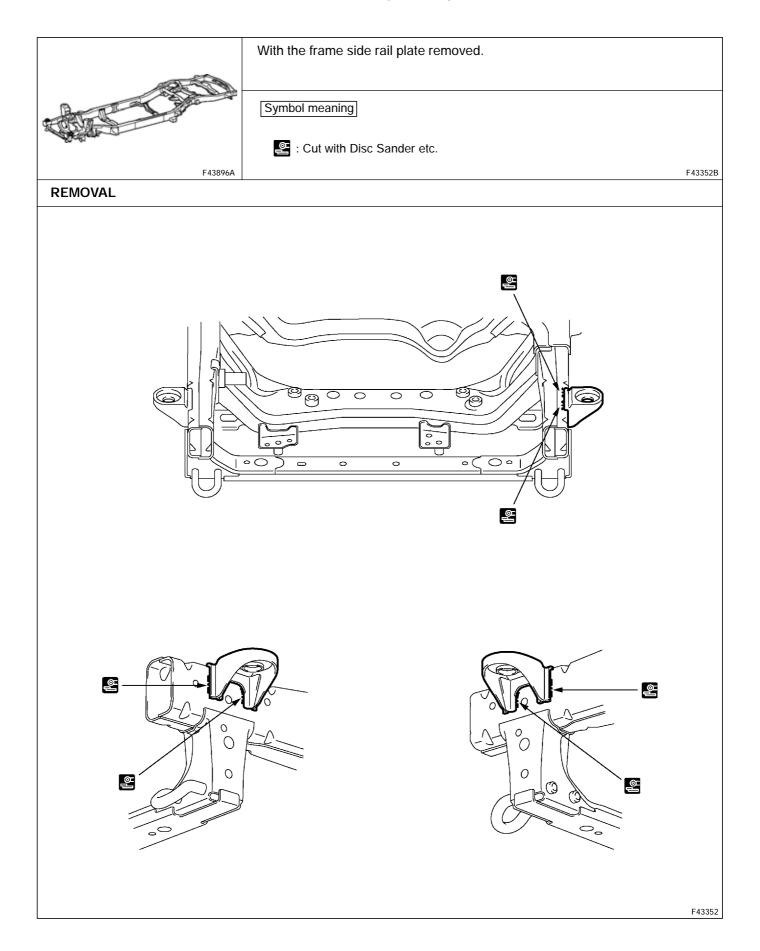



Symbol meaning


: Fillet Weld

F43353B

## **INSTALLATION**

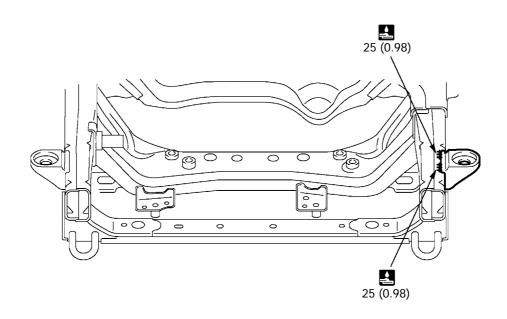

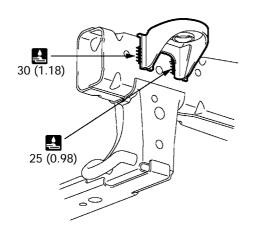

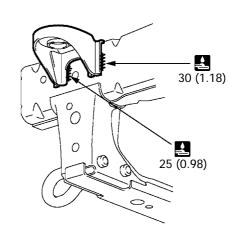

mm (in.)

F43353

## **INSTALLATION POINT**

- 1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
- Before installing the cab mounting No. 1 brackets, set the cab (upper body) on the vehicle frame and confirm the cab mounting No. 1 brackets' installation positions.
- 3 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.