
## NAME PLATE APPLICATION PROCEDURE


- 1 Heat the double-sided tape remaining on the body with an infrared lamp or equivalent. HINT:
  - Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.
- Wipe off the remaining double-sided tape using a clean cloth or equivalent. HINT:
  - If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.
- After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.

HINT:


The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.

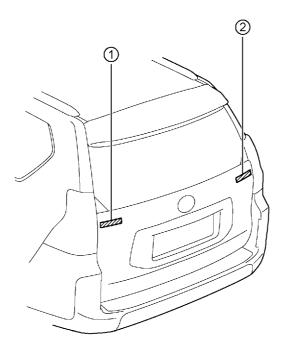

NO. 1 BACK DOOR NAME PLATE
Reference Values

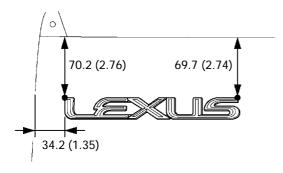

② NO. 2 BACK DOOR NAME PLATE Reference Values

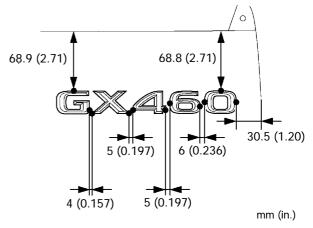

F43910