
## Tandy 1000 EX Internal 3.5" Floppy Conversion cable kit Instructions

NOTE: You will need to completely disassemble your 1000 EX to do this – the screws at the front of the case (below the keyboard) are shorter than the others so make sure you don't re-install the wrong screws or you'll damage your case.

I recommend you install the Ribbon Cable to the motherboard first, noting the red wire on the cable should be oriented as shown below. This will mean that the other end of Cable will match up with the notch on the Floppy Drive or Virtual Floppy Drive.

Make sure you select the correct drive letter for your Floppy Drive before installation. On most drives, DSO = A, DS1 = B — the Jumper needs to be on DSO (Drive A) for internal use with 1000 EX machines.

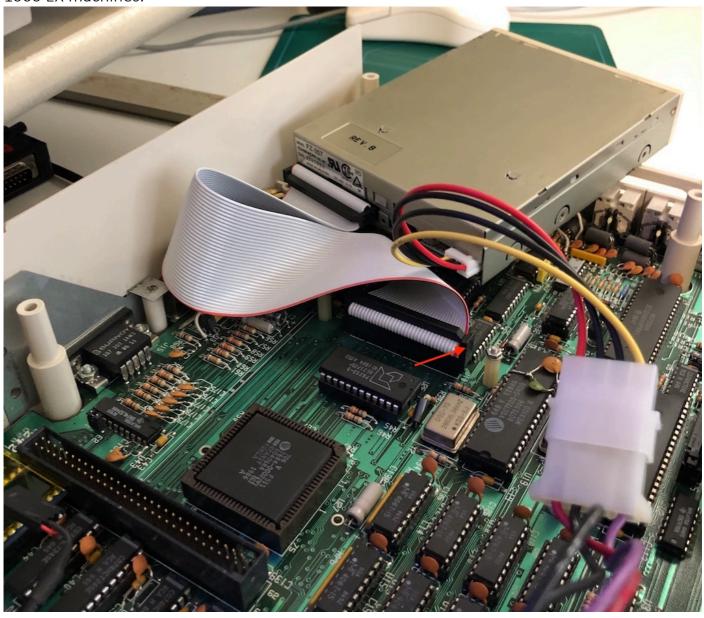

Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them. Regards dJOS