

ELEC 3300

Introduction to Embedded Systems

Topic 4

Embedded System Structure

Prof. Vinod Prasad

Course Overview

Assembler

Instruction Set Architecture

Memory

I/O System


Datapath & Control

Introduction to
Embedded Systems

More about
Embedded Systems

Basic Computer
Structure

MCU Main Board

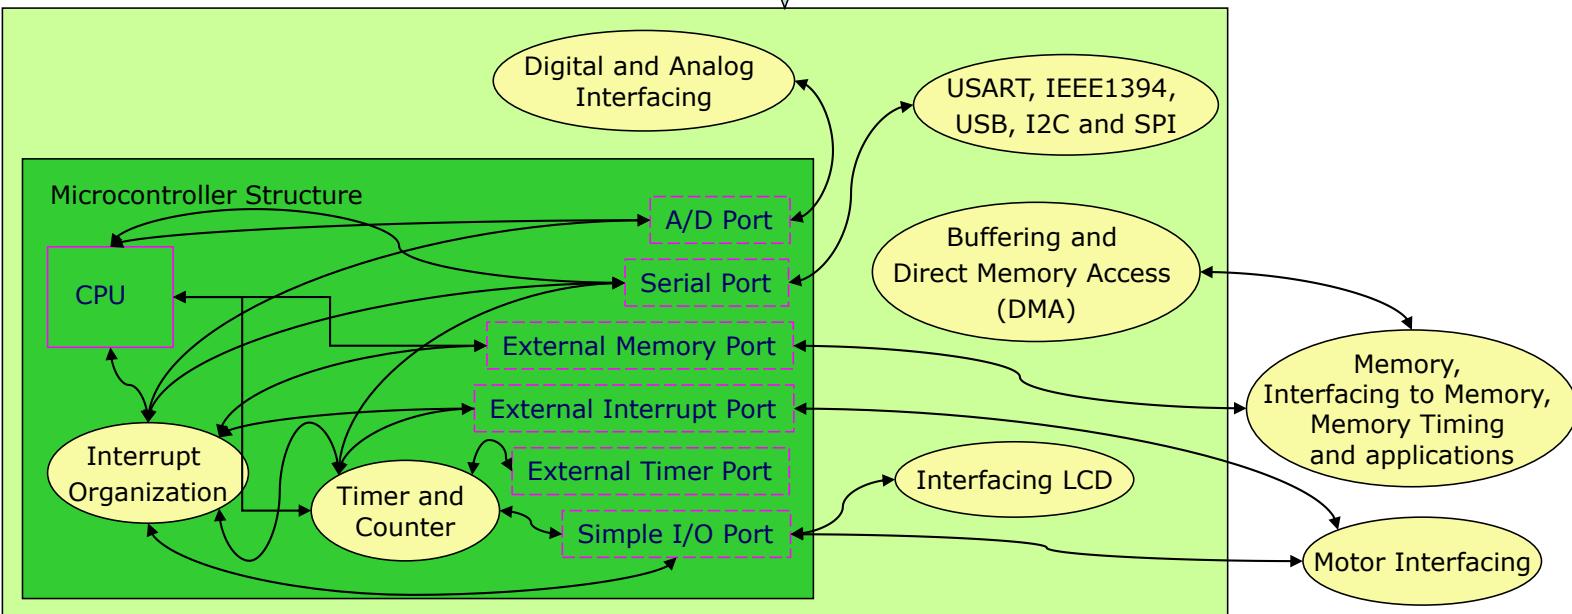

In this course, STM32 is used as a driving vehicle for delivering the concepts.

To be covered

In progress


Done

Expected Outcomes

- On successful completion of this topic, you will be able to
 - Summarize the features of ARM micro-controller
 - Describe the bus architecture
 - Understand the memory organization and its map
 - Introduce the Cyclic Redundancy Check (CRC) calculation unit
 - Illustrate examples of the pin definitions of several features
 - Configure a General Purpose I/O for input / output signal

Microcontroller Features

- Processor with memory & I/O parts integrated on the same chip
 - Program memory : ROM / EPROM / Flash
 - Data memory: RAM / SRAM / Flash

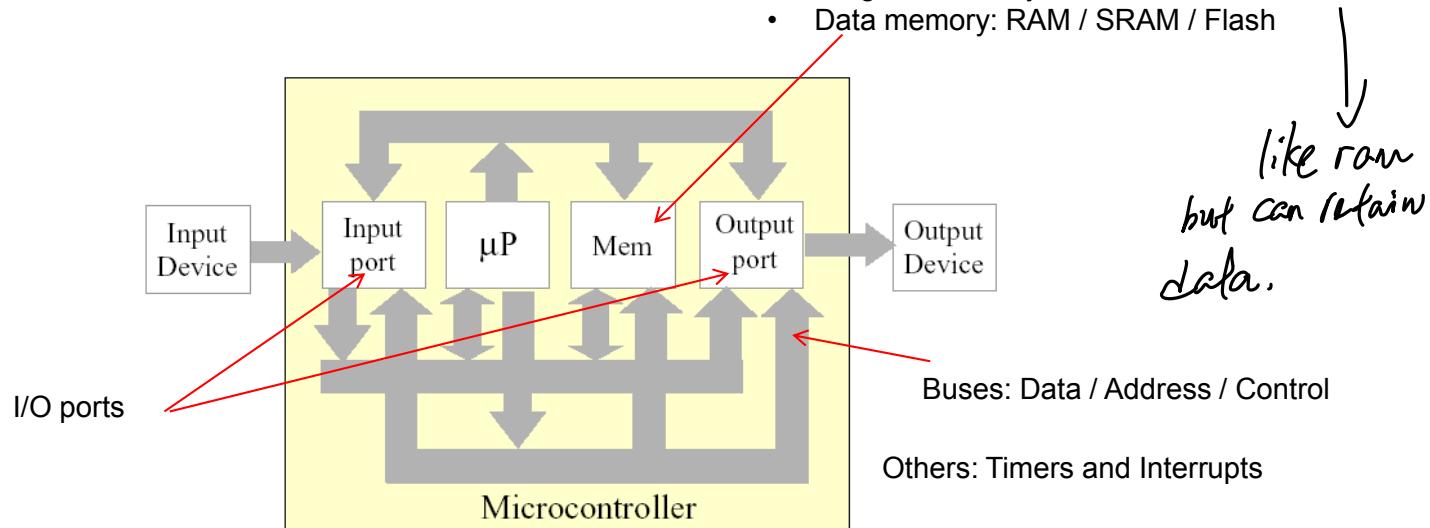

Simple computation model (i.e. fetch-execute cycle)

Any operating system support ?

You have to write your own device drivers to control the external devices


ARM Microcontroller: Features of STM32

- Usually, there are **3** general documents for your reference:
 - Data sheet: [STM32F103ZET6-STMicroelectronics-datasheet-7543760.pdf](#)
 - Provides summary of features, pin layouts, pin definitions, electrical characteristics, etc.
 - Reference Manual: [STM32_Reference_Manual.pdf](#)
 - Provides complete information on how to use the processor such as registration information of communication protocol, ADC, etc.
 - This could help in writing the codes for initialization and implementation.
 - Programming Manual: [STM32_Cortex_M3_Programming_Manual.pdf](#)
 - Provides information for application and system-level software, such as efficient processor core, system and memories, fast interrupt handling, etc.



ARM Microcontroller: Features of STM32

Where are they?

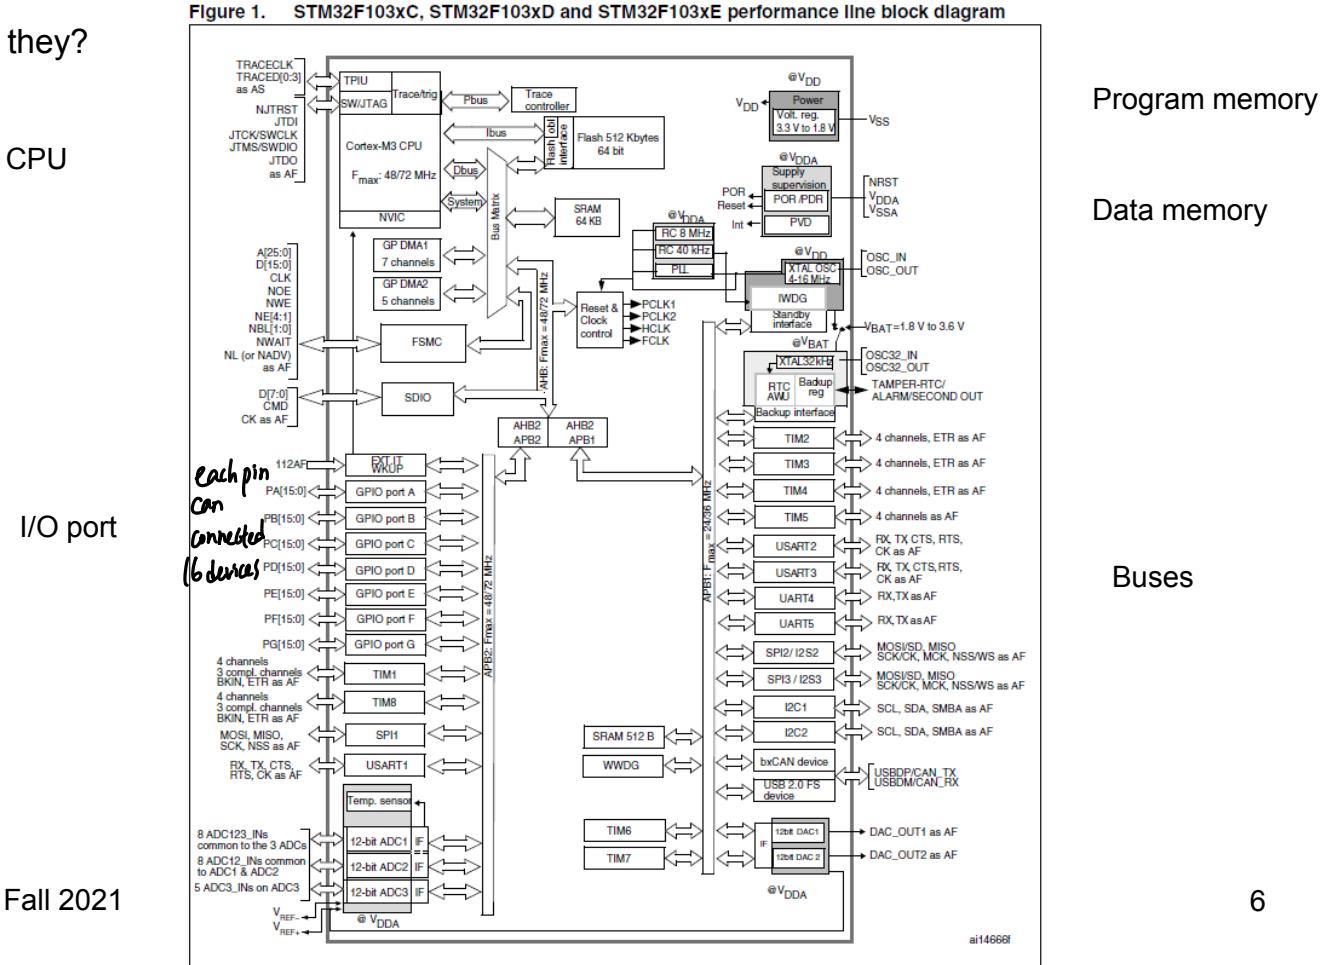

ARM Microcontroller

- The STM32 can support two configurations:
 - general devices (without Ethernet access)
 - connectivity line (with Ethernet access)
- You have to choose the configuration in the beginning.


depending on the project you choose either

↳ Ethernet is preferred if multiple devices are used connected in a lan architecture.

↳

ARM Microcontroller: Bus architecture

Figure 7. STM32F405/415 and STM32F407/417 system architecture

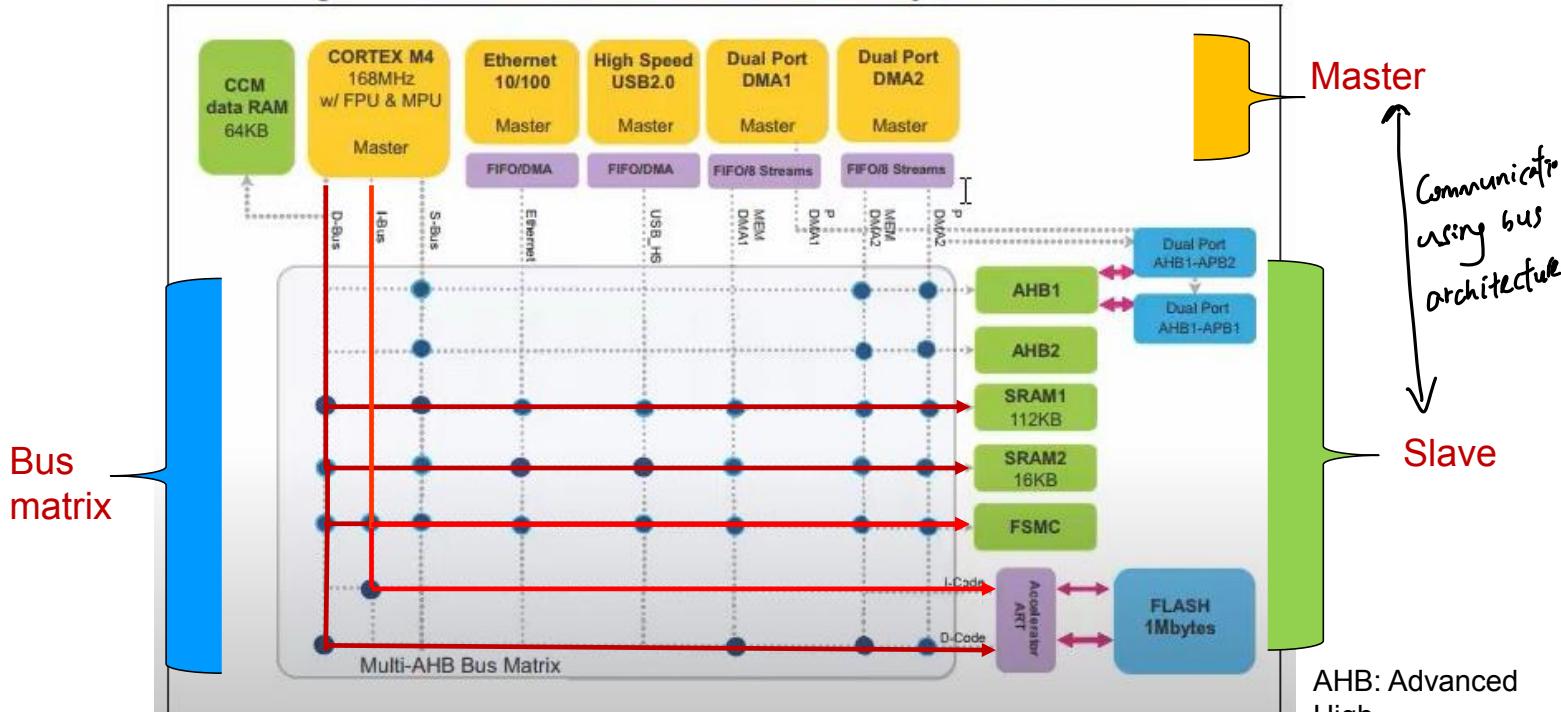

- Connected path for communication between Master and Slave

Communication between the processor (master) and peripherals (slave).

The **bus matrix** provides access from a master to a slave, enabling concurrent access and efficient operation even when several high-speed peripherals work simultaneously.

ARM Microcontroller: Memory Map

- Memory plays an important role in the micro-controller. It tells you where to store and read the instructions, data, status of information.
 - Reference: Figure 9 in datasheet *


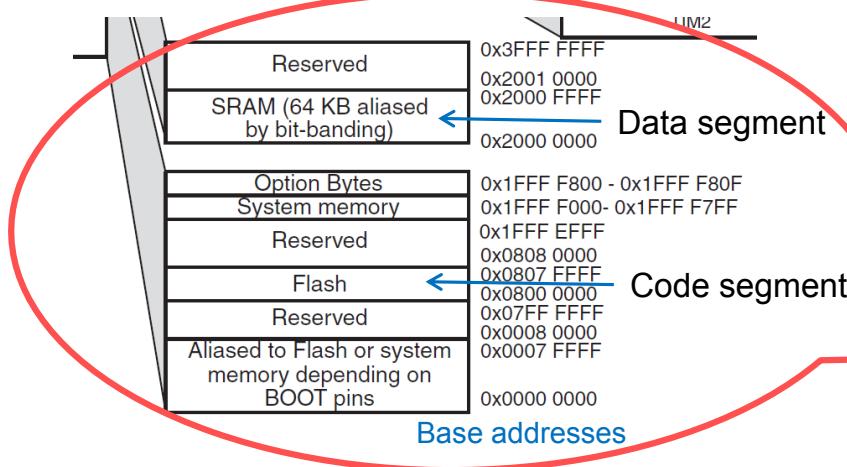


Figure 9. Memory map

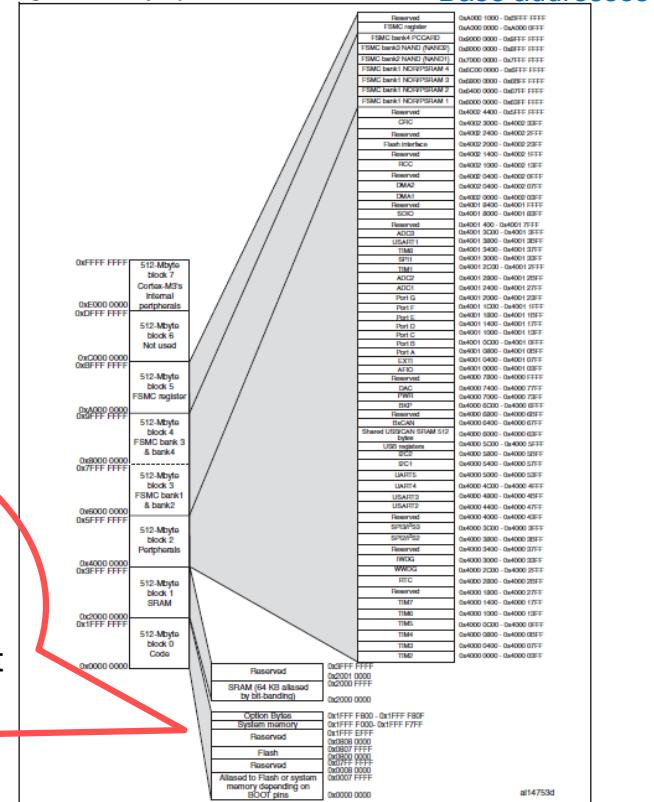

* : STM32F103ZET6-STMicroelectronics-datasheet-7543760.pdf

ARM Microcontroller: Memory Map

ADC → analog-digital converter.


- It also tells you where to registers for different features.
 - Reference: Figure 9 in datasheet *

Register for ADC1

Register for Port D

TIM1	0x4001 2C00 - 0x4001 2FFF
ADC2	0x4001 2800 - 0x4001 2BFF
ADC1	0x4001 2400 - 0x4001 27FF
Port G	0x4001 2000 - 0x4001 23FF
Port F	0x4001 1C00 - 0x4001 1FFF
Port E	0x4001 1800 - 0x4001 1BFF
Port D	0x4001 1400 - 0x4001 17FF
Port C	0x4001 1000 - 0x4001 13FF
Port B	0x4001 0C00 - 0x4001 0FFF
Port A	0x4001 0800 - 0x4001 0BFF
EXTI	0x4001 0400 - 0x4001 07FF

Base addresses

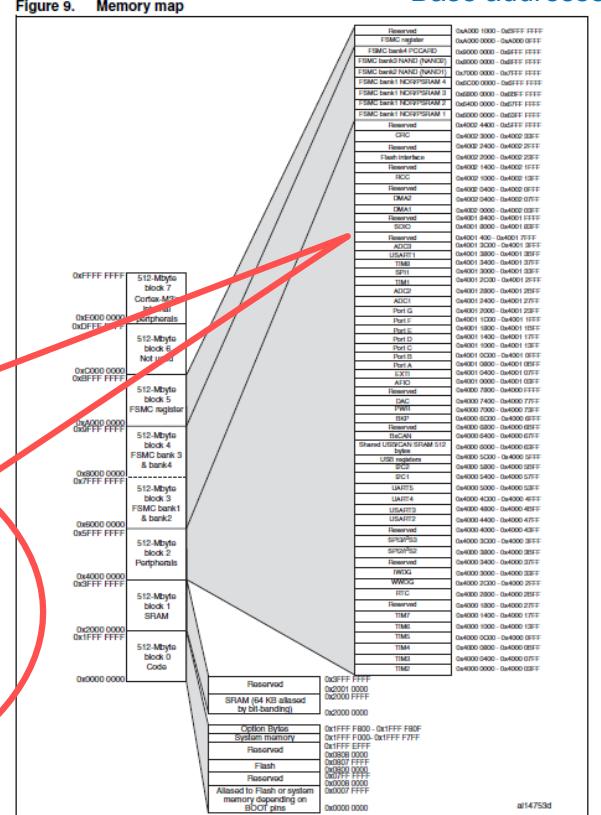

* : STM32F103ZET6-STMMicroelectronics-datasheet-7543760.pdf


ARM Microcontroller: CRC

- CRC (Cyclic Redundancy Check)
 - Error-detecting code to detect accidental changes to raw data.
 - Verify data transmission or storage integrity.
 - On retrieval, the calculation is repeated and, in the event the check values do not match, corrective action can be taken against data corruption.
 - CRC uses Generator Polynomial which is available on both sender and receiver side.
 - An example generator polynomial is of the **form like $x^3 + x + 1$** . This generator polynomial represents key 1011.
 - Another example is $x^2 + 1$ that represents key?

ARM Microcontroller: CRC Calculation Unit

- Gets a CRC code from a 32-bit data word and a fixed generator polynomial.


Figure 3. CRC calculation unit block diagram #

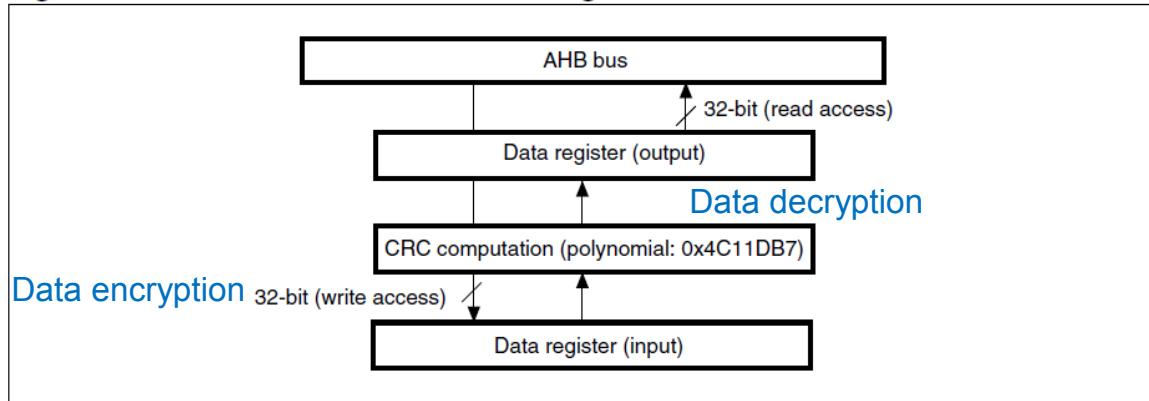

Basic CRC Algorithm:

1. Start with an initial CRC value (example: 0xFF).
2. Then XOR it with your data.
3. If the result of step 2 has MSB = 0, then simply left shift that number by 1.
4. If the result from step 2 has MSB = 1, then left shift by 1 and also XOR it with a chosen polynomial.
5. The final value is check sum or CRC value.

ARM Microcontroller: CRC Illustration

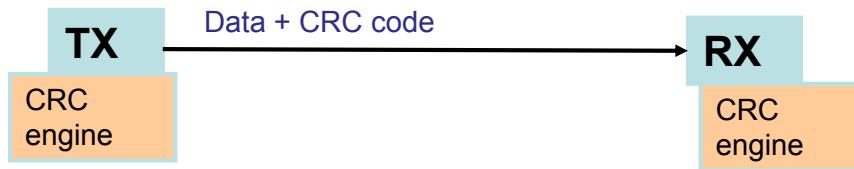


- The Transmitter (TX) will run the data it wants to send through a CRC algorithm.
- It will then have a CRC code that will be unique to that data. So TX sends its data along with the CRC code to the RX.
- Now RX receives the data and CRC code.
- RX will run the data through the same CRC algorithm.
- RX now will compare the CRC it received with the one it calculated and if they match then the data is not corrupted.
- If the CRC codes do not match then something is corrupted.

About High density pin definitions

ARM Microcontroller: High density pin definitions


- Pin assignment from Data Sheets
 - Reference: Table 5 in datasheet *
 - **General Purpose I/O**

Recall the overview pictures

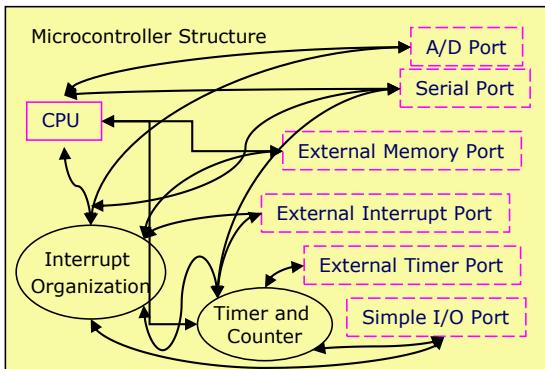

GPIO	Pin numbers
PA0- PA15	23,24,25, 26, 29, 30, 31, 32, 67,68, 69, 70, 71,72, 76, 77
PB0- PB15	
PC0- PC15	15,16,17,18, 33,34,63,64, 65,66,78,79, 80, 7, 8, 9
PD0- PD15	
PE0- PE15	

STM32F103VE, LQFP-100

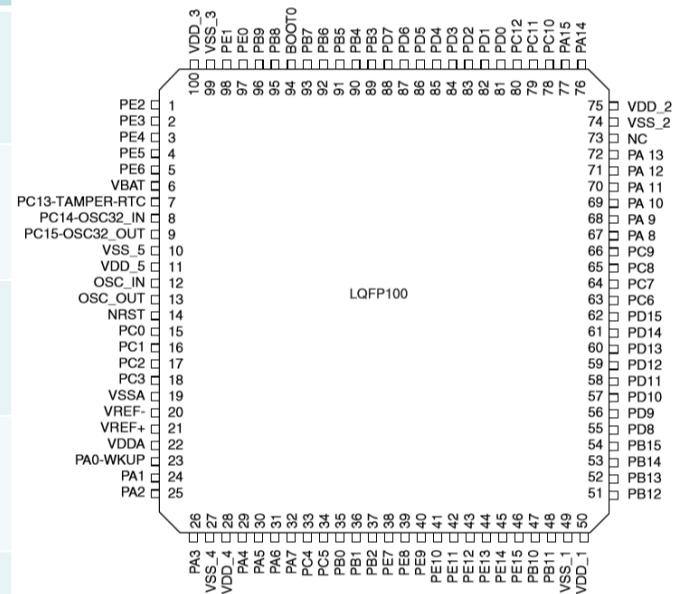

* : STM32F103ZET6-STMMicroelectronics-datasheet-7543760.pdf

ARM Microcontroller: High density pin definitions

- In general, all the features are not executed simultaneously.
- This allows the sharing of pin definition for several features. (multiple roles in same pin)
- Analogy:



Table 5. High-density STM32F103xx pin definitions (continued)

Pins							Pin name	Type ⁽¹⁾	I/O Level ⁽²⁾	Main function ⁽³⁾ (after reset)		Alternate functions ⁽⁴⁾	
BGA144	BGA100	WL CSP64	LQFP64	LQFP100	LQFP144							Default	Remap
K1	H1	-	-	20	31	V _{REF-}	S			V _{REF-}			
L1	J1	F7 (7)	-	21	32	V _{REF+}	S			V _{REF+}			
M1	K1	G8	13	22	33	V _{DDA}	S			V _{DDA}			
J2							PA0-WKUP	I/O		PA0	WKUP/USART2_CTS ⁽⁸⁾ ADC123_IN0 TIM2_CH1_ETR TIM5_CH1/TIM8_ETR		
K2	H2	E6	15	24	35		PA1	I/O		PA1	USART2_RTS ⁽⁸⁾ ADC123_IN1/ TIM5_CH2/TIM2_CH2 ⁽⁸⁾		

GPIO (default)
Wake up
USART
ADC
Timer

ARM Microcontroller: High density pin definitions

- Example: We have 3 ADCs, and they may share some pins.

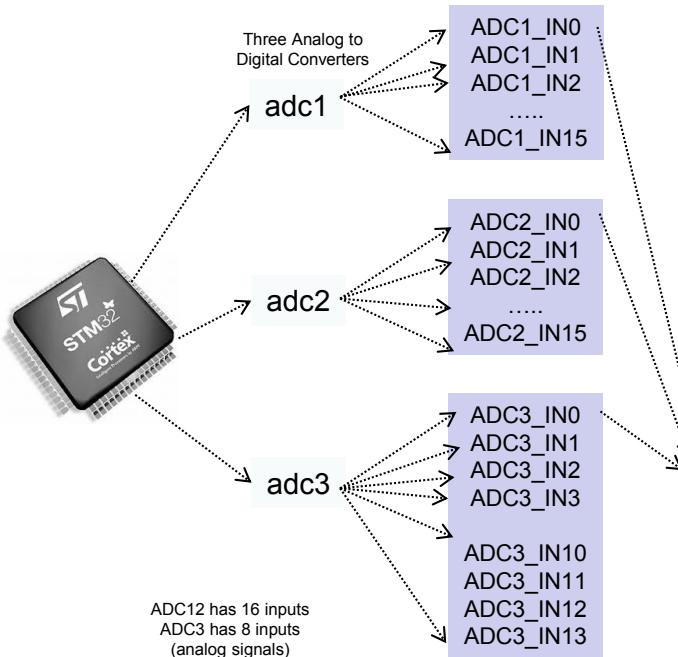


Table 5. High-density STM32F103xx pin definitions (continued)

BGA144	Pins					Pin name	Type ⁽¹⁾	I/O Level ⁽²⁾	Main function ⁽³⁾ (after reset)	Alternate functions ⁽⁴⁾	
	BGA100	WL CSP64	LQFP64	LQFP100	LQFP144					Default	Remap
K1	H1	-	-	20	31	V _{REF-}	S		V _{REF-}		
L1	J1	F7 (7)	-	21	32	V _{REF+}	S		V _{REF+}		
M1	K1	G8	13	22	33	V _{DDA}	S		V _{DDA}		
J2	G2	F6	14	23	34	PA0-WKUP	I/O		PA0	WKUP/USART2_CTS ⁽⁸⁾ ADC123_IN0 TIM2_CH1_ETR TIM5_CH1/TIM8_ETR	
K2	H2	E6	15	24	35	PA1	I/O		PA1	USART2_RTS ⁽⁸⁾ ADC123_IN1/ TIM5_CH2/TIM2_CH2 ⁽⁸⁾	

Notation: ADC123_IN0

CubeMX version 5.20

A graphical tool that allows a very easy configuration of STM32 microprocessors.

STM model: STM32F103VE, LQFP100

STM32CubeMX Untitled: STM32F103VEtx

STM32CubeMX

File Window Help

Home > STM32F103VEtx > Untitled - Pinout & Configuration >

GENERATE CODE

Pinout & Configuration Clock Configuration Project Manager Tools

ADC2 Mode and Configuration

Mode

IN0
IN1
IN2
IN3
IN4
IN5
IN6
IN7
IN8
IN9
IN10

Configuration

Reset Configuration

• NVIC Settings ● GPIO Settings

● Parameter Settings ● User Constants

Configure the below parameters :

Search (Ctrl+F)

ADCs_Common_Settings

Mode: Independent mode

ADC_Settings

ADC2_IND

PA0 PA1 PA2 PA3 PA4 PA5 PA6 PA7 PA8 PA9 PA10 PA11 PA12 PA13 PA14 PA15 PA16 PA17 PA18 PA19 PA20 PA21 PA22 PA23 PA24 PA25 PA26 PA27 PA28 PA29 PA30 PA31 PA32 PA33 PA34 PA35 PA36 PA37 PA38 PA39 PA40 PA41 PA42 PA43 PA44 PA45 PA46 PA47 PA48 PA49 PA50 PA51 PA52 PA53 PA54 PA55 PA56 PA57 PA58 PA59 PA60 PA61 PA62 PA63 PA64 PA65 PA66 PA67 PA68 PA69 PA70 PA71 PA72 PA73 PA74

Pinout view System view

STM32F103VEtx
LQFP100

MCUs Selection Output

Series	Lines	Mcu	Package	Required Peripherals
STM32F1	STM32F103	STM32F103VEHx	LFBGA100	None
STM32F1	STM32F103	STM32F103VETx	LQFP100	None

In class activity: Design architecture of an embedded system



In-class activities

For Android devices, search **HKUST iLearn** at Play Store.



HKUST iLearn

The Hong Kong University of Science and..



For iOS devices, search **HKUST iLearn** at App Store.



HKUST iLearn

The Hong Kong University of Sc...

GET

Topic 4 – Question 1

Now, we have got a designed gadget.




How many switches are there?



Design architecture of an embedded system

- Let's go through 6 components in the design process

	Description	Choices in this course
Products	Abstract idea of project (Define the functionality of the system)	Many
	Data format / representation	Many
	Programming Language	C-language
	Communication Protocol	Many
	Physical connection (Pins assignment)	Many
	Hardware devices (Microcontroller, Peripherals)	Microcontroller: STM32 ARM Platform Peripherals: 7 switches, LCD, Buzzer, ...
	Components	

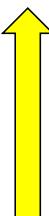

In-class activities

For Android devices, search **HKUST iLearn** at Play Store.



HKUST iLearn

The Hong Kong University of Science and..



For iOS devices, search **HKUST iLearn** at App Store.




HKUST iLearn

The Hong Kong University of Sc...

GET

Topic 4 – Questions 2-6

More about connecting a switch to MCU board

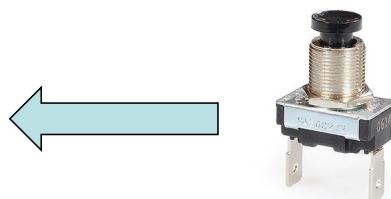

Description
Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

Physical Devices	Pin Assignment	Signal Type	Initialization (Configuration)	Signals at Physical connection	Data format
Micro Switch	General Purpose Input & Output	Input / Output	General Purpose IO setting	On/Off	<i>Implementation</i>

After assigning a pin for the switch,

Initialization

Implementation

Programming Language

Example: Connect a switch to MCU board

Description

Abstract idea of project
(Define the functionality of the system)

Data format / representation




Programming Language

Communication Protocol

Physical connection (Pins assignment)

Hardware devices
(Microcontroller, Peripherals)

Press

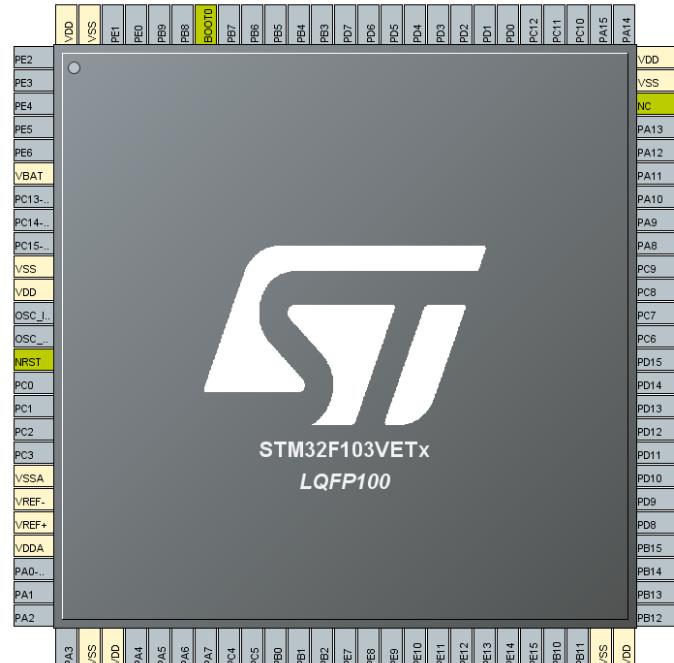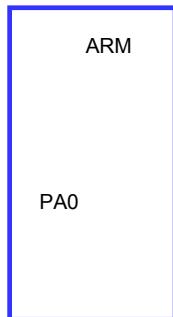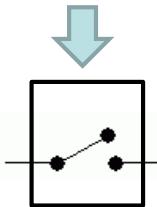


Example: Connect a switch to MCU board

Description
Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

What is the signal format of the digital signal?

Assume that PA0 is an open circuit.

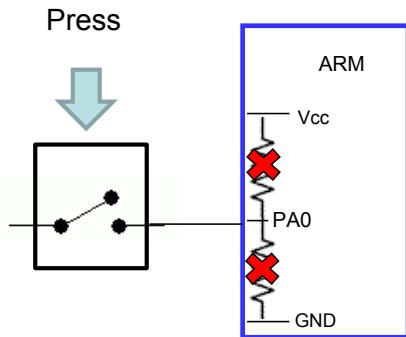


Status	Voltage at PA0	Digital Signal
Pressed (ON)		
Released (OFF)		

Example: Connect a switch to MCU board

Description
Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

Assume that PA0 is an open circuit.

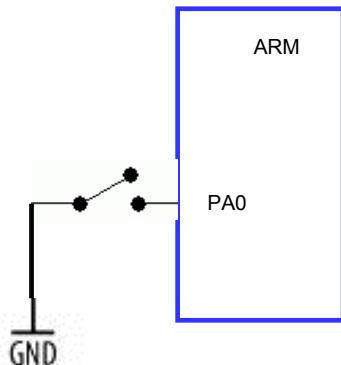


Status	Voltage at PA0	Digital Signal
Pressed (ON)		
Released (OFF)		

Example: Connect a switch to MCU board

Description
Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

Assume that PA0 is an open circuit.

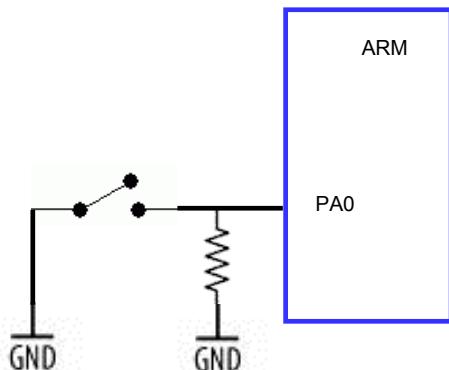

Status	Voltage at PA0	Digital Signal
Pressed (ON)		
Released (OFF)		

Example: Connect a switch to MCU board

Description

Abstract idea of project
(Define the functionality of the system)

Data format / representation

Programming Language


Communication Protocol

Physical connection (Pins assignment)

Hardware devices
(Microcontroller, Peripherals)

Assume that PA0 is an open circuit.

Pull-up resistor

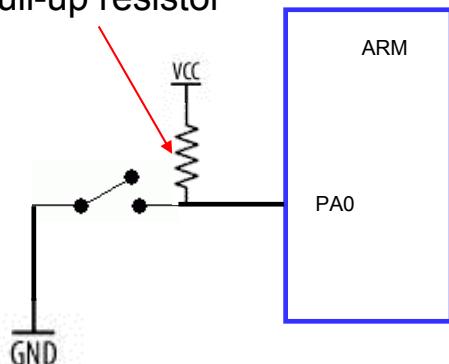


Status	Voltage at PA0	Digital Signal
Pressed (ON)		
Released (OFF)		

Example: Connect a switch to MCU board

Description
Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

Assume that PA0 is an open circuit.

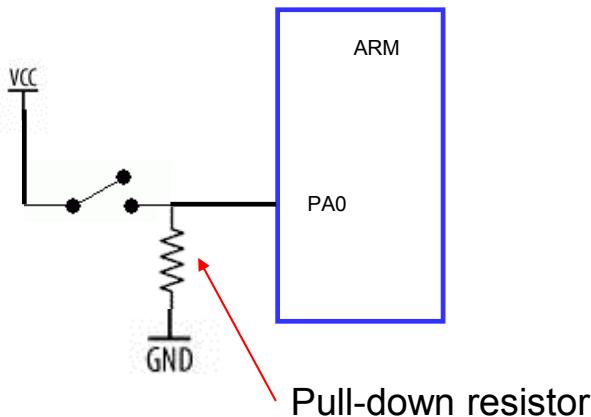

Status	Voltage at PA0	Digital Signal
Pressed (ON)		
Released (OFF)		

In-class activities

For Android devices, search **HKUST iLearn** at Play Store.



HKUST iLearn

The Hong Kong University of Science and..



For iOS devices, search **HKUST iLearn** at App Store.



HKUST iLearn

The Hong Kong University of Sc...


GET

Topic 4 – Question 7



In-class activity – Question 9

Assume that PA0 is an open circuit.


Circuit A

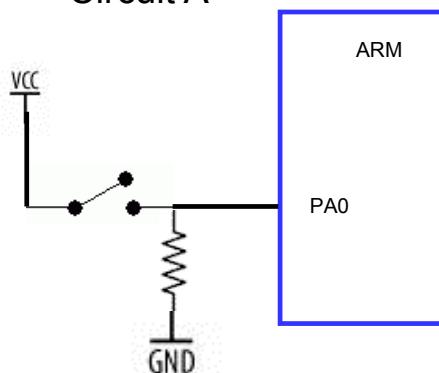

Circuit B

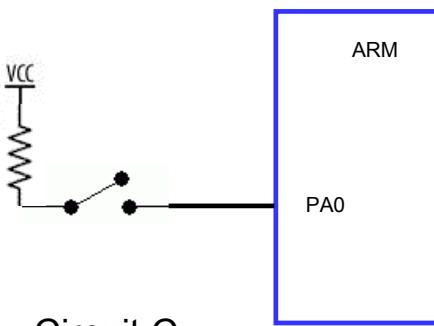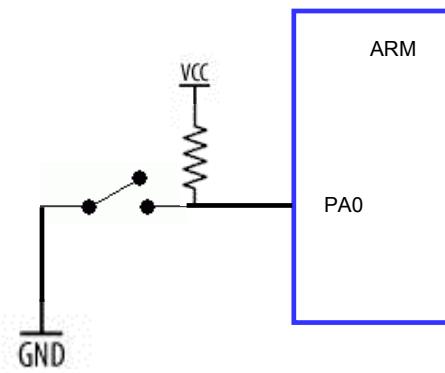

Circuit C

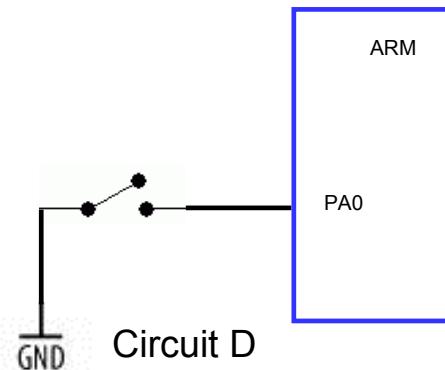


Circuit D

Example: General-purpose I/O (GPIO)


Figure 13. Basic structure of a standard I/O port bit #

We will use
these registers

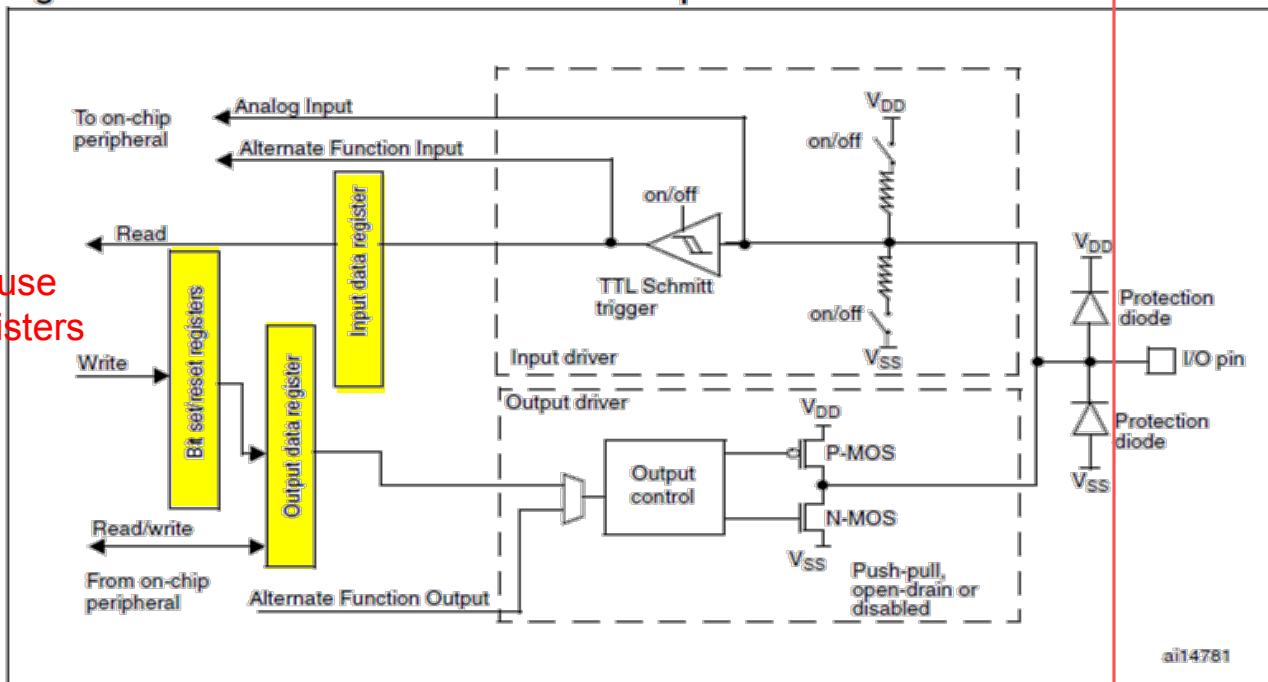


: STM32_Reference_Manual.pdf

GPIO – Push-Pull Configuration

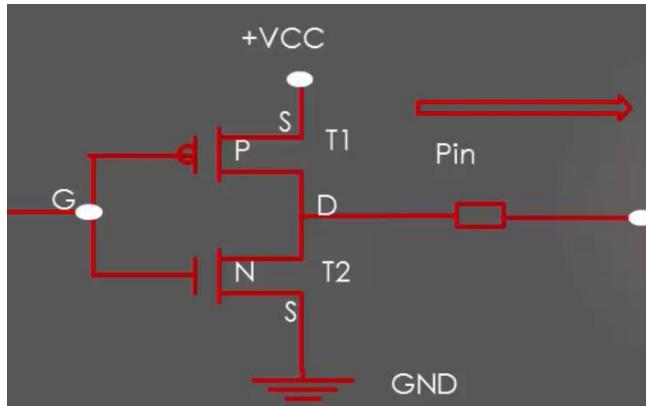

- When you enable GPIO port by default, its pin will be in input mode.
- If you set any pin as the output mode, then by default it will be in push-pull configuration.
- Push-pull means: Output will be pulled actively between low and high by using two transistors.
- The top transistor will be ON when the output has to be driven high.
- The bottom transistor will turn ON when the output has to go low.


GPIO – Open Drain Configuration

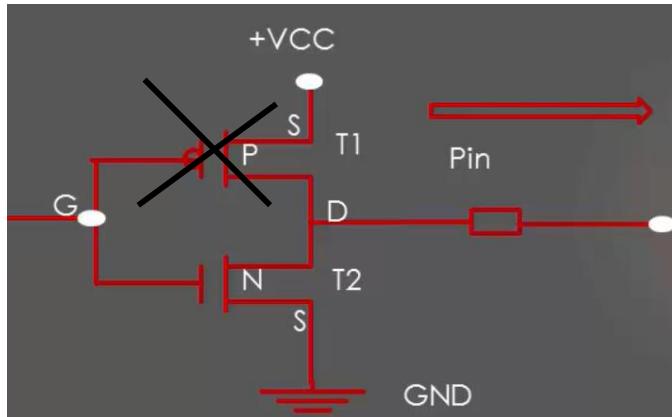

- Output mode with Open drain means the top P-MOS transistor (T1) is deactivated.
- When T2 is ON, output pin will be pulled to ground (0 V).
- When T2 is OFF, drain D is floating, output pin is floating → open drain.

- Open drain configuration can only pull down the pin, but cannot pull it up.
- Hence there are only two states – either GROUND or FLOAT → Useless.
- Open drain can be made useful by activating pull up using pull up resistor internal/external.

GPIO – Open Drain Configuration with Pull-up Resistor

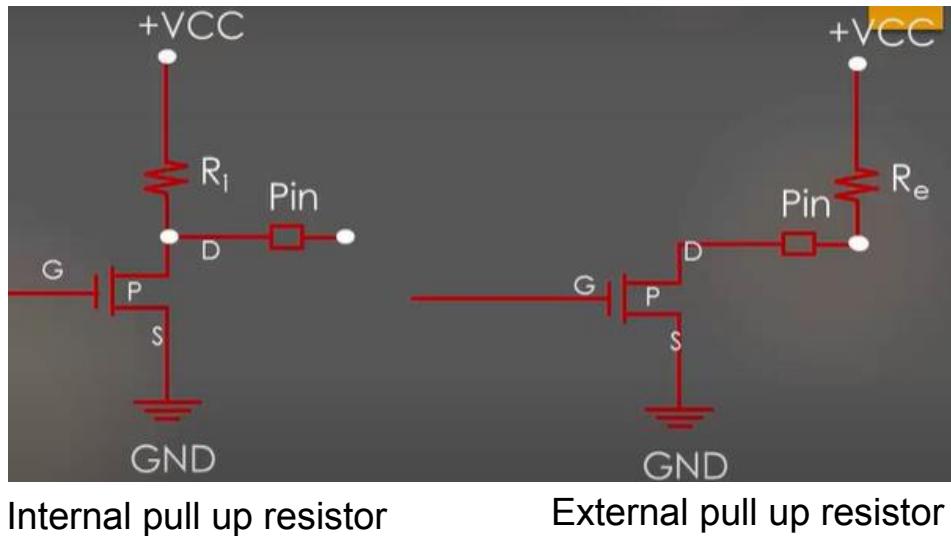

You have to do the GPIO configuration for activating the internal pull up resistor.

Example: Connect a switch to MCU board

- All GPIO pins have an internal weak pull-up and weak pull-down which can be activated or not when configured as input.



Table 20. Port bit configuration table [#]


Configuration mode		CNF1	CNF0	MODE1	MODE0	PxODR register
General purpose output	Push-pull	0	0	see Table 21	01	0 or 1
	Open-drain		1		10	0 or 1
Alternate Function output	Push-pull	1	0		11	don't care
	Open-drain		1			don't care
Input	Analog	0	0	00		don't care
	Input floating		1			don't care
	Input pull-down	1	0			0
	Input pull-up					1

Initialization

: STM32_Reference_Manual.pdf

Example: General-purpose I/O (GPIO)

Figure 13. Basic structure of a standard I/O port bit

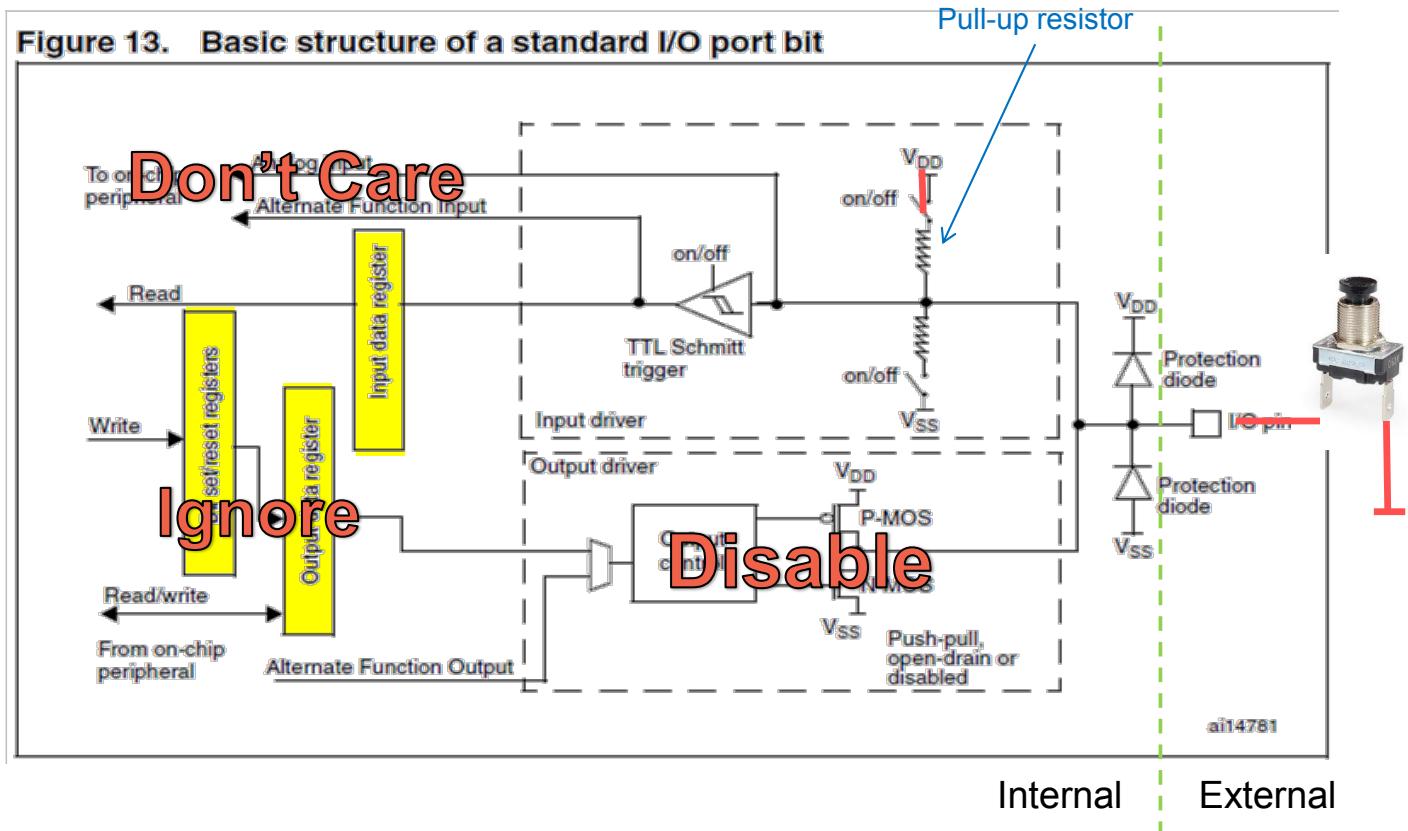

Example: Connect a switch to MCU board

- In the programming, we have two steps

- Initialization for digital input

- Set CNF1 = 1, CNF0 = 0, Mode1/0 = 00
- Set PxODR = 0 or 1 (depends on the connection of switch)

- Implementation

- Write a routine for reading signal (Polling or Interrupt Driven)

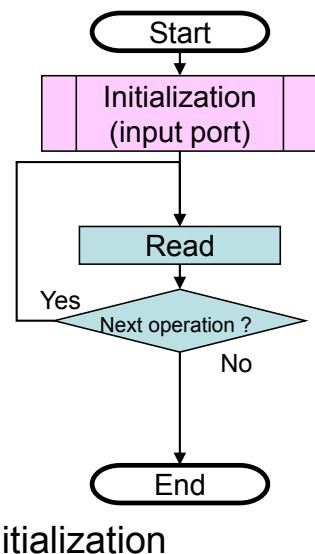
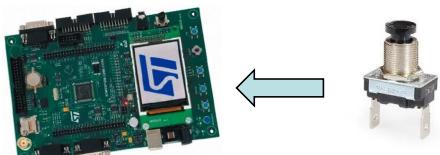




Table 20. Port bit configuration table #

Configuration mode		CNF1	CNF0	MODE1	MODE0	PxODR register
General purpose output	Push-pull	0	0	see Table 21	01 10 11 00	0 or 1
	Open-drain		1			0 or 1
Alternate Function output	Push-pull	1	0			don't care
	Open-drain		1			don't care
Input	Analog	0	0			don't care
	Input floating		1			don't care
	Input pull-down	1	0			0
	Input pull-up		1			1

: STM32_Reference_Manual.pdf

Example: Connect a switch to MCU board

- Implementation
 - Write a routine for reading signal (Polling or Interrupt Driven)
 - Either polling or interrupt driven I/O, we can implement following flow charts.

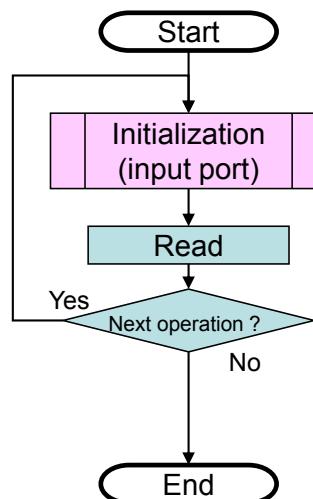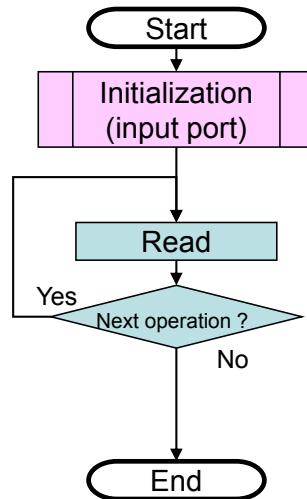


Description

Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

Note:
The data is stored in
Data Input Register.

Example: Connect a LED to MCU board

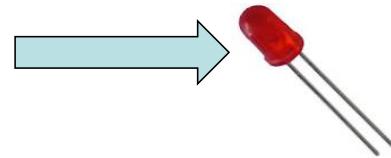

Description
Abstract idea of project (Define the functionality of the system)
Data format / representation
Programming Language
Communication Protocol
Physical connection (Pins assignment)
Hardware devices (Microcontroller, Peripherals)

Physical Devices	Pin Assignment	Signal Type	Initialization (Configuration)	Signals at Physical connection
LED	General Purpose Input & Output	Input / Output	General Purpose IO setting	On/Off

Diagram annotations:

- A red arrow points from the text "Data format" to the "Initialization (Configuration)" column.
- Two red arrows point from the text "Implementation" to the "Signals at Physical connection" column.
- A bracket at the bottom is labeled "Initialization" and "Implementation" with a line pointing to the "Programming Language" row.
- A bracket at the bottom is labeled "Programming Language" with a line pointing to the "Implementation" label.

Example: Connect a LED to MCU board

- When configured as output, the value written to the Output Data register (GPIOx_ODR) is output on the I/O pin.
- It is possible to use the output driver in Push-Pull mode or Open-Drain mode (only the N-MOS is activated when outputting 0).

#

Table 20. Port bit configuration table

Configuration mode		CNF1	CNF0	MODE1	MODE0	PxODR register
General purpose output	Push-pull	0	0	01	10	0 or 1
	Open-drain		1			0 or 1
Alternate Function output	Push-pull	1	0	11	see Table 21	don't care
	Open-drain		1			don't care
Input	Analog	0	0	00	see Table 21	don't care
	Input floating		1			don't care
	Input pull-down	1	0			0
	Input pull-up		1			1


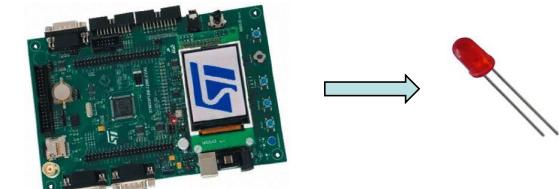


Table 21. Output MODE bits

MODE[1:0]	Meaning
00	Reserved
01	Max. output speed 10 MHz
10	Max. output speed 2 MHz
11	Max. output speed 50 MHz

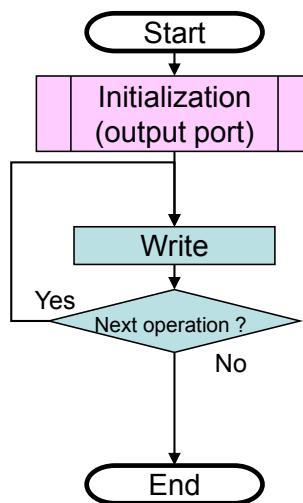

In-class activities

For Android devices, search **HKUST iLearn** at Play Store.



HKUST iLearn

The Hong Kong University of Science and..



For iOS devices, search **HKUST iLearn** at App Store.



HKUST iLearn


The Hong Kong University of Sc...

GET

Topic 4 – Questions 8, 9



Example: Bi-directional I/O port

- How can we initialize an general purpose I/O pin as a bi-directional one?
- If yes, how does the flow chart look like?

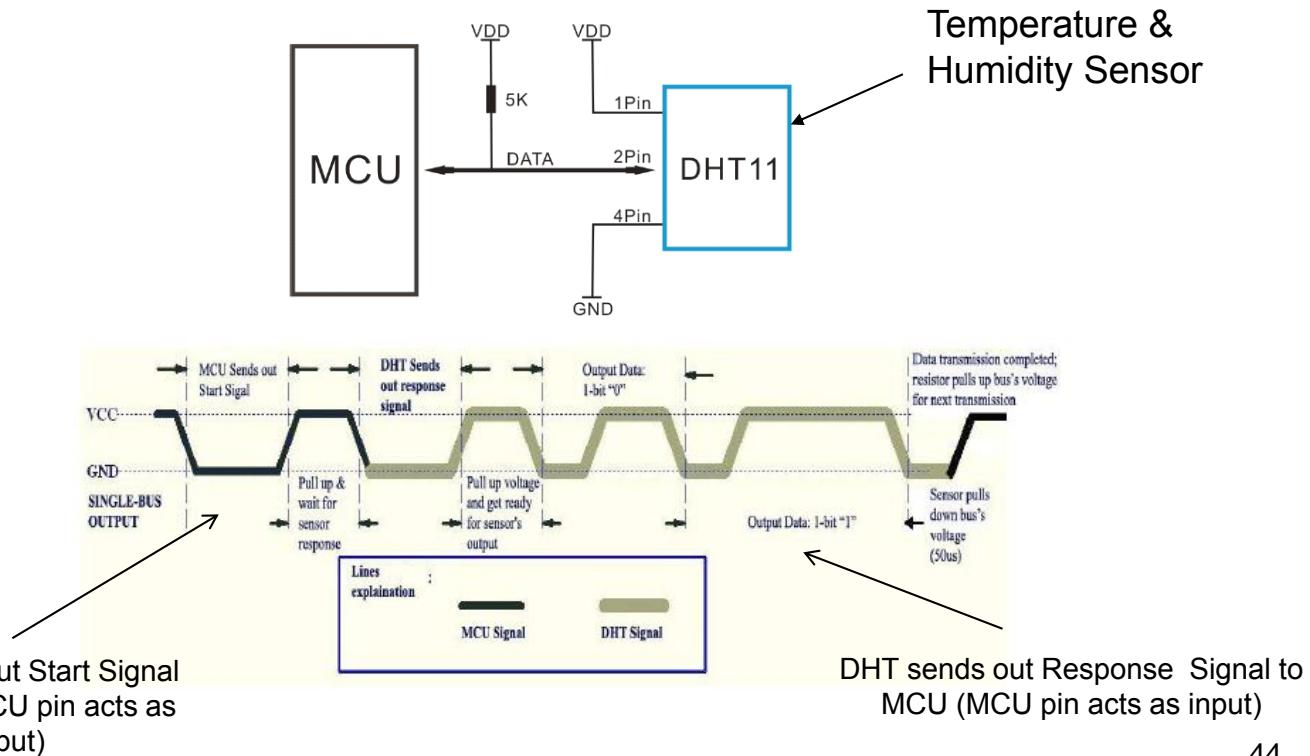

Example: Bi-directional I/O port

- How can we initialize an general purpose I/O pin as a bi-directional one?
- If yes, how does the flow chart look like?

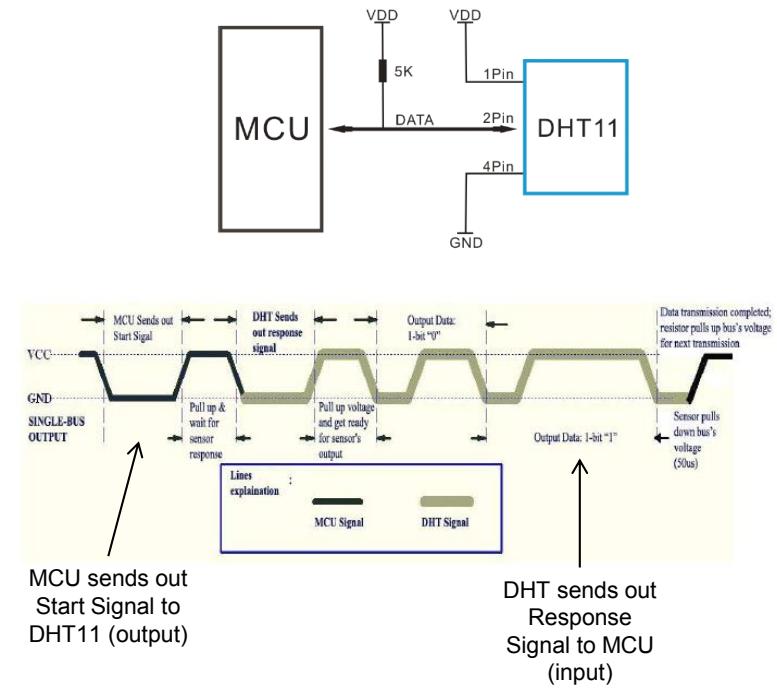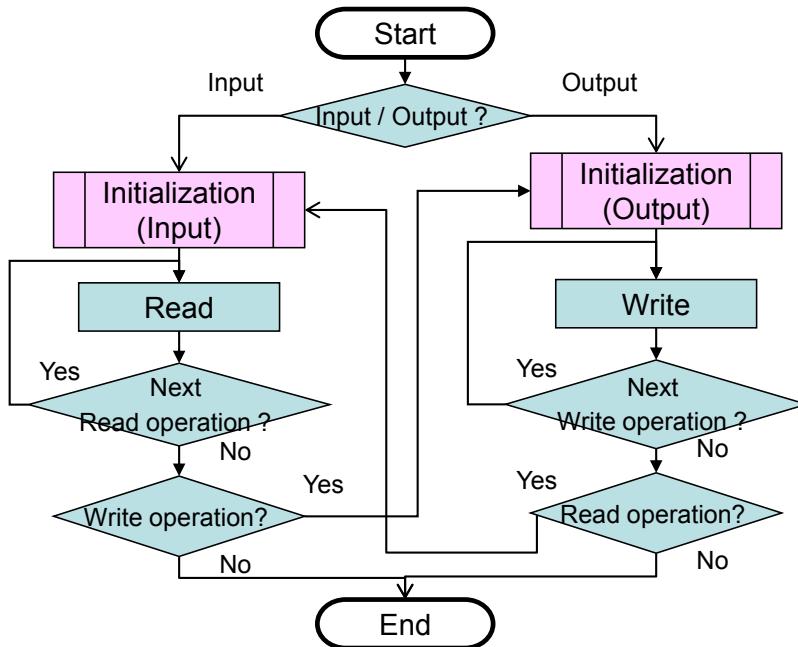

Reflection (self-evaluation)

- Do you
 - Describe the features of ARM micro-controller ?
 - Illustrate other examples of the pin definitions of multiple features?
 - Describe the bus architecture?
 - Understand the memory organization and its map?
 - Introduce the CRC calculation unit?
 - Configure General Purpose I/Os for reading 3 digital input signals?

Course Overview

Assembler

Instruction Set Architecture

Memory

I/O System


Datapath & Control

Introduction to
Embedded Systems

More about
Embedded Systems

Basic Computer
Structure

MCU Main Board

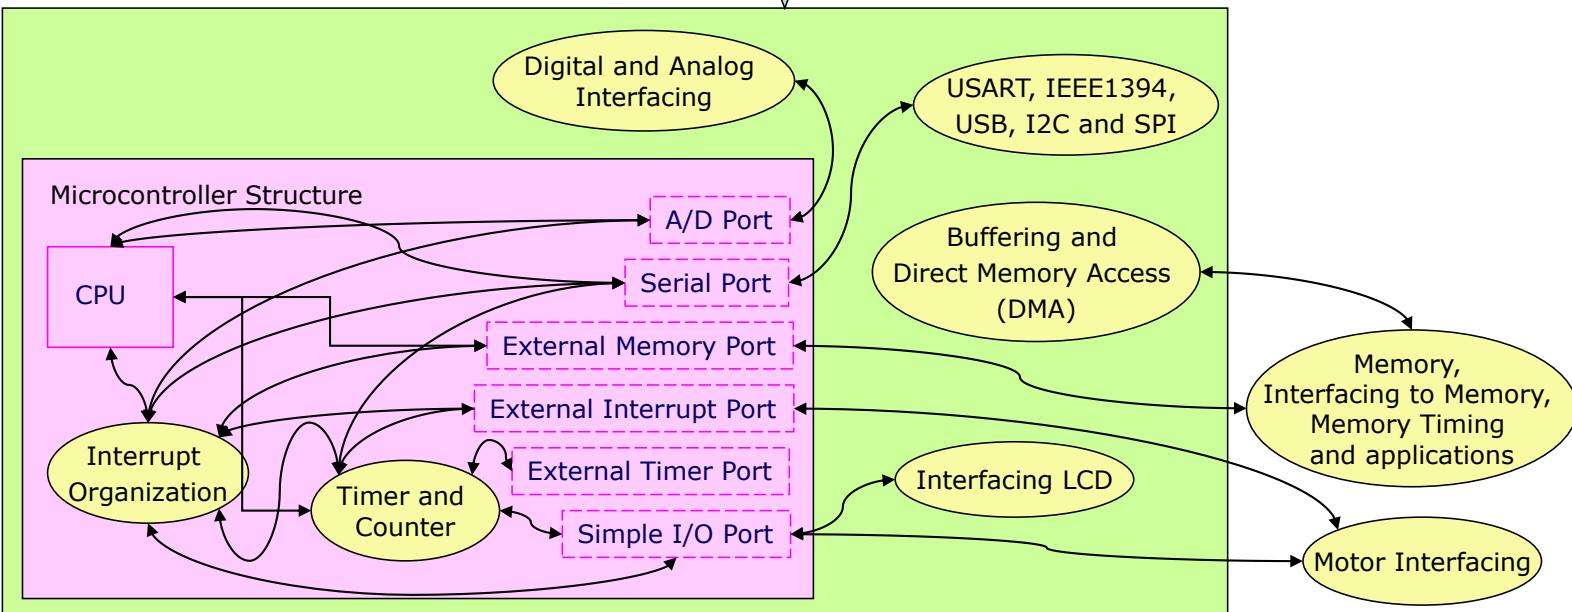

In this course, STM32 is used as a driving vehicle for delivering the concepts.

To be covered

In progress

Done