



# **Slwave for Power Integrity Analysis**

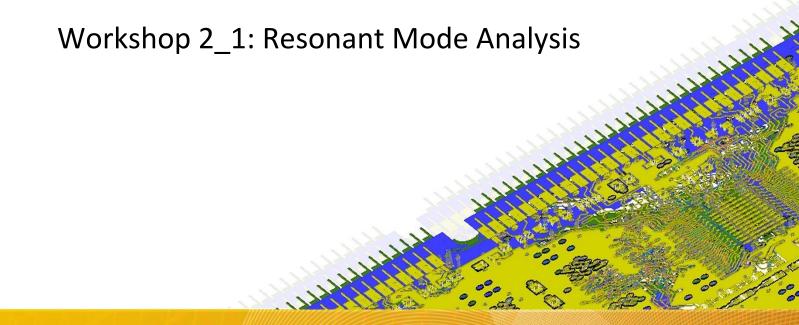

### **SIwave Resonant Mode Analysis**

#### Board Design

- The board design example is intended to show you how to import, simulate, and analyze a 4-layer board structure using Slwave.
- When traces are routed through power and ground planes, you can experience signal integrity problems. The following illustration details the board design that will be used in SIwave to investigate the following SI applications:
  - How resonant behavior effects signal transmission along a trace
  - Non-ideal plane behavior
- For this example, we will import the design file and its discrete components. After defining the correct capacitance, ESL, and ESR values, a resonant mode calculation will be performed. We will then add decoupling capacitors to the planes to see if an improvement can be made in the resonant mode voltage swing.

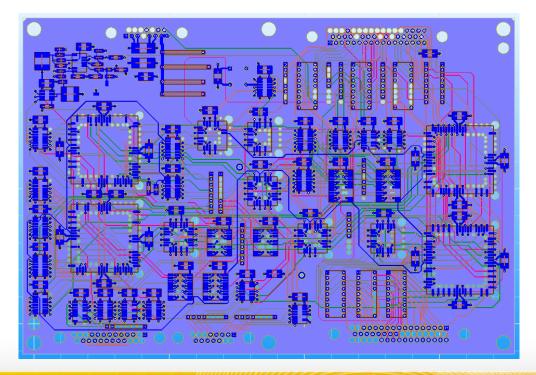



### **Overview**

#### ANSYS SIwave Design Environment


- The following features of the ANSYS SIwave Design Environment are used to create this passive device model
  - Importing
    - ANF file
    - Component File
  - Editing Component Values
    - Capacitance
    - ESL
    - ESR
  - Solutions
    - Resonant Modes
  - Fields
    - Resonant Mode Plot
  - Adding Components
    - Capacitor
  - Verify Results



December 6, 2016

#### Starting Slwave

- To launch Slwave, click the Microsoft Start Button, select: All Programs > ANSYS Electromagnetics > ANSYS Electromagnetics Suite 17 > ANSYS Slwave 2016
  - The Welcome Window will appear

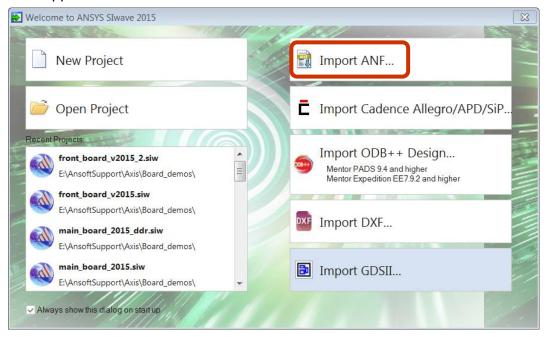


### Import the .ANF (Ansoft Neutral File) file


- Click the Import ANF... box
  - Navigate to the file named: **siwave board.anf**
  - Click the **Open** button



- The Select nets box will appear. (If desired, the user can filter nets to be imported. For this
  example, all nets will be imported)
  - Click the **Import Configuration** button

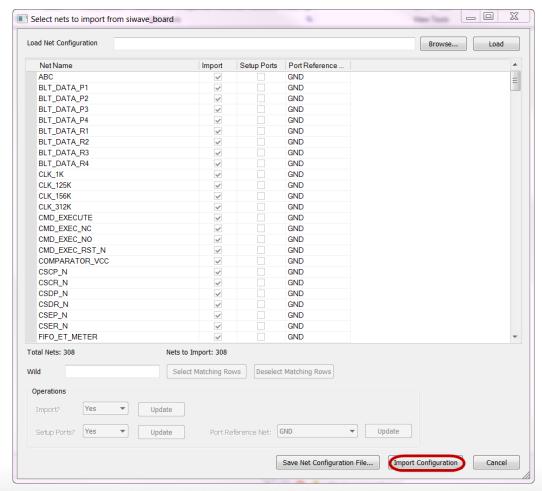


- The SIwave Workflow Wizard will appear
- Import the .CMP (Ansoft Component File)
  - Click on the Import Component File button
    - Navigate to the file named: siwave\_board.cmp
    - Click the Open button
    - If there is a warning message click the **Yes to All** button to overwrite existing names

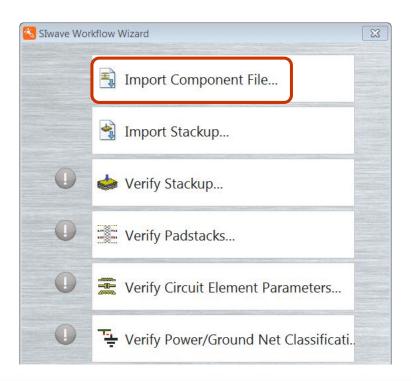




#### Verify the Layer Stackup

- From the SIwave Workflow Wizard dialog, click Verify Stackup...
- Double-check the values with those shown in the table below
- Click OK when finished

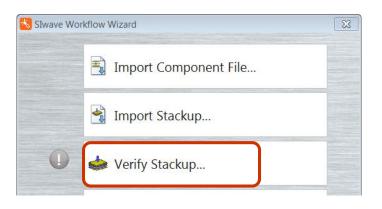

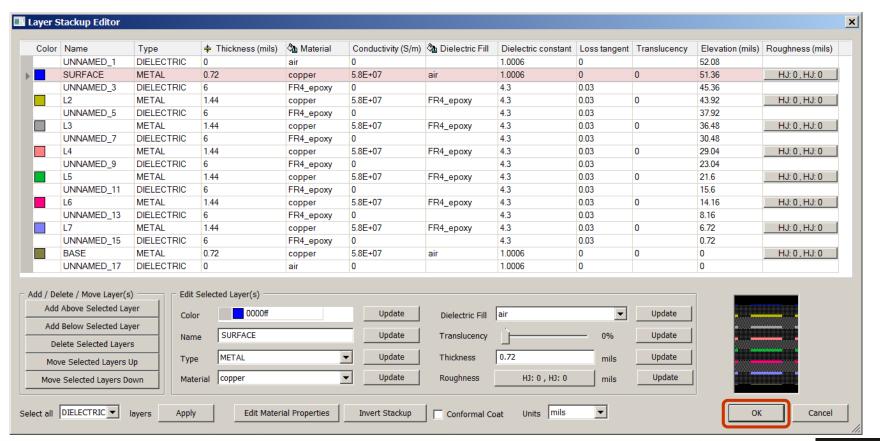



### Verify the Layer Stackup


• There should be a green check mark next the to Verify Stackup

#### Verify Padstacks

- · Click on Verify Padstacks to view
- View some of the Padstacks
- Click OK when finished
- There should be a green check mark next to Verify Padstacks

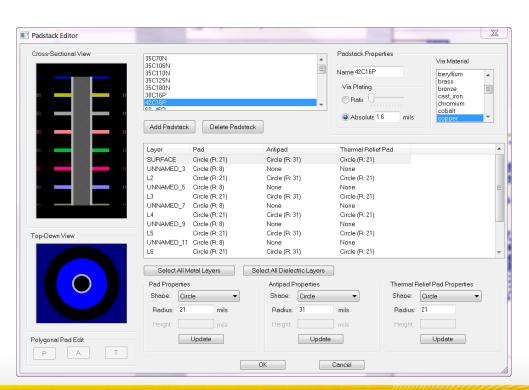

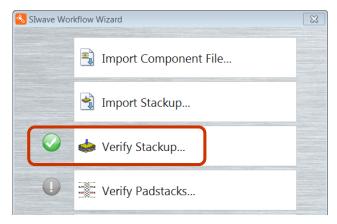


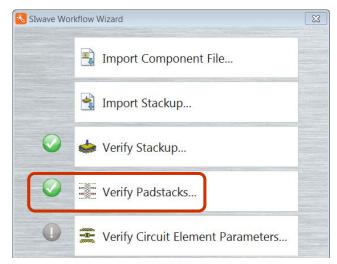





### Verify and Reassign Circuit Element Parameters

- Click on Verify Circuit Element Parameters
  - Click on the Capacitors Tab to verify that there are 64 capacitors
  - Click on the Inductors Tab to verify that there is 1 inductor
  - Click on the Resistors Tab to verify that there are 16 resistors
  - Click OK when finished
- Click on the X to close the Slwave Workflow Wizard

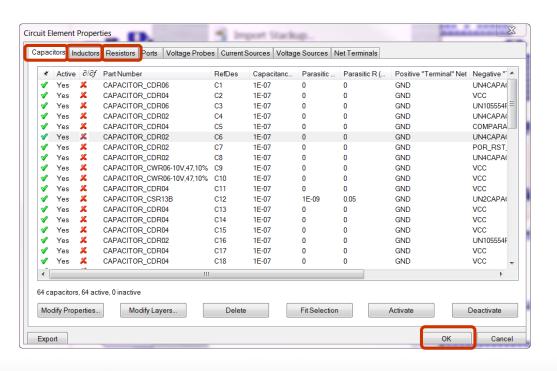

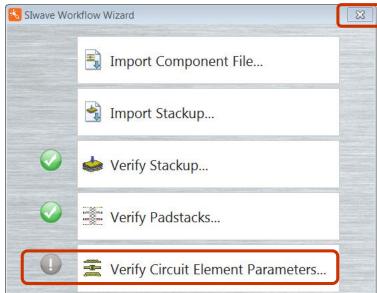


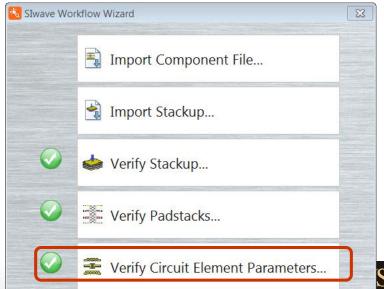


© 2016 ANSYS, Inc. December 6, 2016 Release 2016.0

#### Editing the Capacitance Values

- Select the Components tab
  - Expand Capacitors by clicking the plus sign next to it
  - Expand Local by clicking the plus sign next to it
  - Highlight CAPACITOR\_CDR02
  - Right click CAPACITOR\_CDR02 and select Edit Component Properties
    - Capacitance: 1E-7
    - Parasitic Inductance: 1E-9
    - Parasitic Resistance: 0.05
  - Click the **OK** button
  - Highlight CAPACITOR\_CDR04
  - Right click **CAPACITOR\_CDR04** and select Edit Component Properties
    - Capacitance: 1E-7
    - Parasitic Inductance: 1E-9
    - Parasitic Resistance: 0.05
    - Click the **OK** button
  - Highlight CAPACITOR\_CDR06
  - Right click CAPACITOR\_CDR06 and select Edit Component Properties
    - Capacitance: **1E-7**
    - Parasitic Inductance: 1E-9
    - Parasitic Resistance: 0.05
    - Click the **OK** button

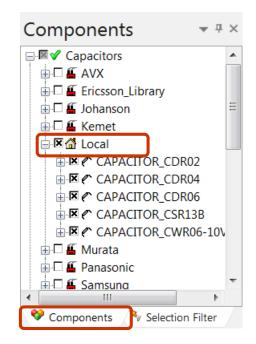

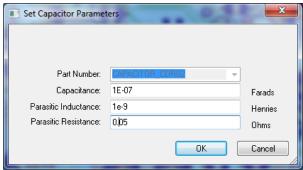



#### Editing the Capacitance Values (continued)

- Highlight CAPACITOR\_CSR13B
- Right click CAPACITOR\_CSR13B and select Edit Component Properties
  - Capacitance: **1E-7**
  - Parasitic Inductance: **1E-9**
  - Parasitic Resistance: 0.05
  - Click the **OK** button
- Highlight CAPACITOR\_CWR06-10V,47,10%
- Right click CAPACITOR CWR06-10V,47,10% and select Edit Component Properties
  - Capacitance: 4.7E-5
  - Parasitic Inductance: 1E-8
  - Parasitic Resistance: 0.5
  - Click the **OK** button
- Save the Design
  - Select File > Save



### **SIwave Resonant Mode Analysis**

#### **Changing the View**


• From the HOME tab, the view menu can be accessed



#### • Shortcuts

- Since changing the view is a frequently used operation, some useful shortcut keys exist. Press the appropriate keys and drag the mouse with the left button pressed:


- Rotate
  - ALT + Drag or press the roller button on the mouse
  - In addition, there are 9 pre-defined view angles that can be selected by holding the ALT key and double clicking on the locations shown on the next page. **Predefined View Angles**
- Pan
  - Shift + Drag
- Dynamic Zoom
  - ALT + Shift + Drag or use the roller on the mouse

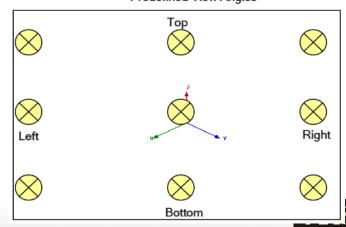


December 6, 2016 **Release 2016.0** 

#### Setting Simulation Options

Click on the Simulation Tab to access the Options button

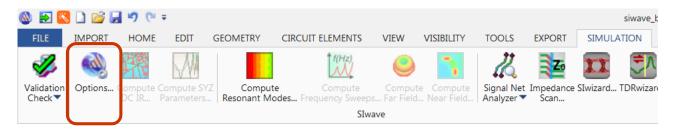

- Click on the Multiprocessing Tab
  - Number of cores to use: 4
  - Use HPC Licensing: checked, HPC Pack
  - Click OK

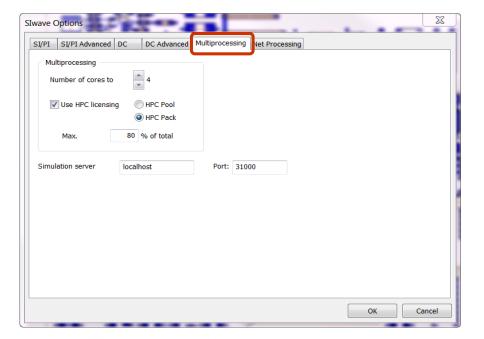





### **SIwave Resonant Mode Analysis**

#### Set Visibility options

- Using the checkboxes in the Layers workspace, turn on full visibility of all layers
- Click the colored rectangles next to each layer name to control whether the geometry is shown in outline or filled form

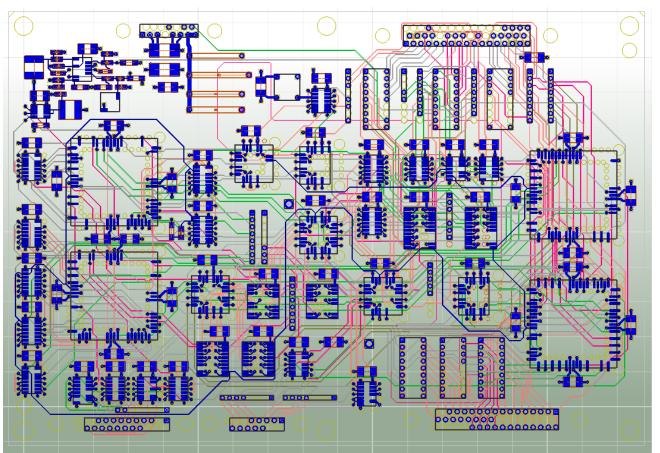

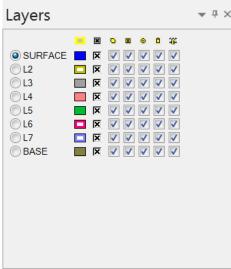

#### Running a Resonant Mode Simulation

• From the Simulation Tab click the Compute Resonant Modes button

- Simulation name: Resonant Mode Sim 1

- Minimum Frequency: 2.55238E+008


– Maximum Frequency: 2e9– # of Modes to Compute: 5


- Click the Launch button

#### Viewing Results

- Right-click on Resonant Mode Sim1
- Select View Results



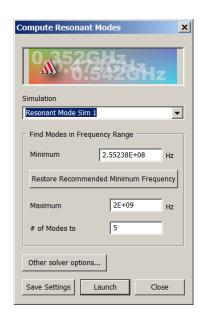


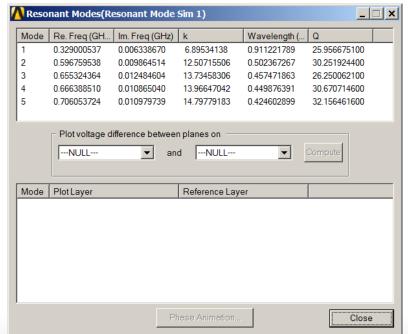



#### Viewing Results (continued)

- The voltage difference between planes can be displayed for each resonant mode. It is the transverse (x,y) dependence of the voltage difference that will be plotted.
- Generate the voltage plot between planes L7 and L2 by selecting the layers as shown here and pressing Compute.
- When the computation is done, the various voltage plots can be viewed for each mode by selecting the correct row in the bottom section of the Resonant Mode Results window.

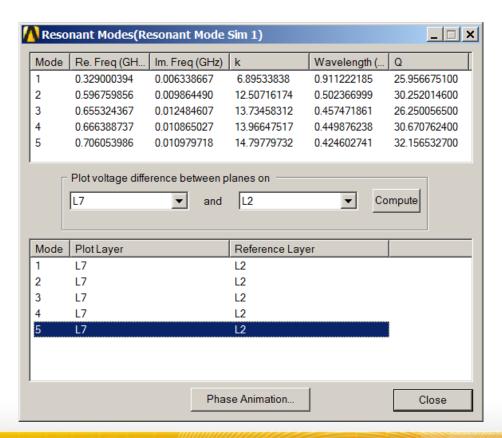




#### Viewing Results (continued)

- While viewing the voltage distribution, the mesh and color-key visibility may be toggled from the Visibility window
- The voltage distribution of the 5th mode is shown here .



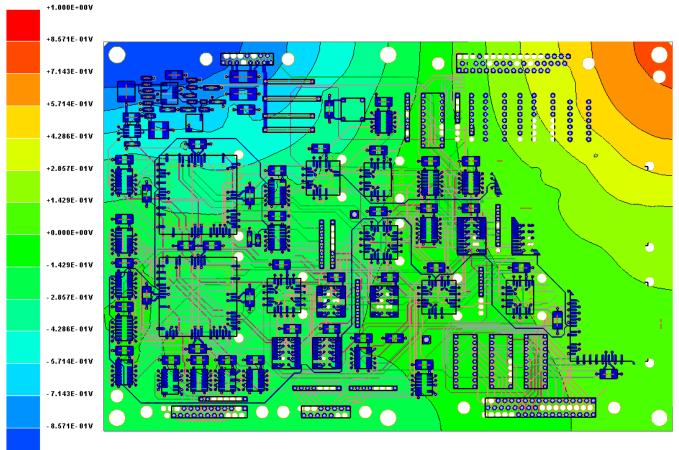



#### Phase Animation

• In the Resonant Mode Results window, in the bottom section, highlight the **5th** resonant mode with Plot Layer **L7** and Reference Layer **L2** 

ENTS

Visibility

VIEW

VISIBILITY

Display

Mesh Surface Plot Color Scale Visibility Control

**TOOLS** 

Temperature Plot


**EXPO** 


- Click the Phase Animation button
  - Click the Generate Frames button
  - When all 20 frames are generated, Click the **Play** button
  - When done viewing the animation, click the Close button
- Click Close to close the Resonant Mode Results window

**Note:** To turn off the mesh display, click on the Display Mesh button

**Note:** To turn off the Display Color Scale click on the Display Color Scale button

**Note:** The display can be rotated by holding down the **Alt** key and the **Left Mouse Button** and dragging.

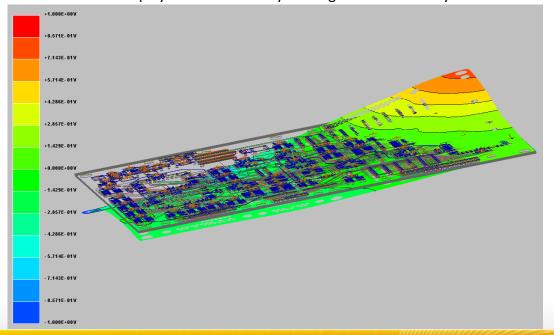

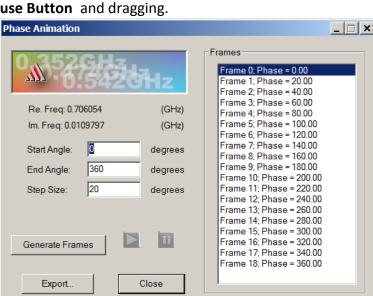




#### Adding Capacitors

• At the 5th resonance, there is a large voltage swing that can be seen at the top right corner of the board. Capacitors will be added in that area to reduce the effect of the resonance.

- Click on the Home tab then select the Top-down View button
- To add capacitors:
  - Turn off the Surface Plot from the Visibility tab
  - Click with the right mouse button on the capacitor "CAPACITOR CDR02" in the Components window as shown here




• The capacitor can be placed either graphically or for more precise positioning, the coordinates can be entered directly.





VISIBILITY

• For the current exercise it is sufficient to place the capacitor using the mouse as shown below. The exact location is not critical.

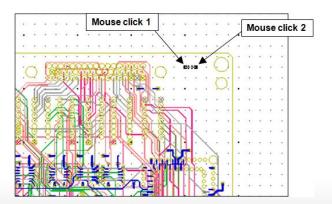





#### Adding Capacitors

• When the capacitor has been placed, the following dialog window appears. This dialog defines the net connection and layer for the

capacitor terminals.

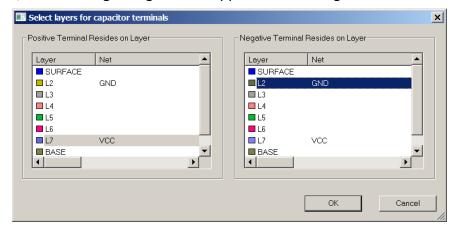

- **Note:** that the capacitor can be directly connected to layers and nets inside the board. This is not possible in practice, but is useful to quickly see the effect of placing the components. The routing and/or via inductance could be added by introducing a new capacitor model with appropriate series inductance.
- For this exercise, the capacitors will not be modified. Click the **OK** button to accept the capacitor model.

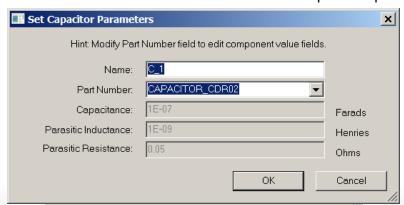




#### Adding Capacitors to the model

- Place a 2nd capacitor, of the same type, just above the first one as shown here.
- The exact coordinates of the new capacitor terminals are:



• Again use the model CAPACITOR\_CDR02.

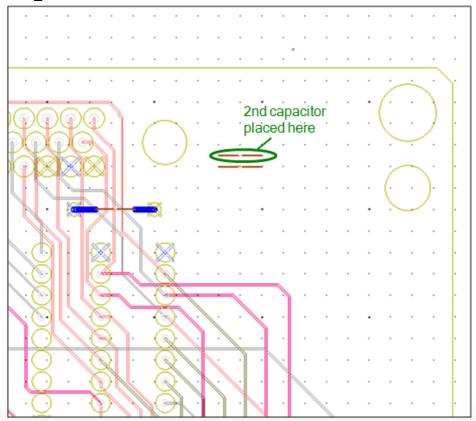


#### Re-run the Resonant Mode Simulation

- Select the **Simulation Tab > Compute Resonant Modes** 
  - Simulation Name: Resonant Mode Sim 2
  - Minimum Frequency: 2.55238E+008 (default)
  - Maximum Frequency: 2E+009
  - # of Modes to Compute: 5
  - Click the **Launch** button

#### Viewing Results

- Right-click on Resonant Mode Sim 2 and select View Results
  - Generate the voltage plot between planes L2 and L7 by selecting the layers as shown here and pressing Compute.
     View the 5th resonant mode plot again. The voltage amplitude at the top right corner of the board where the capacitors were placed shows reduced amplitude.
  - Note: The surface plot display ≈ may need to be turned on.

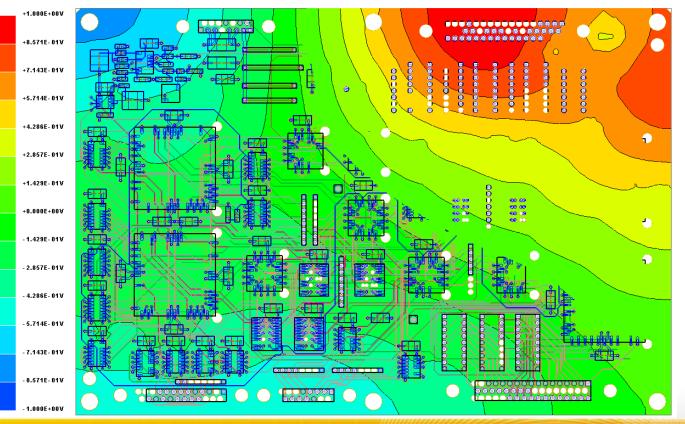

- Save the .siw file
  - Menu File > Save

