


1 / 4 COMPONENT PLACEMENT – TOP VIEW

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

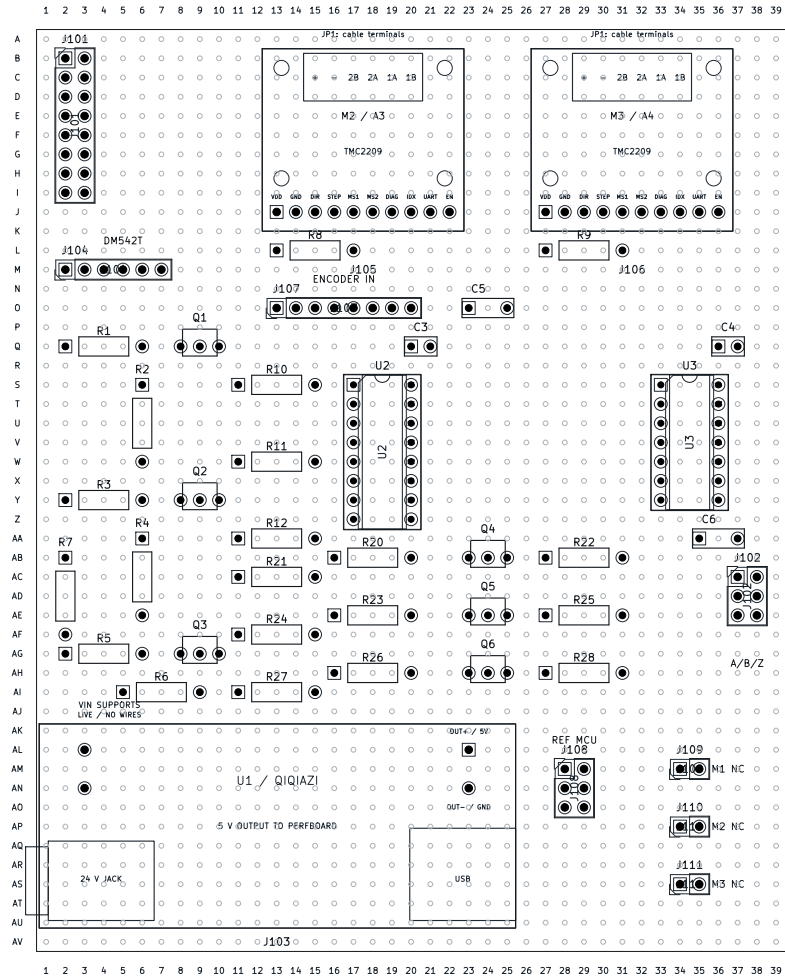

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1-Q6 Diotec E/B/C left to right; flat face DOWN.

Modules ≥ 6 mm above board. Buck VIN supports live: no wires on either face.


J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10-R12 DNP. Driver power/motor cables stay on modules.

2 / 4 TOP JUMPERS – COMPONENT SIDE

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

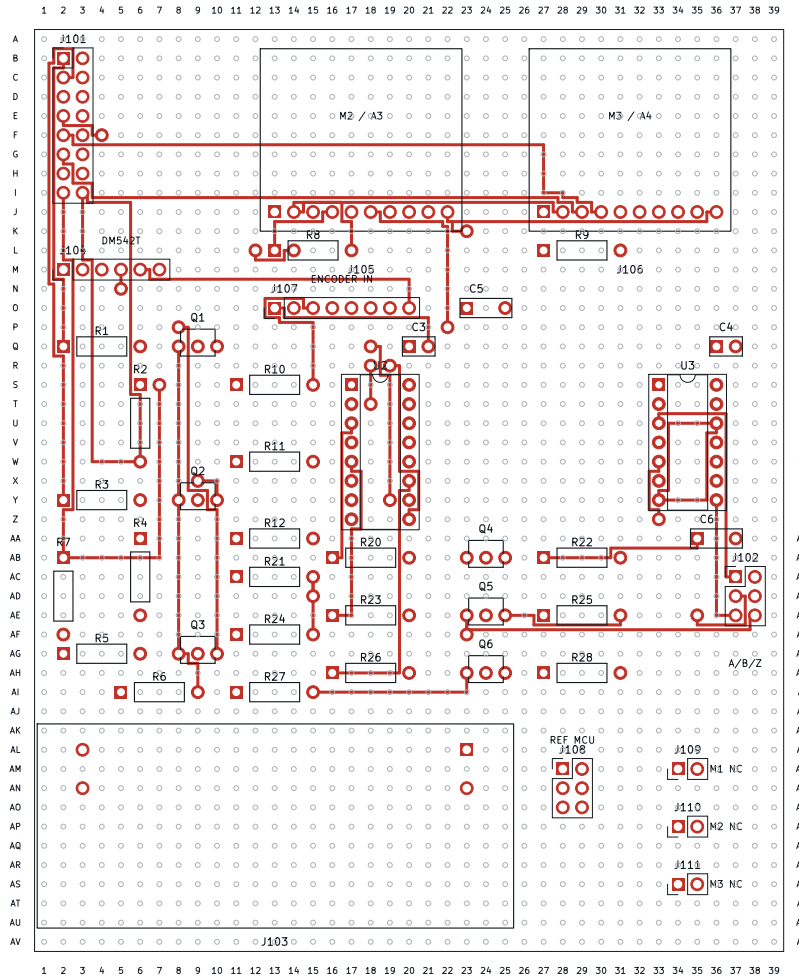

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1–Q6 Diotec E/B/C left to right; flat face DOWN.

Modules >=6 mm above board. Buck VIN supports live: no wires on either face.


J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10–R12 DNP. Driver power/motor cables stay on modules.

3 / 4 BOTTOM WIRES – SOLDER SIDE, ALREADY MIRRORED

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

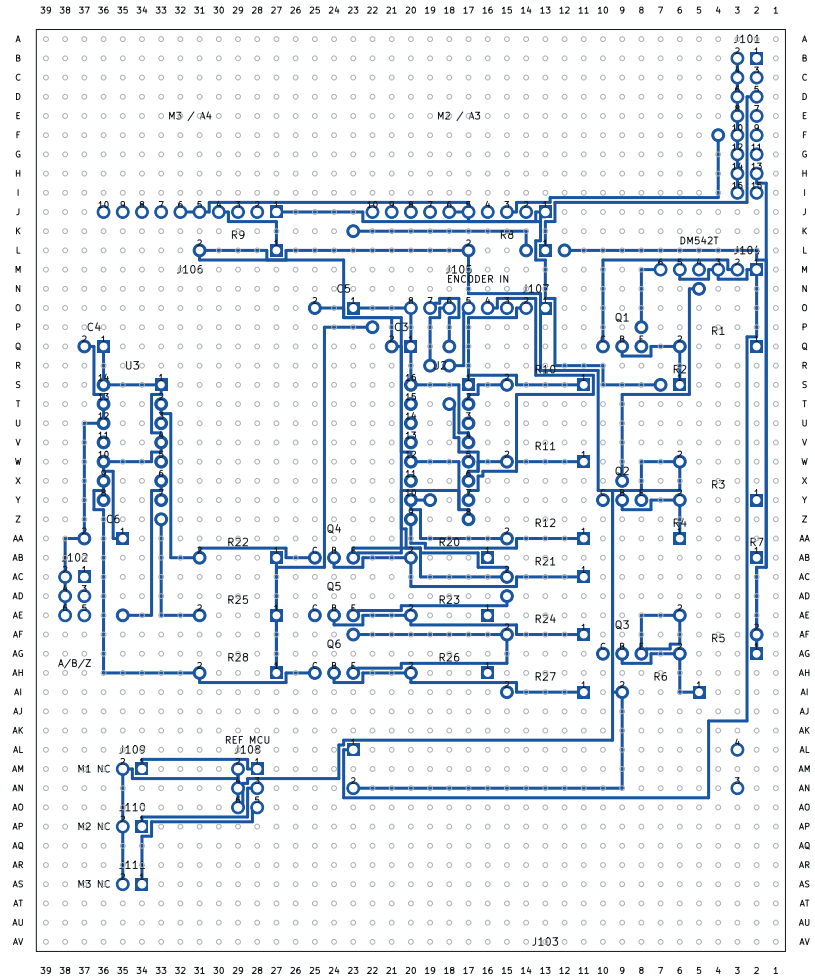

BOTTOM: solder side. Flip LEFT / RIGHT; row A stays at the top.

U2/U3 notch UP. Q1–Q6 Diotec C/B/E left to right on this face; flat face DOWN.

Modules >=6 mm above board. Buck VIN supports live: no wires on either face.


J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10–R12 DNP. Driver power/motor cables stay on modules.

4 / 4 BOTH WIRE LAYERS – TOP VIEW

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

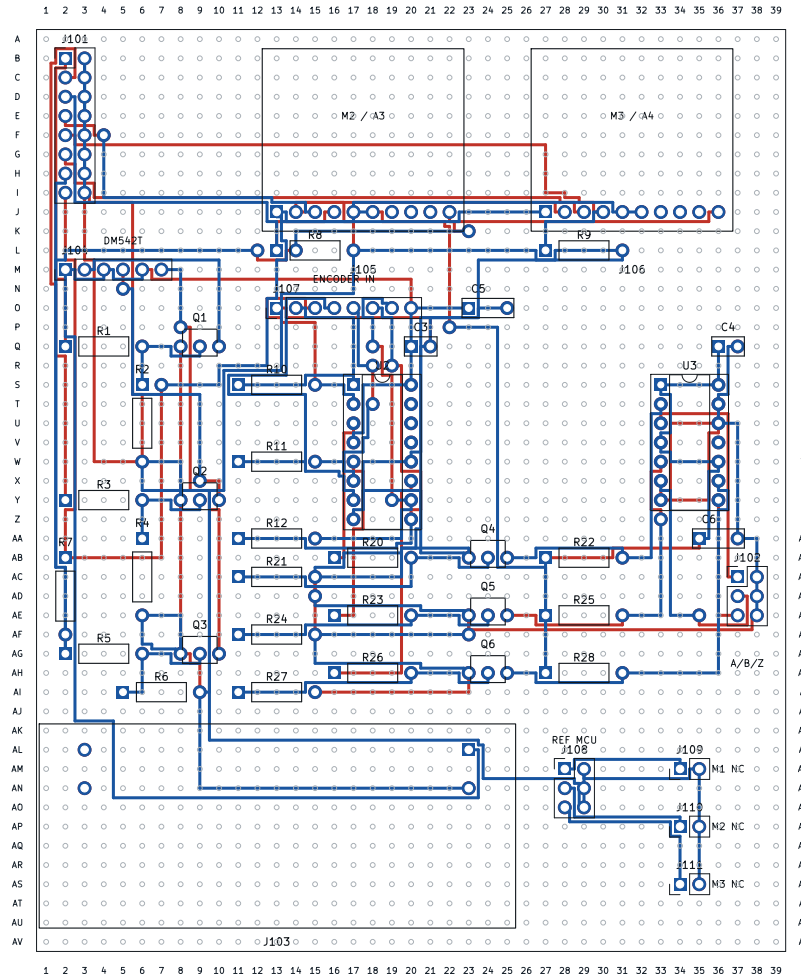

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1-Q6 Diotec E/B/C left to right; flat face DOWN.

Modules >=6 mm above board. Buck VIN supports live: no wires on either face.

J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10-R12 DNP. Driver power/motor cables stay on modules.