


1 / 4 COMPONENT PLACEMENT – TOP VIEW

One continuous grid: A1:BM47. Hole-centre span: 116.84 x 162.56 mm.

Nominal outline: 119.38 x 165.10 mm. Print at 100%; ten intervals = 25.4 mm.

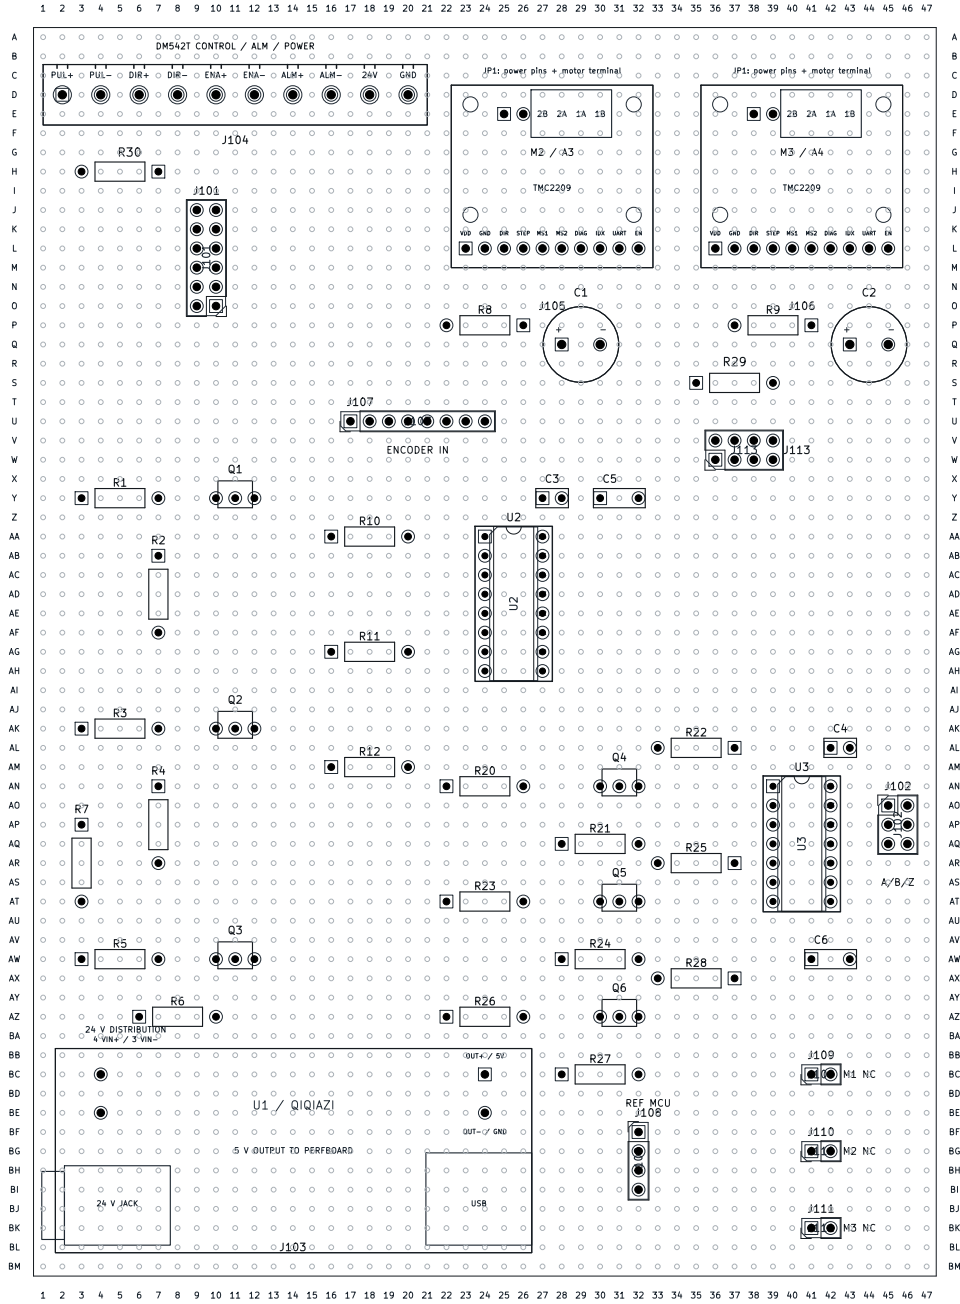

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1-Q6 Diotec E/B/C left to right; flat face DOWN.

Modules >=6 mm above board. Buck VIN -> J104.9/10 -> separate 24 V / GND driver branches.

J101 pins 1/3/5/7/9/11/12 -> CN10 pins 29/26/32/10/34/8/30.

J101.8 -> CN8.7 (3V3); .4 -> CN9.17 (ALM); GND .2/6/10. R10-R12 DNP.


Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.

Power: dedicated insulated 0.5 mm2 copper branches on underside. Capacitors C1/C2: observe + polarity.

2 / 4 TOP JUMPERS – COMPONENT SIDE

One continuous grid: A1:BM47. Hole-centre span: 116.84 x 162.56 mm.

Nominal outline: 119.38 x 165.10 mm. Print at 100%; ten intervals = 25.4 mm.

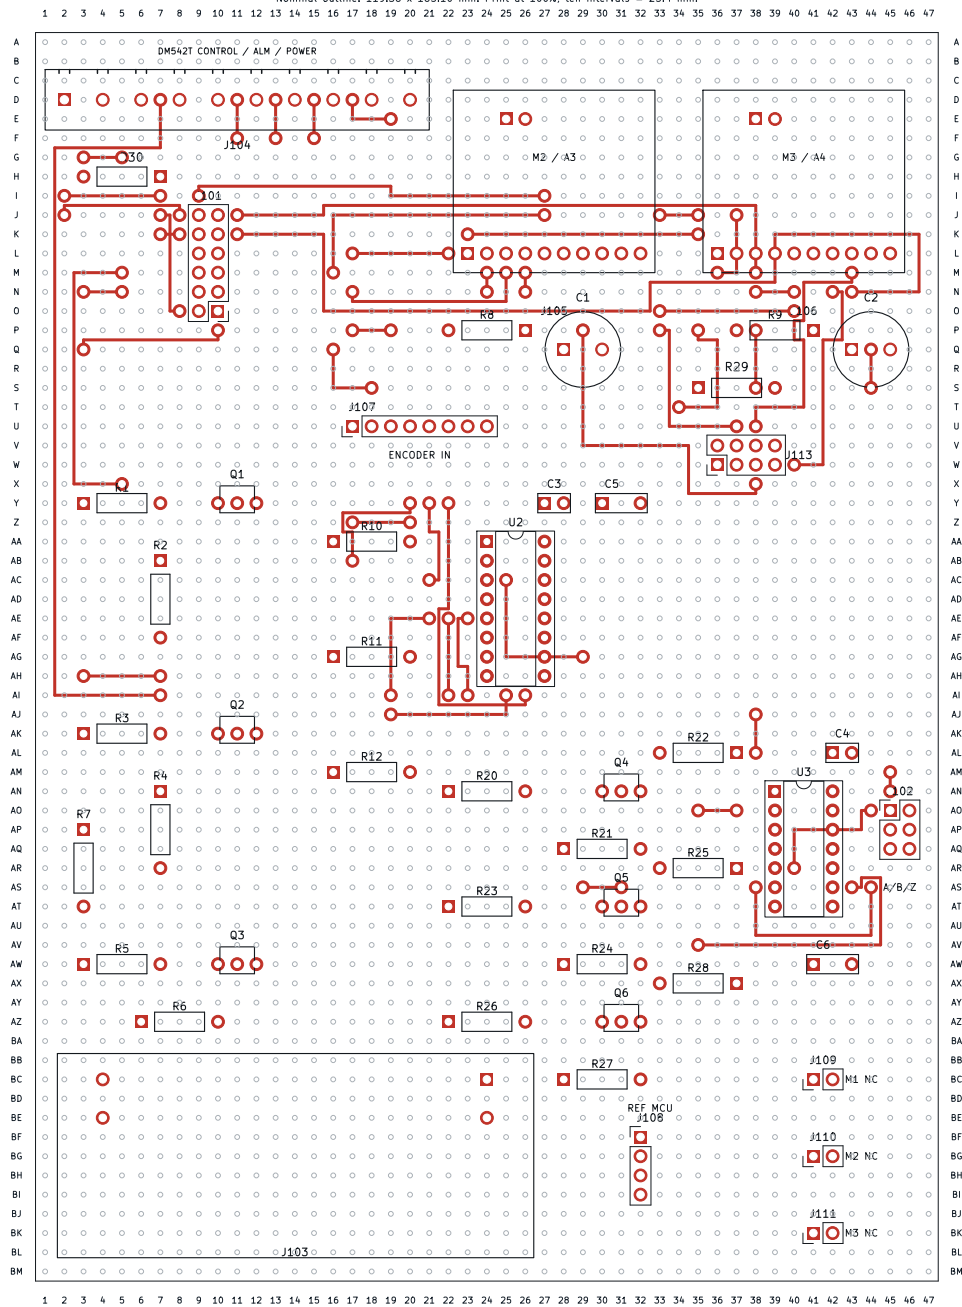

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1–Q6 Diotec E/B/C left to right; flat face DOWN.

Modules ≥ 6 mm above board. Buck VIN $\rightarrow$ J104.9/10 $\rightarrow$ separate 24 V / GND driver branches.

J101 pins 1/3/5/7/9/11/12 -> CN10 pins 29/26/32/10/34/8/30.

J101.8 -> CN8.7 (3V3); .4 -> CN9.17 (ALM); GND .2/.6/.10. R10-R12 DNP.


Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.

Power: dedicated insulated 0.5 mm² copper branches on underside. Capacitors C1/C2: observe + polarity.

3 / 4 BOTTOM WIRES – SOLDER SIDE, ALREADY MIRRORED

One continuous grid: A1:BM47. Hole–centre span: 116.84 x 162.56 mm.

Nominal outline: 119.38 x 165.10 mm. Print at 100%; ten intervals = 25.4 mm.

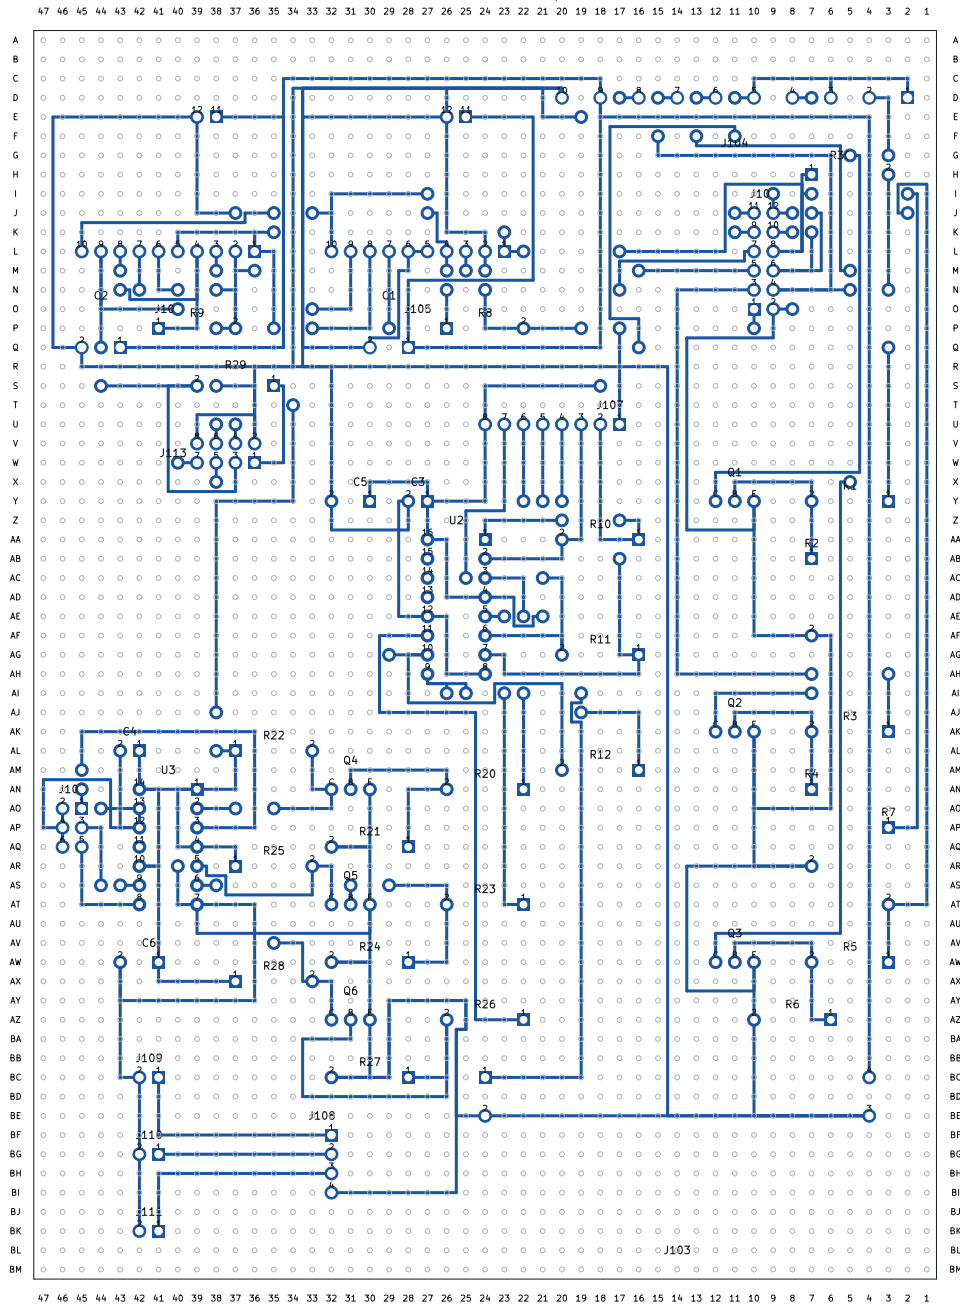

BOTTOM: solder side. Flip LEFT / RIGHT: row A stays at the top.

U2/U3 notch UP. Q1–Q6 Diotec C/B/E left to right on this face; flat face DOWN.

Modules >=6 mm above board. Buck VIN -> J104,9/10 -> separate 24 V / GND driver branches.

J101 pins 1/3/5/7/9/11/12 -> CN10 pins 29/26/32/10/34/8/30.

J101.8 -> CN8.7 (3V3); .4 -> CN9.17 (ALM); GND .2/6/10. R10–R12 DNP.

Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.


Power: dedicated insulated 0.5 mm2 copper branches on underside. Capacitors C1/C2: observe + polarity.

J113 1/3/5/7 -> CN9 6/4/8/10; 4/6 -> CN9 25/27 (INDEX); GND 2/8.

4 / 4 BOTH WIRE LAYERS – TOP VIEW

One continuous grid: A1:BM47. Hole-centre span: 116.84 x 162.56 mm.

Nominal outline: 119.38 x 165.10 mm. Print at 100%; ten intervals = 25.4 mm.

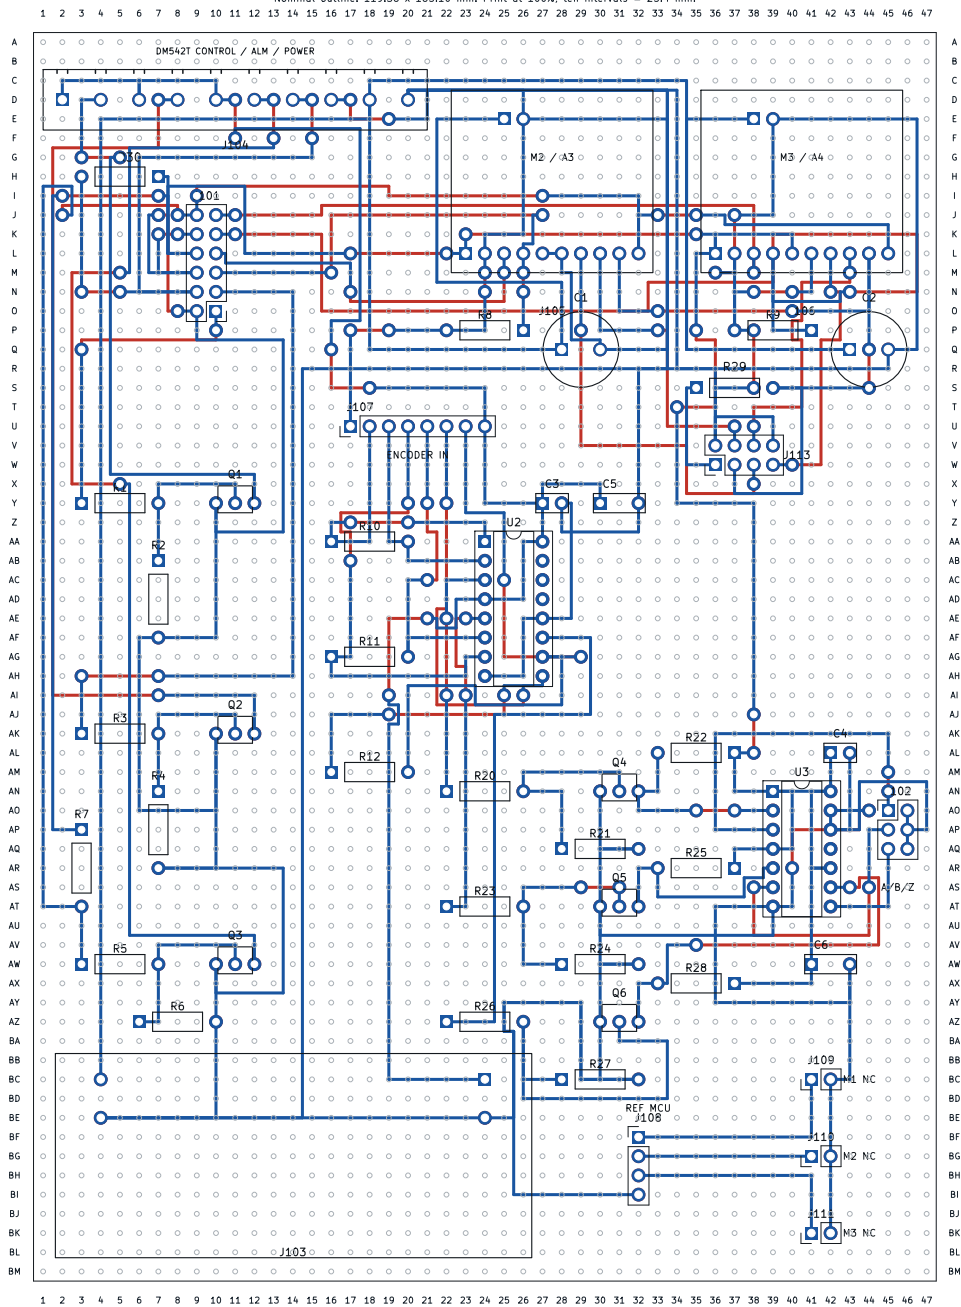

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1–Q6 Diotec E/B/C left to right; flat face DOWN.

Modules >=6 mm above board. Buck VIN -> J104.9/10 -> separate 24 V / GND driver branches.

J101 pins 1/3/5/7/9/11/12 -> CN10 pins 29/26/32/10/34/8/30.

J101.8 -> CN8.7 (3V3); .4 -> CN9.17 (ALM); GND .2/6/.10. R10–R12 DNP.

Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.

Power: dedicated insulated 0.5 mm2 copper branches on underside. Capacitors C1/C2: observe + polarity.