


1 / 4 COMPONENT PLACEMENT – TOP VIEW

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

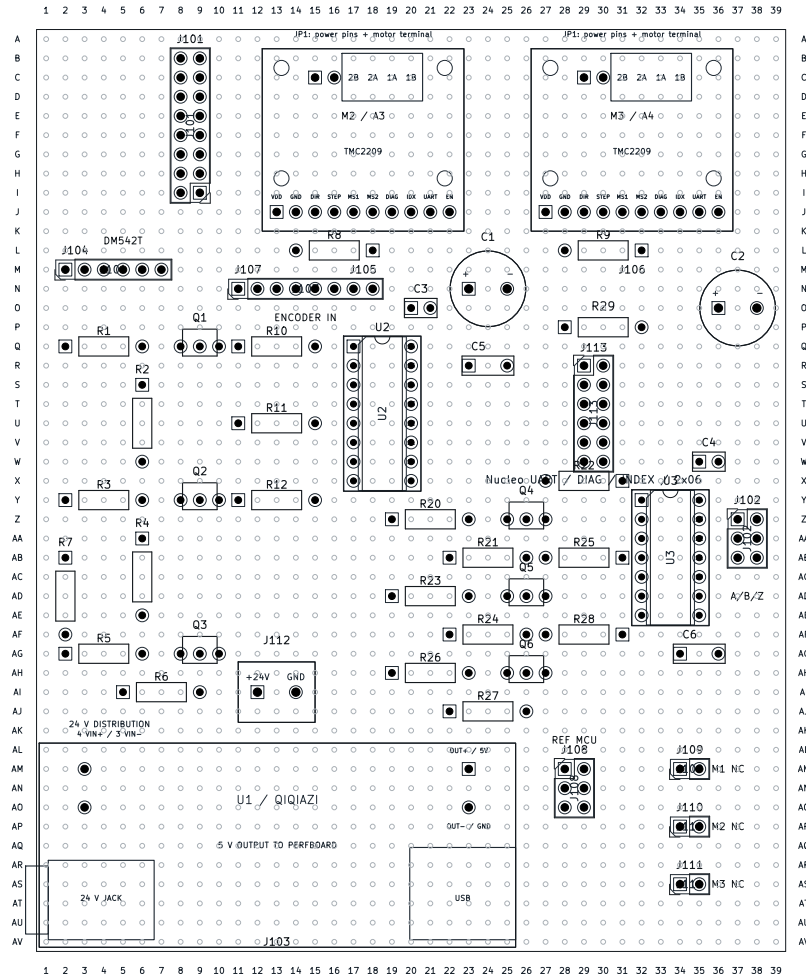

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1-Q6 Diotec E/B/C left to right; flat face DOWN.

Modules ≥ 6 mm above board. Buck VIN $\rightarrow$ J112 $\rightarrow$ separate 24 V / GND driver branches.

J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10-R12 DNP. J112: 1 +24 V / 2 GND to DM542T.


Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.

Power: dedicated insulated 0.5 mm² copper branches on underside. Capacitors C1/C2: observe + polarity.

2 / 4 TOP JUMPERS – COMPONENT SIDE

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

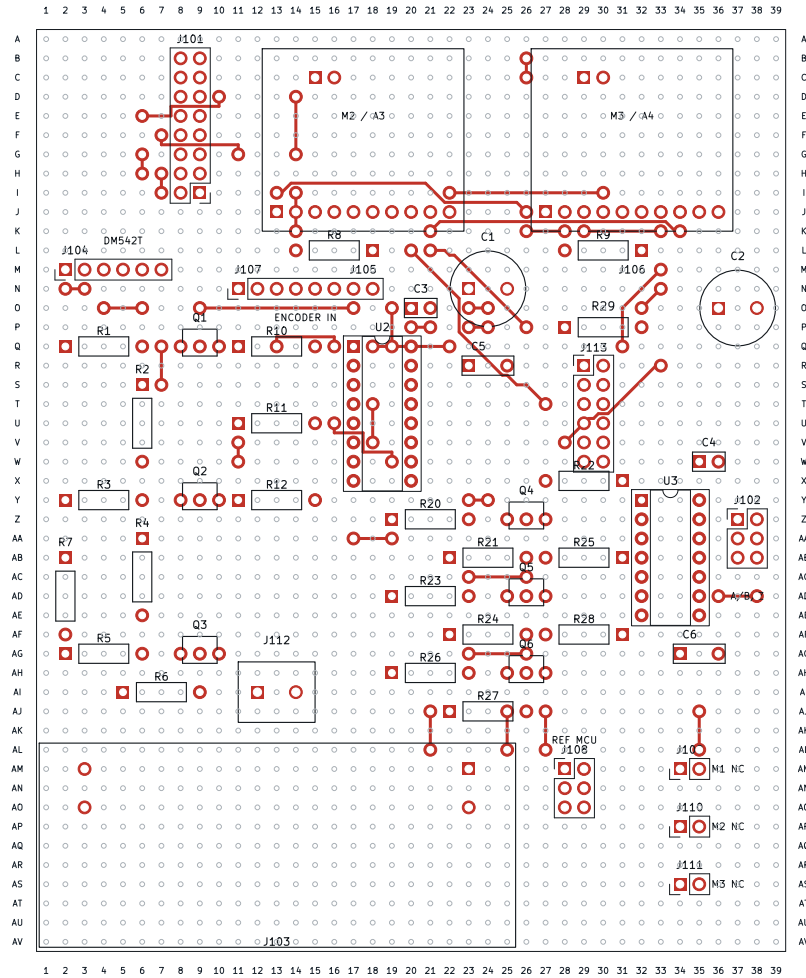

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1-Q6 Diotec E/B/C left to right; flat face DOWN.

Modules >=6 mm above board. Buck VIN -> J112 -> separate 24 V / GND driver branches.

J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10-R12 DNP. J112: 1 +24 V / 2 GND to DM542T.

Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.


Power: dedicated insulated 0.5 mm2 copper branches on underside. Capacitors C1/C2: observe + polarity.

3 / 4 BOTTOM WIRES – SOLDER SIDE, ALREADY MIRRORED

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

39 38 37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

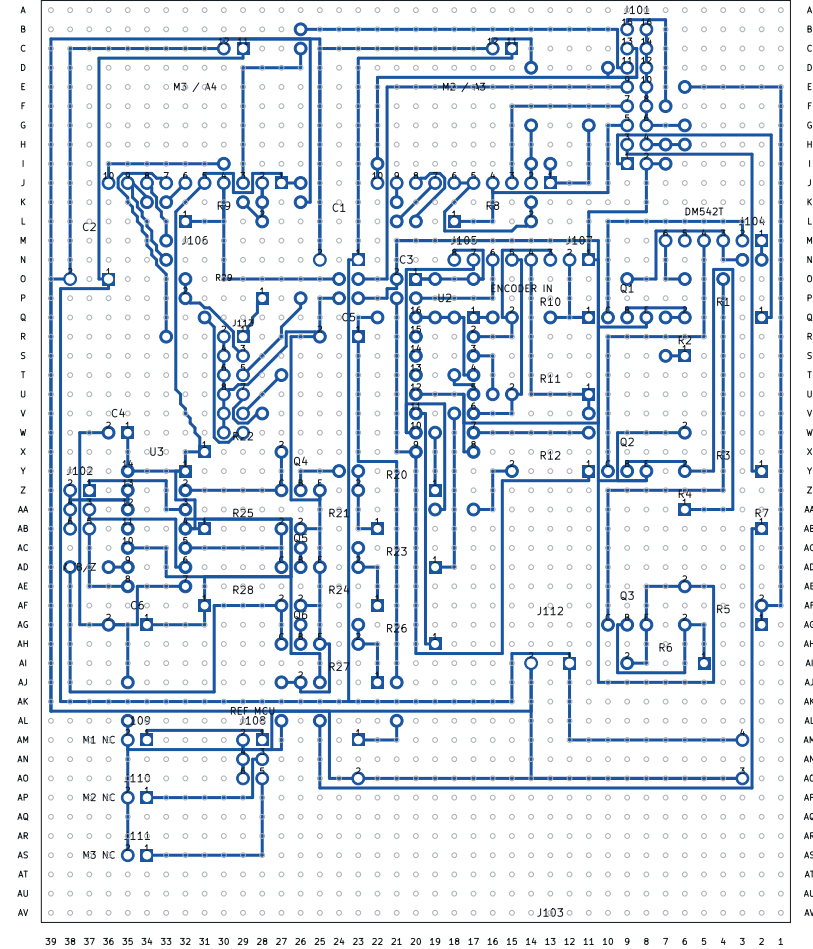

BOTTOM: solder side. Flip LEFT / RIGHT; row A stays at the top.

U2/U3 notch UP. Q1–Q6 Diotec C/B/E left to right on this face; flat face DOWN.

Modules >=6 mm above board. Buck VIN -> J112 -> separate 24 V / GND driver branches.

J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10–R12 DNP. J112: 1 +24 V / 2 GND to DM542T.

Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.


Power: dedicated insulated 0.5 mm2 copper branches on underside. Capacitors C1/C2: observe + polarity.

J113 pins 1/3/5/7 -> CN9 pins 6/4/8/10 (UART TX/RX, M2/M3 DIAG); even pins GND.

4 / 4 BOTH WIRE LAYERS – TOP VIEW

One continuous grid: A1:AV39. Hole-centre span: 96.52 x 119.38 mm.

Nominal outline: 99.06 x 121.92 mm. Print at 100%; ten intervals = 25.4 mm.

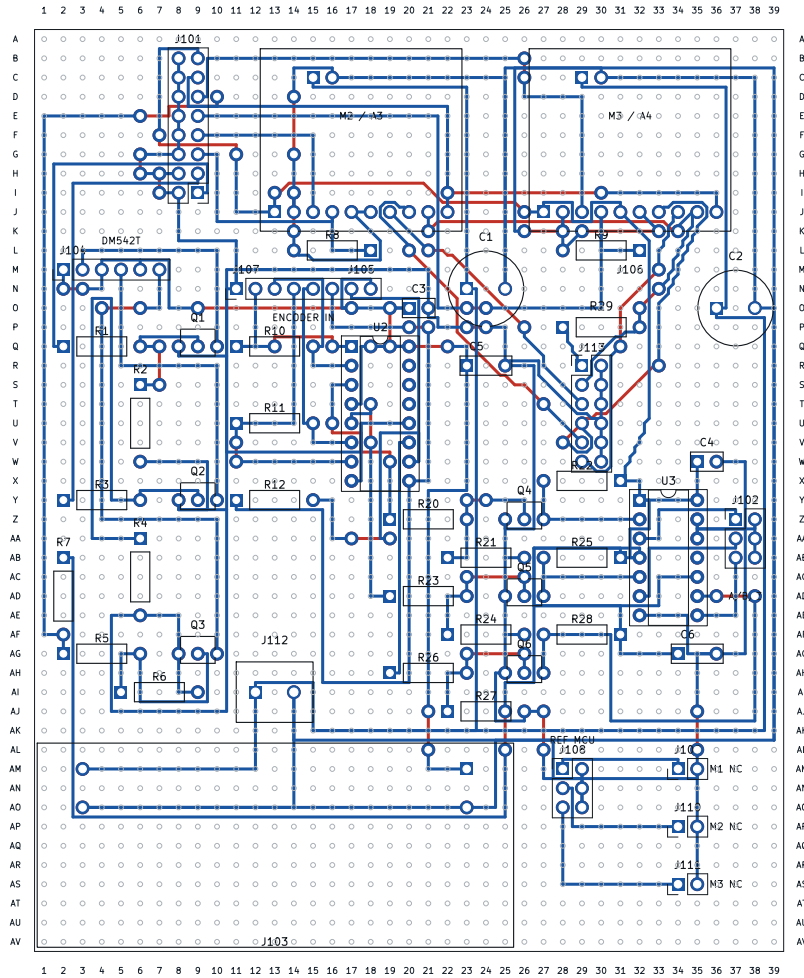

TOP: component view. Red = top jumpers; blue = bottom wires.

U2/U3 notch UP. Q1–Q6 Diotec E/B/C left to right; flat face DOWN.

Modules >=6 mm above board. Buck VIN -> J112 -> separate 24 V / GND driver branches.

J101 odd pins 1/3/5/7/9/11/13 -> CN10 pins 29/26/32/10/34/8/30.

J101.15 -> CN8.7 (3V3). R10–R12 DNP. J112: 1 +24 V / 2 GND to DM542T.

Solder all wire ends underneath. Red crossovers use free holes; keep their insulation intact.

Power: dedicated insulated 0.5 mm2 copper branches on underside. Capacitors C1/C2: observe + polarity.