
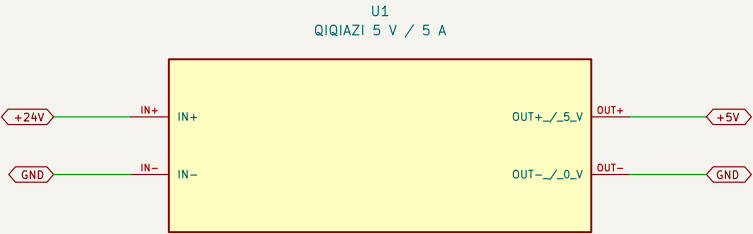



CONTROLLER AND POWER

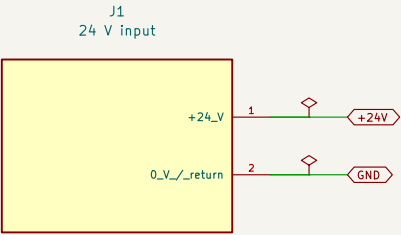


Wire converter by IN+ / IN- / OUT+ / OUT- markings.
24 V also feeds all three motor drivers.
Common 0 V; separate power branches to each driver.
5 A is the converter rating, not the Nucleo input rating.

NUCLEO POWER CONFIGURATION
JP2: fit EXT jumper on pins 5–6.
Buck +5 V -> CN11 pin 6; ground -> CN11 pin 8.
CN8 pin 7 supplies 3.3 V to interface/storage.
5V_EXT input: 4.75–5.25 V, 500 mA maximum.
Power EXT first, then connect ST–Link USB CN1.
Do not connect 24 V to Nucleo VIN or logic pins.


BOARD ROUTING (UM2407 table 14)
PE9 -> CN10.4; SB28 ON, SB70 OFF.
QSPI: SB59/SB63 ON; SB61/SB69 OFF.
PE2 -> CN10.25; SB67 OFF.
Only used external contacts are drawn.
Ethernet, ST–Link, LEDs and button stay onboard.

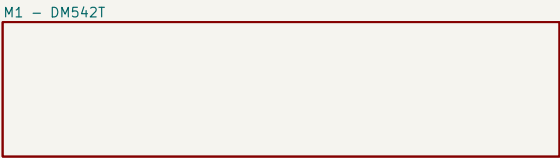


Date: M1_DM542T.kicad_sch

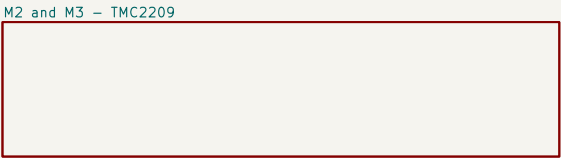


Date: M2_M3_TMC2209.kicad_sch

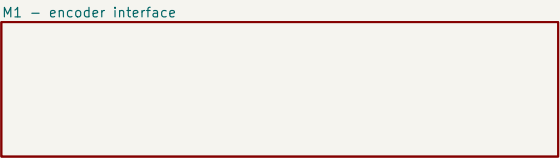

Date: M1_Encoder.kicad_sch

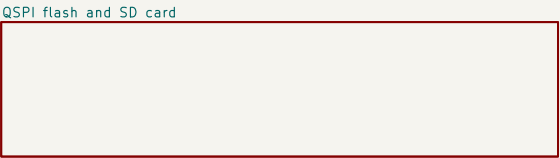

Date: Storage.kicad_sch

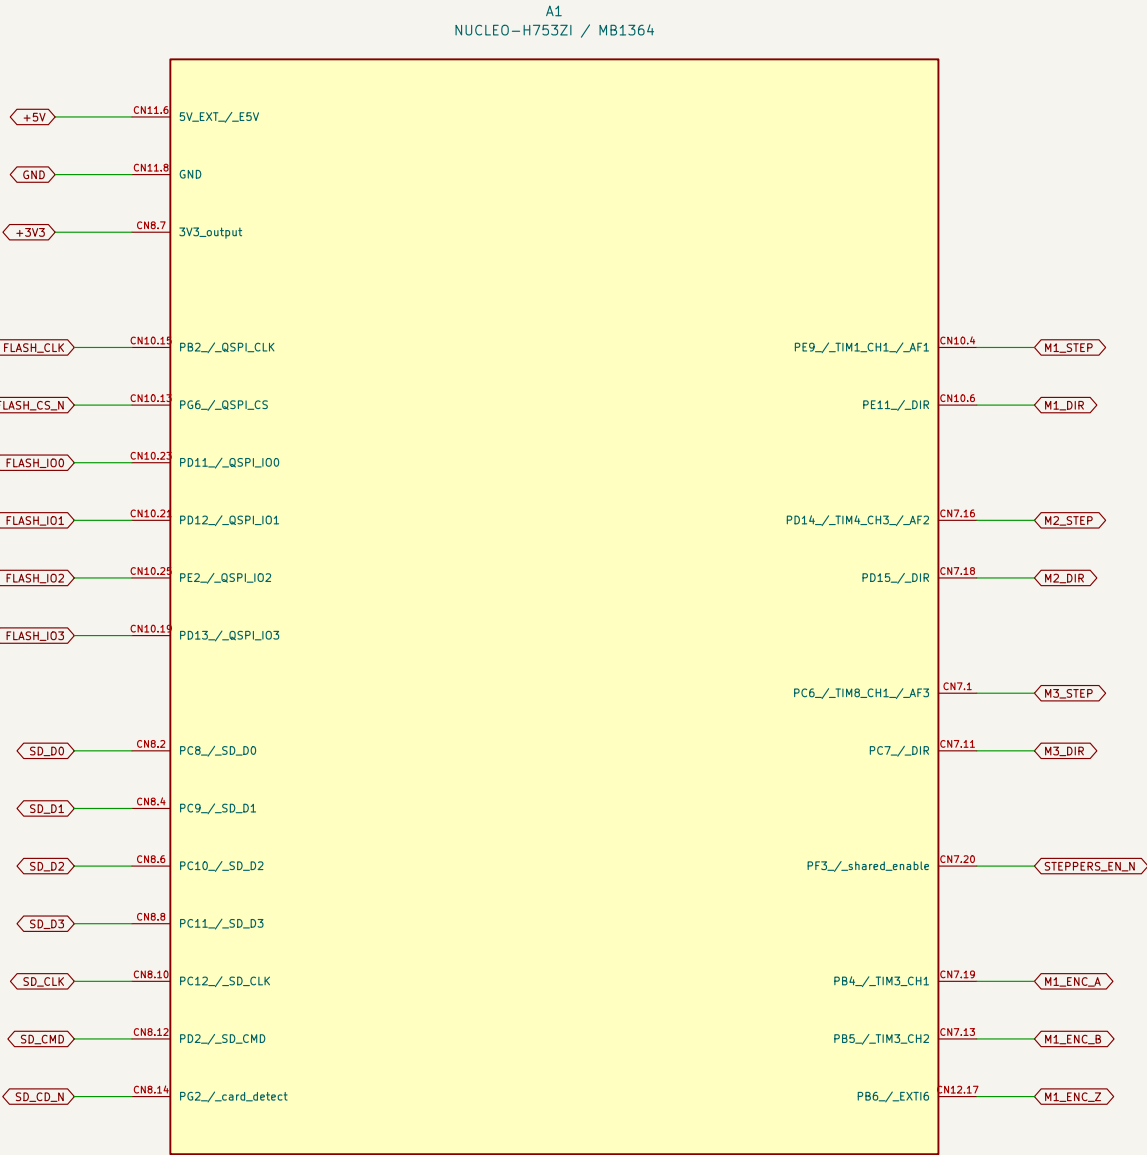

Shared names connect electrically across sheets. All STEP signals come from hardware timers.
Connector numbers on A1 mean CNxx.pin; they are not STM32 package pin numbers.

Wiring schematic | no PCB | all voltages DC

ProtoMate Control

Sheet: /
File: ProtoMate_Wiring.kicad_sch

Title: ProtoMate SCARA – Controller and power

Size: A3 Date: 2026–10–02


Rev: 1.0

KiCad E.D.A. 10.0.6


Id: 1/5

M1 – DM542T

3.3 V MCU -> 2N2222A current sinks -> 5 V optoisolated inputs

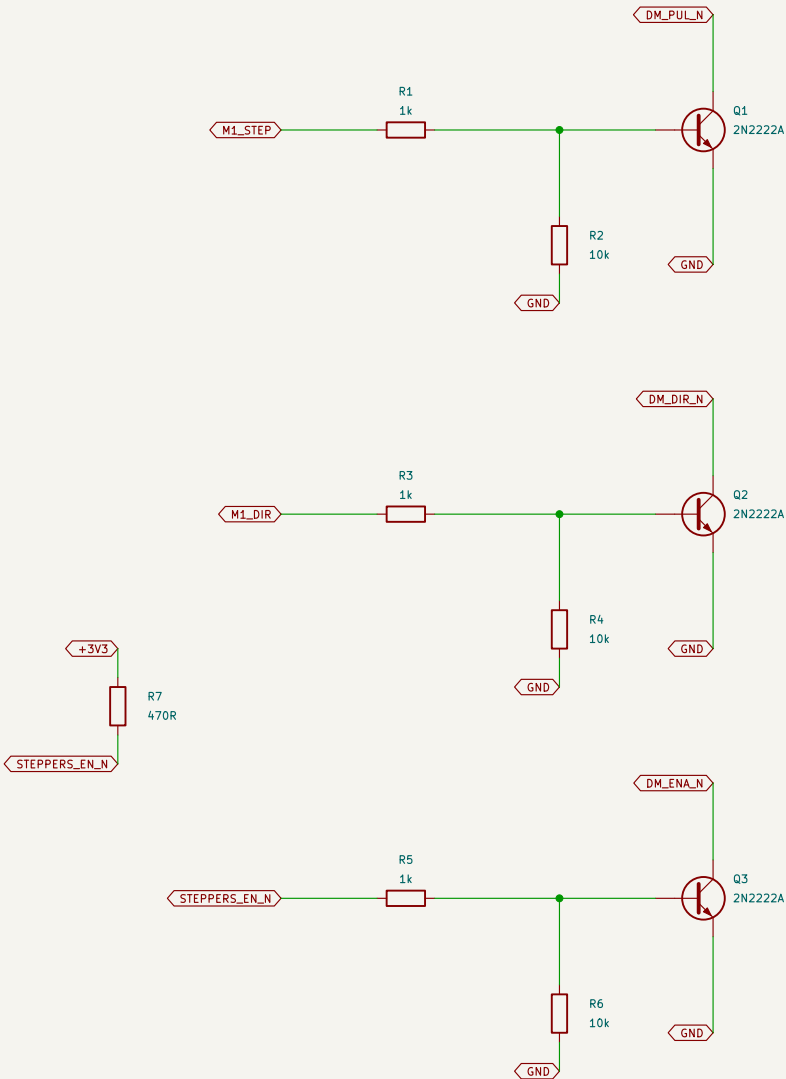

SHARED ENABLE AND TIMING
PF3 low: Q3 off, DM542T enabled, both TMC EN inputs low.
PF3 high: Q3 on, DM542T disabled, both TMC EN inputs high.
R7 pulls PF3 high during MCU reset; about 7 mA sink when enabled.
After enable, wait >=200 ms. DIR setup >=5 us; STEP high/low >=2.5 us.

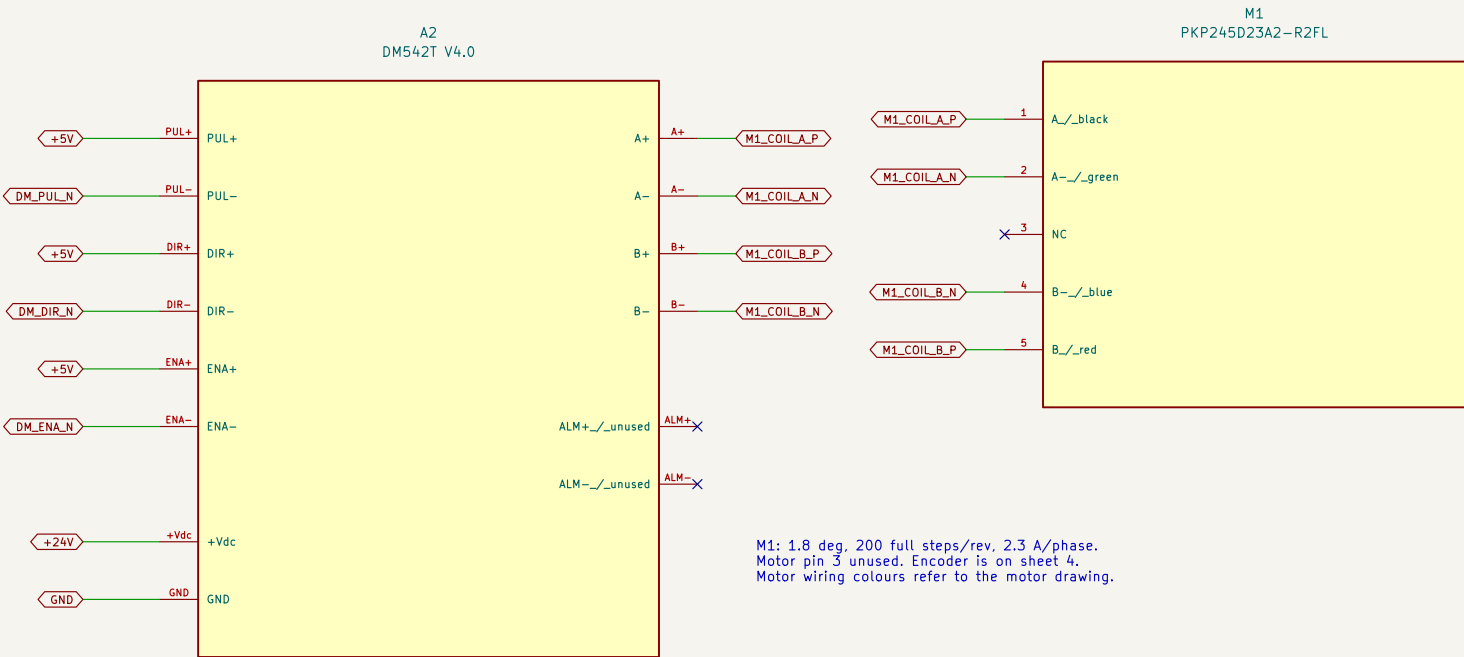

DM542T SETTINGS / INITIAL COMMISSIONING
S2 signal selector: 5 V.
1/16 step: SW5 ON, SW6 ON, SW7 OFF, SW8 ON.
3200 STEP pulses per motor revolution.
Conservative initial current: 2.03 A RMS / 2.84 A peak
SW1 ON, SW2 ON, SW3 OFF; SW4 OFF (idle reduction).
Check the actual V4.0 label before setting switches.

Q1-Q3 show functional B/C/E pins, not package lead numbers.
Verify your 2N2222A manufacturer/package before assembly.
Fit each 10k between base and emitter. Keep PUL+/PUL- paired;
separate signal cables from motor power cables.

Wiring schematic | no PCB | all voltages DC

ProtoMate Control


Sheet: /M1 – DM542T/
File: M1_DM542T.kicad_sch

Title: ProtoMate SCARA – M1 – DM542T

Size: A3	Date: 2026-10-02	Rev: 1.0
KiCad E.D.A. 10.0.6		Id: 2/5

M2 AND M3 – TMC2209

MS1 = MS2 = VDD (3.3 V): 1/16 step, 3200 pulses/rev. No MCU pins needed.
SPRD jumper open: factory StealthChop mode. Current set with each onboard potentiometer.

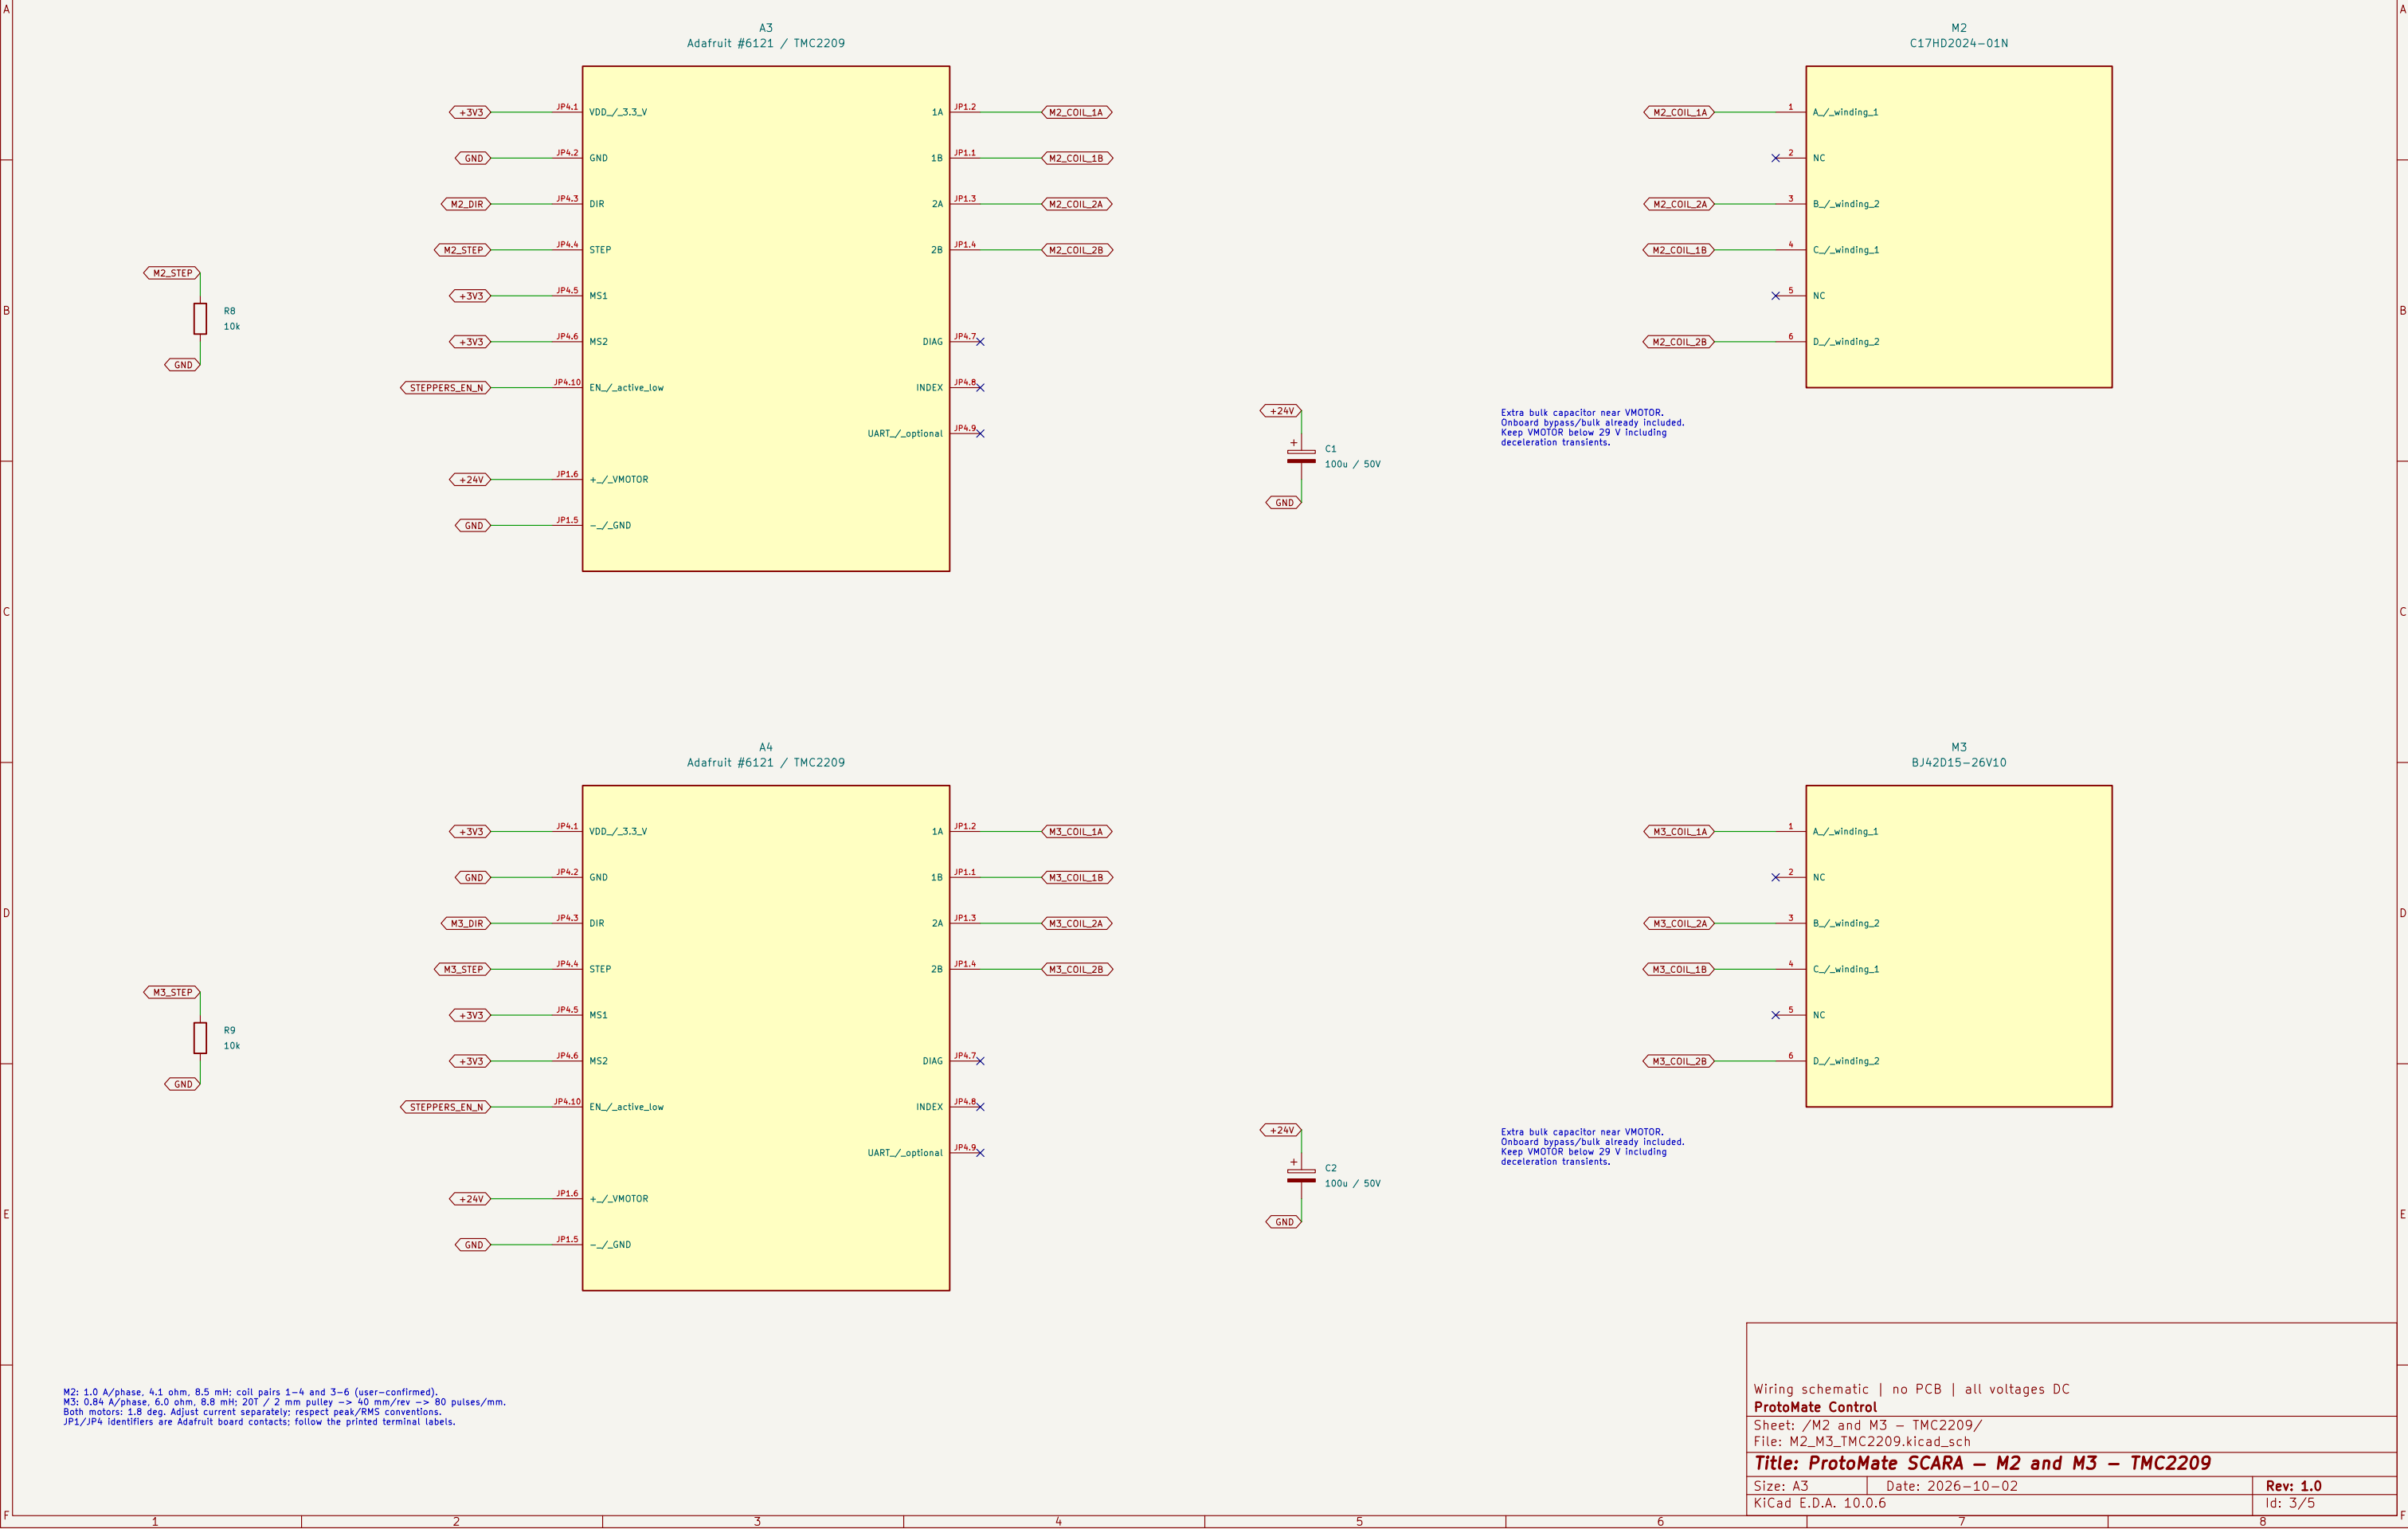

M1 – ENCODER INTERFACE

A

B

C

D

E

F

A


B

C


D

E







F

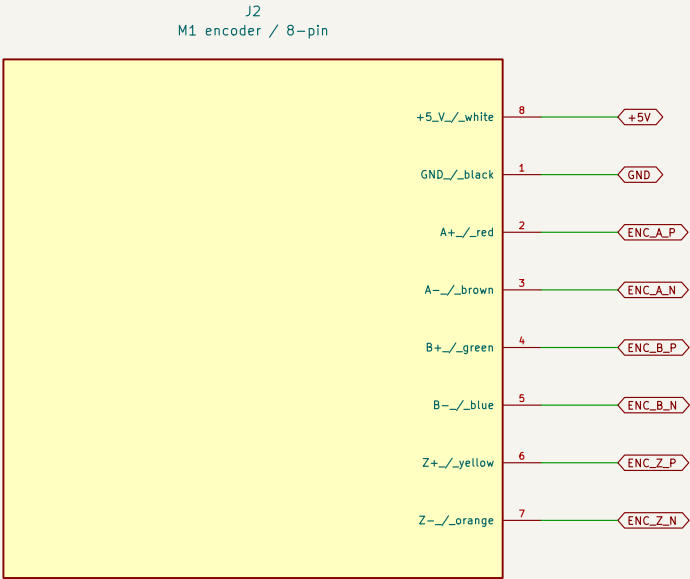

400 P/R quadrature -> TIM3 x4 = 1600 counts/rev. Z = once/rev.
Cable colours shown apply to the Oriental Motor cable.
Connector orientation: follow motor drawing/manual (not wire-side guess).
Use shielded cable; bond shield at controller chassis entry when provided.

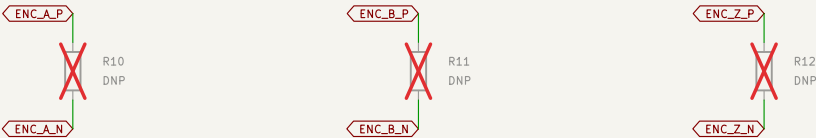

OPTIONAL RECEIVER-END TERMINATION (R10–R12)
Not fitted for initial short-cable commissioning.
Select for actual cable and encoder output capability (20 mA max).
Do not fit 120 ohm by default without checking driver loading.
A+/A–, B+/B–, Z+/Z– each use one twisted pair.

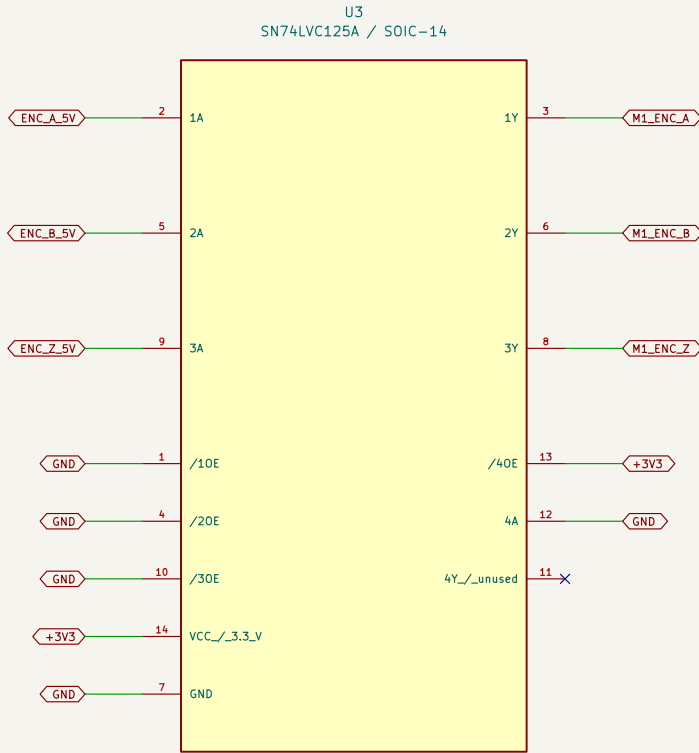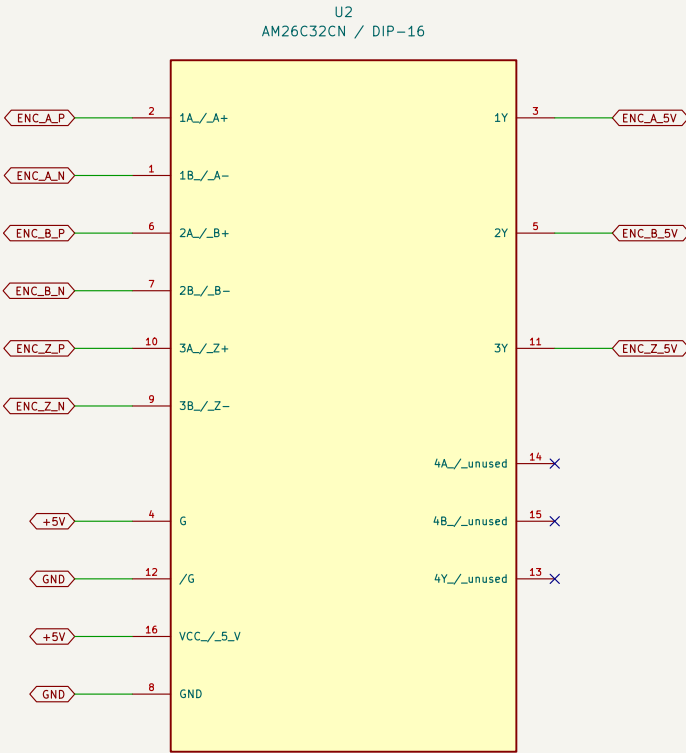

U2 needs 5 V. U3 needs 3.3 V and accepts 5 V on its inputs.
Ground U3 /OE1–/OE3. Disable its unused fourth gate as drawn.
U2 unused receiver inputs may float (documented fail–safe).
Place 100 nF directly at each IC supply; add 1 uF nearby.

A/B -> PB4/PB5 hardware quadrature counter; Z -> PB6 rising-edge EXTI.
This drawing preserves SWD; PB4 is unavailable for full JTAG reset.

Wiring schematic | no PCB | all voltages DC

ProtoMate Control

Sheet: /M1 – encoder interface/

File: M1_Encoder.kicad_sch

Title: ProtoMate SCARA – M1 – encoder interface

Size: A3

Date: 2026–10–02

Rev: 1.0


KiCad E.D.A. 10.0.6

Id: 4/5




QSPI FLASH AND SD CARD

SD pins 1–8 use standard card–contact numbering.
CD switch closes to GND when inserted (advisory input).
Pull–ups on CMD/D0–D3/CD; no pull–up on CLK.
Existing equivalent module pull–ups/caps need not be duplicated.



A5
W25Q128 / 3.3 V QSPI

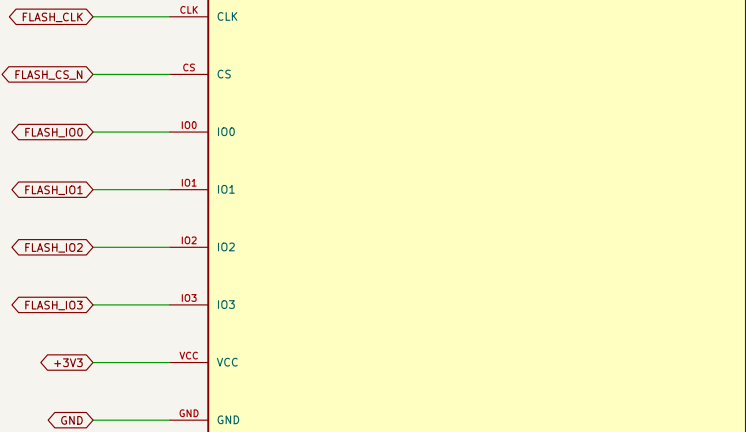

J3
microSD / 4–bit socket module

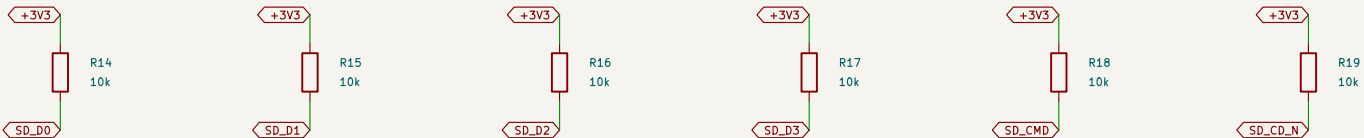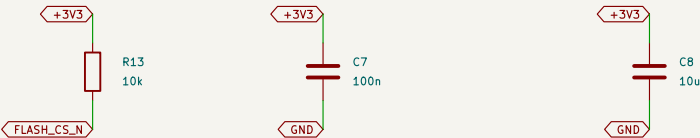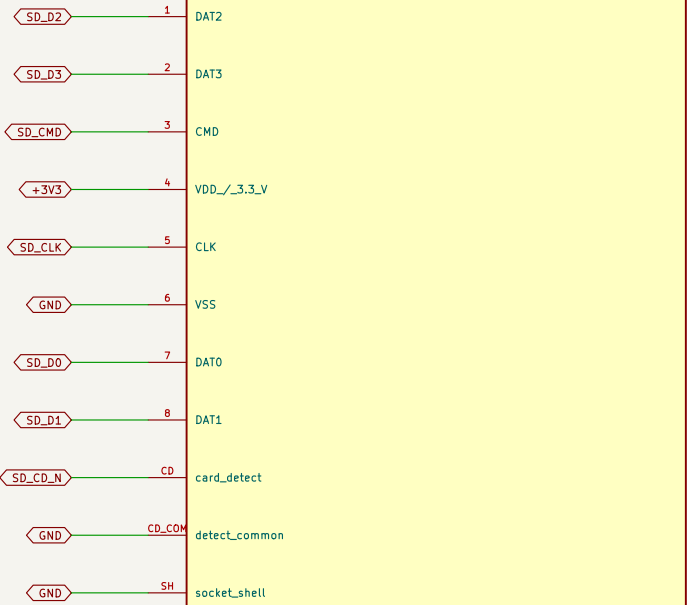

3.3 V ONLY
Use a W25Q128 module exposing IO0–IO3.
IO2/WP and IO3/HOLD are data in quad mode;
do not hard–wire them to supply or ground.
Module contacts are identified by signal name.
C7/C8 and R13 may already exist on the module;
fit them if absent. Keep the QSPI harness short.



Wiring schematic | no PCB | all voltages DC

ProtoMate Control

Sheet: /QSPI flash and SD card/
File: Storage.kicad_sch

Title: ProtoMate SCARA – QSPI flash and SD card

Size: A3	Date: 2026–10–02	Rev: 1.0
KiCad E.D.A. 10.0.6		Id: 5/5