


Gauges - live data for the 2018 Alfa Romeo Stelvio 2.0T

VIN ZASFAKPN5J7B88115 | cuore Gauges page | screenshot shows DEMO data | 2026-09-26

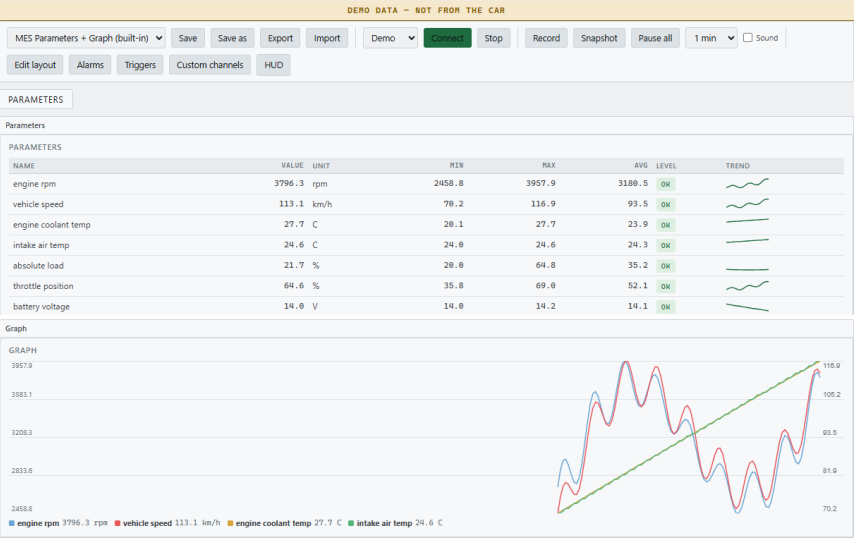

Built-in layout	Shows	Use it for
MES Parameters + Graph	Parameter table (value, min, max, avg, level, trend) and a multi-trace graph	General live data, like the MES Parameters and Graph tabs
Engine basics	RPM, speed, coolant, intake air temp, load, throttle, battery	Quick health check
Boost	MAP, barometric, computed boost (MAP minus baro)	Turbo and boost faults
EVAP job	Purge duty, fuel level, EVAP vapour pressure, stacked graphs	Watching wiTECH Test A; P0455, P0456, P0440
Transmission	TCM identifiers 04FE and 0518	ZF 8HP fluid temperature (30-50 C fill window)
TPMS	Four tiles: pressure and temperature per wheel (RFHUB)	Tyre pressures at a glance

Widget	What it is	Widget	What it is
Digital	Big number with min, max and average	Stacked	Mini graphs sharing one time axis and cursor
Bar	Linear gauge with zones and a peak marker	Scope	Fast 5 s sweep, trigger level, 3 faded sweeps
Dial	Analog gauge, green / yellow / red arcs, peak hold	Scatter	Y against X with a trail, e.g. MAP vs RPM
Line	Scrolling graph with warn and alarm bands	Table	MES-style parameter table with sparklines
Multiline	2-4 traces with their own scales, normalised mode	Tiles	Small coloured tiles, e.g. four tyres
HUD	Huge digits on black, mirror for a windshield		

Control	What it does
Layout picker, Save, Save as, Export, Import	Built-ins are read-only: use Save as to make your own. Export and Import move a layout as JSON between laptop and tablet.
Edit layout	Add widgets (type and channels), resize 1-4 x 1-3 cells, drag or use arrows to reorder, set min and max, warn and alarm bands, decimals, smoothing, time window, colours and refresh tier; add or rename pages.
Connect / Stop, Record, Snapshot	Record writes an MES-format CSV that the existing log tools read. Snapshot saves every value on the page as one row, labelled with its source.
Pause all, time window, graph mouse	Window 10 s to 10 min. On a paused graph: wheel to zoom, drag to pan, double-click to reset. Hover shows a cursor linked across graphs.
Sound, Alarms	Warn and alarm colours per widget; with Sound on, a beep and a spoken warning. The Alarms drawer logs every event with time and value.
Triggers	Rules such as boost crosses above a value, then start recording; or beep, speak, snapshot, mark. Each rule has a cooldown.
Custom channels	Torque-style formulas on a module identifier, e.g. (A*256+B)/10-40, or expressions over other channels. Checked before saving.

Bands and limits: built-in layouts only show warn and alarm bands where a value is sourced. Unknown limits are left blank rather than guessed. Check any band you add against the service manual (TechAuthority).

Open it

cuore: </v/ZASFAKPN5J7B88115/gauges> (the Gauges tab). Full-screen: </gauges/hud>.

Data sources

Live car: starts a read-only poll session (OBD Mode 01 and UDS 0x22 reads, CAN-C only). While it runs, clears and actuator tests are refused.
Replay: plays a cuore or MES CSV recording at 0.25x to 16x, with seek. Marked as replay.
Demo: simulated values under a yellow **DEMO DATA - NOT FROM THE CAR** banner.
Replay, demo and snapshots are never used as evidence from the car.

Keyboard

Space pause all **1-9** page tabs **R** record **S** snapshot **E** edit layout