SMART FALL-GUARD - HARDWARE SCHEMATIC

10 NOV 2026

SP1-HW-01 | D1 mini ESP8266 / ESP-12F | MPU6050 | USB-first + protected Li-Po power path | Rev C

1. POWER, CHARGING AND USB PROGRAMMING ISOLATION

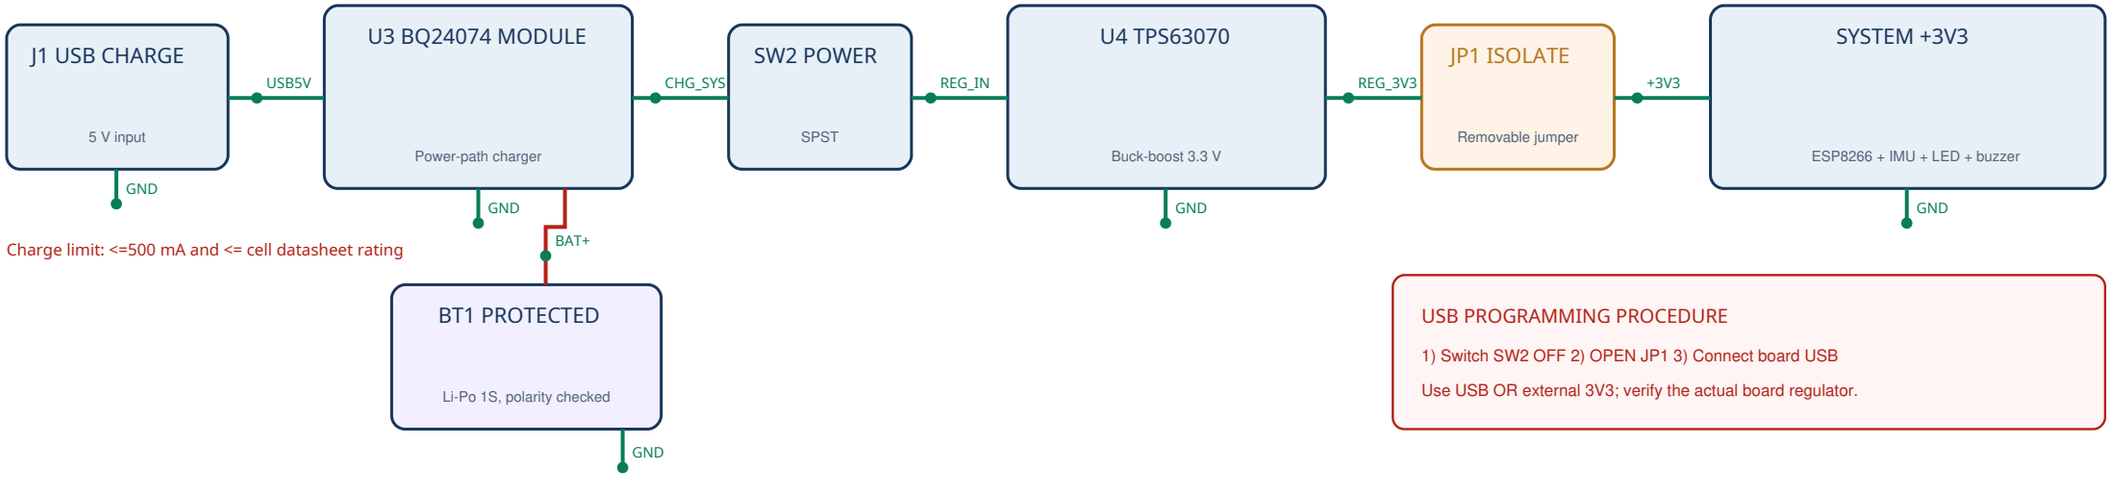

USB PROGRAMMING PROCEDURE

1) Switch SW2 OFF 2) OPEN JP1 3) Connect board USB

Use USB OR external 3V3; verify the actual board regulator.

2. CONTROLLER AND SENSOR

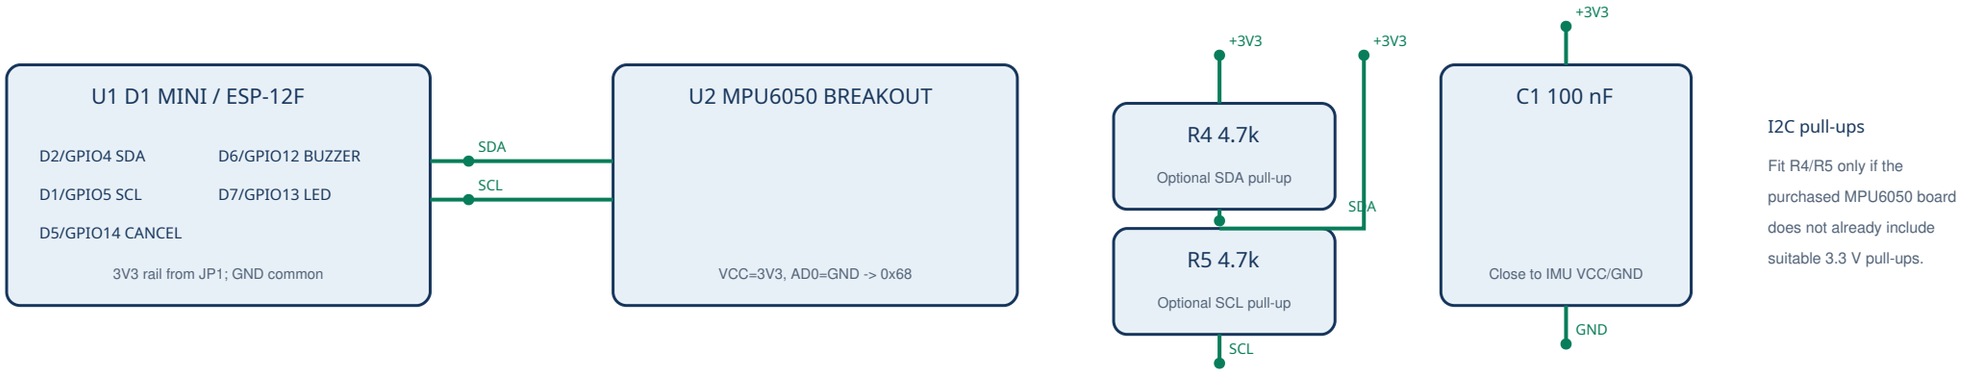

I2C pull-ups

Fit R4/R5 only if the purchased MPU6050 board does not already include suitable 3.3 V pull-ups.

3. USER INPUT, STATUS LED AND BUZZER DRIVER

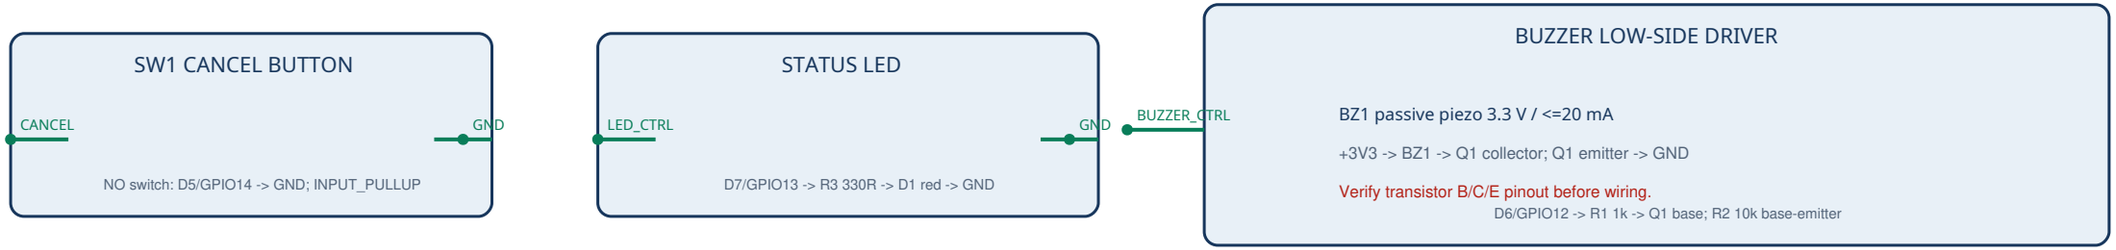

REV C: module-level design; verify actual board power/pinout. Battery modules and hardware operation are not validated.