


How it works

Explanation:

Knot is a 4 in, 4 out switch, it can be used in two ways, either by using the map controls **(A-E)**, or by using the preset pattern controls **(I-L)**. You can also use a combination of both.

1 - Map controls:

Knot features 12 map controls **(A-E)**, each one works by altering which of the 4 inputs **(F)**, maps to which of the 4 outputs **(G)**. The below table shows what each map input does.

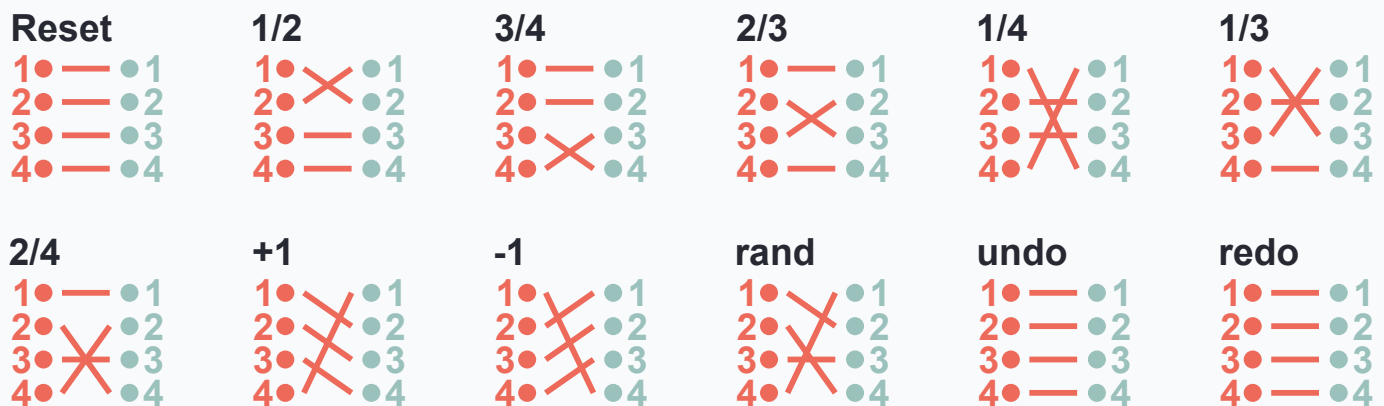

Notes:

Rand swaps the output for each input at random.

Undo will revert the last step mapping control you triggered. Up to 128 controls.

Redo will revert the last undo control you triggered, up to 128 undos.

2 - Preset pattern controls:

Knot also includes 128 preset patterns, these are accessed by using the preset pattern controls **(I-L)**.

Select your pattern using the pattern select knob **(I)**. The pattern no. screen **(j)** displays the current selected pattern.

Each pattern cycles through 1 or more mapping controls in a repeating pattern.

Advance the step of the pattern by passing a gate signal to the pattern step input **(L)**. You can reset the current pattern step back to the first step by passing a gate signal to the pattern reset input **(K)**, this also resets the state of the current input/output map.