NetXPTO - LinkPlanner

7 de Setembro de 2017

Conteúdo

1	Introduction	2
2	Simulator Structure 2.1 System	3
3	Development Cycle	4
4	Visualizer	5
5	Case Studies	6
	5.1 QPSK Transmitter	6
	5.2 Quantum Noise	8
	5.3 Continuos Variable Quantum Transmission System	14
6	Library	24
	6.1 Add	25
	6.2 Binary source	26
	6.3 Clock	30
	6.4 Decoder	32
	6.5 Discrete to continuous time	35
	6.6 Homodyne receiver	37
	6.7 IQ modulator	41
	6.8 Local Oscillator	43
	6.9 MQAM mapper	45
	6.10 MQAM transmitter	48
7	Mathlab Tools	53
	7.1 sgnToWfm	54

Introduction

Simulator Structure

LinkPlanner is a signals open-source simulator.

The major entity is the system.

A system comprises a set of blocks.

The blocks interact with each other through signals.

2.1 System

You can run the System

Development Cycle

The NetXPTO-LinkPlanner has been developed by several people using git as a version control system. The NetXPTO-LinkPlanner repository is located in the GitHub site http://github.com/netxpto/linkplanner. The more updated functional version of the software is in the branch master. Master should be considered a functional beta version of the software. Periodically new releases are delivered from the master branch under the branch name ReleaseYear

Visualizer

visualizer

Case Studies

5.1 QPSK Transmitter

This system simulates a QPSK transmitter. A schematic representation of this system is shown in figure 5.1.



Figura 5.1: QPSK transmitter block diagram.

System Input Parameters

Parameter: sourceMode

Description: Specifies the operation mode of the binary source.

Accepted Values: PseudoRandom, Random, DeterministicAppendZeros, DeterministicCyclic.

Parameter: patternLength

Description: Specifies the pattern length used my the source in the PseudoRandom mode.

Accepted Values: Integer between 1 and 32.

Parameter: bitStream

Description: Specifies the bit stream generated by the source in the DeterministicCyclic and

DeterministicAppendZeros mode.

Accepted Values: "XXX..", where X is 0 or 1.

Parameter: bitPeriod

Description: Specifies the bit period, i.e. the inverse of the bit-rate.

Accepted Values: Any positive real value.

Parameter: *iqAmplitudes*

Description: Specifies the IQ amplitudes.

Accepted Values: Any four par of real values, for instance $\{\{1,1\},\{-1,1\},\{-1,-1\},\{1,-1\}\}\$, the first

value correspond to the "00", the second to the "01", the third to the "10" and

the forth to the "11".

Parameter: numberOfBits

Description: Specifies the number of bits generated by the binary source.

Accepted Values: Any positive integer value.

Parameter: numberOfSamplesPerSymbol

Description: Specifies the number of samples per symbol.

Accepted Values: Any positive integer value.

Parameter: rollOffFactor

Description: Specifies the roll off factor in the raised-cosine filter.

Accepted Values: A real value between 0 and 1.

Parameter: impulseResponseTimeLength

Description: Specifies the impulse response window time width in symbol periods.

Accepted Values: Any positive integer value.

5.2 Quantum Noise

Introduction

This document describes a simple emission and detection system that uses coherent states as it's means?? of transmission???.

The transmitted information consists in a binary sequence which is ??translated?? in a sequence of coherent states. In this simulation, the used constellation is formed by the states $\{|\alpha\rangle, |i\alpha\rangle, |-\alpha\rangle, |-i\alpha\rangle\}$, in which α is defined as $\langle n\rangle = |\alpha|^2$ ($\langle n\rangle$ is the expected number of photons in a state). (METER MELHOR)

One of the main effects studied in this system is quantum noise, which is an intrinsic effect?? to coherent states(VER MARK FOX). In principle???? (VER REFERENCIAS) the variance of a coherent state is given by $\Delta X_1 \Delta X_2 = \frac{1}{4}$.

But, given that we combine two photocurrents to obtain an output current, then the total noise will have a combined value of SOMETHING??? Procurar referencias.

Therefore, assuming Gaussian?? (WHY GAUSSIAN?) shot noise, for each quadrature we want $Var(X_i) = \frac{1}{4}$????? (TENHO DE PROCURAR REFERENCIAS)

In this simulation, we introduce quantum noise in the photodiodes. We know that a coherent state has an expected number of photons distributed by a Poisson distribution, which has an average number equal to it's variance. Therefore, when the photodiode detects the power of signal, which is proportional to the number of photons, then it's variance must also be proportional to the number of photons.

In fact the last step in detecting the resulting signal introduces an difference between currents, but that only will increase the variance. Assuming the independence between detections, and it's intrinsic noise (PROCURAR MELHOR PALEIO), then:

$$Var(I_{out}) = Var(I_1) + Var(I_2)$$

Therefore, the best result we can achieve will be $Var(X) = \frac{1}{4}$???? (PROCURAR PALEIO SOBRE ISTO)

Functional Description

The simulation setup is described by diagram in figure 5.2. We start by generating a state from one of the four available ones.???? Then, the signal is received in a Hybrid

Detector??? where the signal is compared with a local oscillator giving four different signals in it's output. Two of those signals are detected by a photodiode which output will be the difference of the two photocurrents. The other two signals will be also be detected by another photodiode, which will obtain the other quadrature of the signal.????? (TEM QUE FICAR MELHOR EXPLICADO).

System Blocks	netxpto Blocks
-	MQAM
-	LocalOscillator
-	Hybrid??
-	Photodiode??
-	Sampler ??



Figura 5.2: Overview of the optical system being simulated.

Required files

Header Files

File	Description
netxpto.h	Generic purpose simulator definitions.
m_qam_transmitter.h	_
local_oscillator.h	Generates continuous coherent signal.
optical_hybrid.h	—
photodiode.h	—
sampler.h	_
sink.h	Closes any unused signals.

Source Files

File	Description
netxpto.cpp	Generic purpose simulator definitions.
m_qam_transmitter.cpp	_
local_oscillator.cpp	Generates continuous coherent signal.
optical_hybrid.cpp	_
photodiode.cpp	_
sampler.cpp	_
sink.cpp	Closes any unused signals.

System Input Parameters

This system takes into account the following input parameters:

System	Description
Parameters	
numberOfBitsGener	a Gi ves the number of bits to be simulated
bitPeriod	Sets the time between adjacent bits
wavelength	Sets the wavelength of the local oscillator in the MQAM????
samplesPerSymbol	Establishes the number of samples each bit in the string is given
localOscillatorPowe	rßets the optical power, in units of W, of the local oscillator inside
	the MQAM
localOscillatorPowe	ræets the optical power, in units of W, of the local oscillator used for
	Bob's measurements
localOscillatorPhase	Sets the initial phase of the local oscillator used in the detection
transferMatrix	Sets the transfer matrix of the beam splitter used in the homodyne
	detector
responsivity	Sets the responsivity of the photodiodes used in the homodyne
	detectors
bufferLength	Sets the length of the buffer used in the signals
iqAmplitudeValues	Sets the amplitude of the states used in the MQAM????
shotNoise	Chooses if quantum shot noise is used in the simulation
samplesToSkip	Sets the number of samples to skip when writing out some of the
	signal files.

Inputs

This system takes no inputs.

Outputs

The system outputs the following objects:

Parameter: Signals:

Description: Binary Sequence used in the MQAM; (S_0) **Description:** Local Oscillator used in the MQAM; (S_1) **Description:** Local Oscillator used in the detection; (S_2) **Description:** Optical Hybrid Outputs; (S_3, S_4, S_5, S_6)

Description: In phase Photodiode output; (S₇) **Description:** Quadrature Photodiode output; (S₈)

Description: In phase Sampler output; (S_9)

Description: Quadrature Sampler output; (S_{10})

Simulation Results

The objective of this simulation was to get the (quantum noise???) associated to the detection of coherent states.



Figura 5.3: Simulation of a constellation of 4 states (n = 100)

We expect that the variance is invariant with the number of photons sent from Alice. The plot in 5.4 show that the simulation also shows this invariance with the number of photons.



Figura 5.4: Simulation of the variance of n.

We can conclude that the expected variance will give us $Var(X) = \frac{1}{2}$. The results obtained in our simulations are in accordance with the theoretical prevision???

Known Problems

1. —-

5.3 Continuos Variable Quantum Transmission System

In this section a continuous varible quantum transmission system is analyzed. The results here presented follow closely the [1]. In [1], the security of a continuous variable quantum key distribution (CV-QKD) system is studied theoretically, here we complete that theoretical study with simulations results.



Figura 5.5: State constellation

The state constellation used in the system is presented in Figure 5.5. The emitter (usually named Alice) is going to use two basis, the $45^{\rm o}$ base and the $-45^{\rm o}$ base. In the $45^{\rm o}$ base, Alice sends one of two values, 1 and -1, which correspond to the states $|\alpha\rangle$ and $|-\alpha\rangle$. In the $-45^{\rm o}$ base, Alice can also send one of two values, 1 and -1, which correspond to the states $|-i\alpha\rangle$ and $|i\alpha\rangle$. At the end Alice is going to send one of the four states $|\alpha\rangle$, $|-\alpha\rangle$, $|-i\alpha\rangle$, and $|i\alpha\rangle$, with equal probability.

Because we don't know \grave{a} prior which state is going be transmitted, neither which basis is going to be used, and to incorporate our "ignorance" in the system description, we can work with the density operator. The density operator is a proper tool to describe "statistical mixtures". A "statistical mixtures" is one state, from a possible set, but we don't know which state it is. There is no state superposition.

Since all states have the same probability of occurring, the state density operator is given by:

$$\hat{\rho} = \frac{1}{4} \left(|\alpha\rangle \langle \alpha| + |-\alpha\rangle \langle -\alpha| + |i\alpha\rangle \langle i\alpha| + |-i\alpha\rangle \langle -i\alpha| \right). \tag{5.1}$$

The probability to detect at the receiver the state $|\alpha\rangle$ is given by

$$P(\alpha) = \langle \alpha | \, \hat{\rho} \, | \alpha \rangle = \frac{1}{4}. \tag{5.2}$$

Note that the density operator is equivalent to the wave function in terms of the system description.

From the receiver perspective, i.e. from the Bob perspective, and after knowing the base used by Alice. The density operator can be reduce to,

$$\hat{\rho}_1 = \frac{1}{2} \left(|\alpha\rangle \langle \alpha| + |-\alpha\rangle \langle -\alpha| \right), \tag{5.3}$$

$$\hat{\rho}_2 = \frac{1}{2} \left(|i\alpha\rangle \langle i\alpha| + |-i\alpha\rangle \langle -i\alpha| \right). \tag{5.4}$$

where 1 corresponds to the 45° base and -1 corresponds to -45° .

Single Base Homodyne Detection

The probability of obtaining a quadrature $\hat{X}_{\phi} = \hat{X}_1 \cos \phi + \hat{X}_2 \sin \phi$ when measuring the coherent state $|\alpha\rangle$ is given by the following gaussian distribution:

$$|\langle X_{\phi} | \alpha \rangle|^2 = \sqrt{\frac{2}{\pi}} e^{-2(X_{\phi} - \alpha \cos \phi)^2}, \tag{5.5}$$

We can define the "correct"and "wrong"basis measurement probability density, respectively, as:

$$\langle X_i | \hat{\rho}_j | X_i \rangle = \begin{cases} \frac{1}{\sqrt{2\pi}} \left(e^{-2(X_i - \alpha)^2} + e^{-2(X_i + \alpha)} \right), & i = j \\ \sqrt{\frac{2}{\pi}} e^{-2X_i^2}, & i \neq j \end{cases}$$
(5.6)

The post selection efficiency (PSE) can be defined as the probability of a measurement in the correct basis yields a result that satisfies the limit value X_0 :

$$P(X_{0}, \alpha) = \int_{-\infty}^{-X_{0}} \langle X_{1} | \hat{\rho}_{1} | X_{1} \rangle dX_{1} + \int_{X_{0}}^{\infty} \langle X_{1} | \hat{\rho}_{1} | X_{1} \rangle dX_{1}$$

$$= \frac{1}{2} \left[\operatorname{erfc}(\sqrt{2}(X_{0} + \alpha)) + \operatorname{erfc}(\sqrt{2}(X_{0} - \alpha)) \right].$$
(5.7)

The bit error rate (BER) is the normalized probability of, after choosing the correct basis, obtaining the wrong bit value:

$$Q(X_0, \alpha) = \frac{1}{P(X_0, \alpha)} \int_{-\infty}^{-X_0} |\langle X_i | \alpha \rangle| dX_i = \frac{\operatorname{erfc}\left(\sqrt{2}(X_0 + \alpha)\right)}{2P(X_0, n)}$$
(5.8)

Double Homodyne setup

In our proposed double homodyne protocol both quadratures are measured simultaneously, as such the concept of correct and wrong basis measurements has no value. Our protocol also makes use of a locally generated Local Oscillator (LO), obtained from a different laser than the one used to generate the signal, thus we have to take into account the phase drift between both lasers. High intensity reference pulses are sent periodically to allow for an



Figura 5.6: BER and PSE in function of α for the single homodyne setup. $X_0 = 1$ was used

estimation of the phase drift. The double homodyne setup requires the signal to be divided into the two utilized detectors, so each measurement is made on a coherent state with half the amplitude of the incoming signal $\alpha \to \frac{\alpha}{\sqrt{2}}$

For each incoming pulse we measure quadratures X_{ϕ} and Y_{ϕ} . ϕ has contributions from both the encoded angle, θ , and the phase difference between lasers, ϵ , we assume $\phi = \theta + \epsilon$. On the reference pulses no phase is encoded, that is $\theta = 0$, thus ϵ can be estimated. Assuming ϵ doesn't change between a reference pulse and the following signal pulse, the measured quadratures can be cast into the originally sent quadratures X_{θ} and Y_{θ} via:

$$X_{\theta} = X_{\phi} \cos \epsilon - Y_{\phi} \sin \epsilon$$

$$Y_{\theta} = X_{\phi} \sin \epsilon + Y_{\phi} \sin \epsilon$$
(5.9)

Assuming an announcement of the coding basis, the density operators (5.3) and (5.4) still apply. We can now define the probability density of obtaining results X_{θ} and Y_{θ} , assuming

a state in the X_1 base was sent, as:

$$\langle X_{\theta} | \hat{\rho}_1 | X_{\theta} \rangle = \frac{\sqrt{\frac{2}{\pi}}}{4} \left(e^{-2\left(x_{\theta} - \frac{\alpha}{\sqrt{2}}\cos\theta\right)^2} + e^{-2\left(x_{\theta} + \frac{\alpha}{\sqrt{2}}\cos\theta\right)^2} \right), \tag{5.10}$$

$$\langle Y_{\theta}|\hat{\rho}_{1}|Y_{\theta}\rangle = \frac{\sqrt{\frac{2}{\pi}}}{4} \left(e^{-2\left(y_{\theta} - \frac{\alpha}{\sqrt{2}}\sin\theta\right)^{2}} + e^{-2\left(y_{\theta} + \frac{\alpha}{\sqrt{2}}\sin\theta\right)^{2}} \right). \tag{5.11}$$

Now each state needs to satisfy two limit values, X_0 and Y_0 , to be accepted. Thus, the PSE is now defined as:

$$P_{DH}(X_{0}, Y_{0}, \alpha) = \int_{-\infty}^{-X_{0}} \langle X_{\theta} | \hat{\rho}_{1} | X_{\theta} \rangle dx_{\theta} \int_{-\infty}^{-Y_{0}} \langle Y_{\theta} | \hat{\rho}_{1} | Y_{\theta} \rangle dy_{\theta} + \int_{X_{0}}^{\infty} \langle X_{\theta} | \hat{\rho}_{1} | X_{\theta} \rangle dx_{\theta} \int_{Y_{0}}^{\infty} \langle Y_{\theta} | \hat{\rho}_{1} | Y_{\theta} \rangle dy_{\theta}$$

$$= \frac{1}{4} \left\{ \text{erfc} \left[\sqrt{2} \left(X_{0} - \frac{\alpha}{\sqrt{2}} \cos \theta \right) \right] + \text{erfc} \left[\sqrt{2} \left(X_{0} + \frac{\alpha}{\sqrt{2}} \cos \theta \right) \right] \right\}$$

$$\left\{ \text{erfc} \left[\sqrt{2} \left(Y_{0} - \frac{\alpha}{\sqrt{2}} \sin \theta \right) \right] + \text{erfc} \left[\sqrt{2} \left(Y_{0} + \frac{\alpha}{\sqrt{2}} \sin \theta \right) \right] \right\},$$

$$(5.12)$$

The DH subscript denotes Double Homodyne. In a somewhat similar manner, the BER is now defined as:

$$Q_{DH}(X_{0}, Y_{0}, \alpha) = \frac{1}{P_{DH}} \left(\int_{-\infty}^{-X_{0}} \left| \langle X_{\theta} | \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dx_{\theta} \int_{-\infty}^{-Y_{0}} \left| \langle Y_{\theta} | \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dy_{\theta} + \int_{X_{0}}^{\infty} \left| \langle X_{\theta} | - \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dx_{\theta} \int_{Y_{0}}^{\infty} \left| \langle Y_{\theta} | - \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dy_{\theta} \right)$$

$$= \frac{1}{2P_{DH}} \operatorname{erfc} \left[\sqrt{2} \left(X_{0} + \frac{\alpha}{\sqrt{2}} \cos \theta \right) \right] \operatorname{erfc} \left[\sqrt{2} \left(Y_{0} + \frac{\alpha}{\sqrt{2}} \sin \theta \right) \right],$$
(5.13)

note that, in this definition for BER, only values $\theta \in \left[0, \frac{\pi}{2}\right]$ make sense (the sent state was α).

Functional Description

Simplified diagrams of the systems being simulated are presented in Figures 5.8a. and 5.8b. Two optical signals are generated, one with a constant power level of 10 dBm and the other with power in multiples of the power corresponding to a single photon per sampling time $(6.4078e\times10^{-13}\,\mathrm{W}$ for a sampling time of 200 ns). The two signals are mixed, with a Balanced Beam Splitter in the single homodyne case and with a 90° Optical Hybrid in the double homodyne one, and are subsequently evaluated with recourse to Homodyne Receivers.

System Blocks	netxpto Blocks
Local Oscillator	LocalOscillator
Homodyne Receiver	I_HomodyneReceiver
Balanced Beam Splitter	BalancedBeamSplitter
90° Optical Hybrid	OpticalHybrid



- (a) PSE in function of α and θ for the double (b) BER in function of α and θ for the double homodyne setup. $X_0=1$ was used
 - Figura 5.7: Theoretical results for double homodyne setup.



Figura 5.8: Block diagrams of both simulation results presented in this report.

Required files

Header Files

File	Description
netxpto.h	Generic purpose simulator definitions.
local_oscillator.h	Generates continuous coherent signal.
balanced_beam_splitter.h	Mixes the two input signals into two outputs.
optical_hybrid.h	Mixes the two input signals into four outputs.
homodyne_reciever.h	Performs coherent detection on the input signal.
sink.h	Closes any unused signals.

Source Files

File	Description
netxpto.cpp	Generic purpose simulator definitions.
local_oscillator.cpp	Generates continuous coherent signal.
balanced_beam_splitter.cpp	Mixes the two input signals into two outputs.
optical_hybrid.cpp	Mixes the two input signals into four outputs.
homodyne_reciever.cpp	Performs coherent detection on the input signal.
sink.cpp	Closes any unused signals.

System Input Parameters

This system takes into account the following input parameters:

System Parameters	Description
numberOfBitsGenerat	ed Gives the number of bits to be simulated
bitPeriod	Sets the time between adjacent bits
samplesPerSymbol	Establishes the number of samples each bit in the string is given
localOscillatorPower_	dB&ets the optical power, in units of dBm, at the reference output
localOscillatorPower2	Sets the optical power, in units of W, of the signal
localOscillatorPhase1	Sets the initial phase of the local oscillator used for reference
localOscillatorPhase2	Sets the initial phase of the local oscillator used for signal
transferMatrix	Sets the transfer matrix of the beam splitter used in the
	homodyne detector
responsivity	Sets the responsivity of the photodiodes used in the homodyne
	detector
amplification	Sets the amplification of the trans-impedance amplifier used in
	the homodyne detector
electricalNoiseAmplit	udeSets the amplitude of the gaussian thermal noise added in the
	homodyne detector
shotNoise	Chooses if quantum shot noise is used in the simulation

Inputs

This system takes no inputs.

Outputs

The single homodyne system outputs the following objects:

Parameter: Signals:

Description: Local Oscillator Optical Reference; (S_1) **Description:** Local Oscillator Optical Signal; (S_2)

Description: Beam Splitter Outputs; (S_3, S_4)

Description: Homodyne Detector Electrical Output; (S₅)

The double homodyne system outputs the following objects:

Parameter: Signals:

Description: Local Oscillator Optical Reference; (S_1) **Description:** Local Oscillator Optical Signal; (S_2)

Description: 90° Optical Hybrid Outputs; (S_3, S_4, S_5, S_6) **Description:** Homodyne Detector Electrical Output; (S_7)

Simulation Results

Single homodyne results

The numerical results presented in Figure 5.9 were obtained with the simulation described by the block diagram in Figure 5.8a. Theoretical results are a direct trace of (5.8). One can see that the numerical results adhere quite well to the expected curve.

Double homodyne results

The numerical results presented in Figure 5.10 were obtained with the simulation described by the block diagram in Figure 5.8b. Theoretical results are a direct trace of (5.13) with $\theta = \frac{\pi}{4}$. One can see that the numerical results adhere quite well to the expected curve.

Known Problems

- 1. Homodyne Super-Block not functioning
- 2. 90° Optical Hybrid PDF needs to be written



Figura 5.9: BER in function of α for the single homodyne setup. $X_0=0$ was used



Figura 5.10: BER in function of α for the double homodyne setup. $X_0=0$ was used

Bibliografia

[1] Ryo Namiki and Takuya Hirano. Security of quantum cryptography using balanced homodyne detection. *Physical Review A*, 67(2):022308, 2003.

Library

6.1 Add

Input Parameters

This block takes no parameters.

Functional Description

This block accepts two signals and outputs one signal built from a sum of the two inputs. The input and output signals must be of the same type.

Input Signals

Number: 2

Type: Real, Complex or Complex_XY signal (ContinuousTimeContinuousAmplitude)

Output Signals

Number: 1

Type: Real, Complex or Complex_XY signal (ContinuousTimeContinuousAmplitude)

6.2 Binary source

This block generates a sequence of binary values (1 or 0) and it can work in four different modes:

1. Random

3. DeterministicCyclic

2. PseudoRandom

4. DeterministicAppendZeros

This blocks doesn't accept any input signal. It produces any number of output signals.

Input Parameters

Parameter: mode{PseudoRandom}

(Random, PseudoRandom, DeterministicCyclic, DeterministicAppendZeros)

Parameter: probabilityOfZero{0.5}

 $(real \in [0,1])$

Parameter: patternLength{7}

(integer \in [1,32])

Parameter: bitStream{"0100011101010101"}

(string of 0's and 1's)

Parameter: numberOfBits{-1}

(long int)

Parameter: bitPeriod{1.0/100e9}

(double)

Methods

BinarySource(vector\Signal *\rangle &InputSig, vector\Signal *\rangle &OutputSig) :Block(InputSig, OutputSig){};

void initialize(void);

bool runBlock(void);

void setMode(BinarySourceMode m) BinarySourceMode const getMode(void)

void setProbabilityOfZero(double pZero)

double const getProbabilityOfZero(void)

void setBitStream(string bStream)

```
string const getBitStream(void)

void setNumberOfBits(long int nOfBits)

long int const getNumberOfBits(void)

void setPatternLength(int pLength)

int const getPatternLength(void)

void setBitPeriod(double bPeriod)

double const getBitPeriod(void)
```

Functional description

The *mode* parameter allows the user to select between one of the four operation modes of the binary source.

Random Mode Generates a 0 with probability *probabilityOfZero* and a 1 with probability 1-probabilityOfZero.

Pseudorandom Mode Generates a pseudorandom sequence with period 2^{patternLength} – 1.

DeterministicCyclic Mode Generates the sequence of 0's and 1's specified by *bitStream* and then repeats it.

DeterministicAppendZeros Mode Generates the sequence of 0's and 1's specified by *bitStream* and then it fills the rest of the buffer space with zeros.

Input Signals

Number: 0

Type: Binary (DiscreteTimeDiscreteAmplitude)

Output Signals

Number: 1 or more

Type: Binary (DiscreteTimeDiscreteAmplitude)

Examples

Random Mode

PseudoRandom Mode As an example consider a pseudorandom sequence with patternLength=3 which contains a total of $7(2^3-1)$ bits. In this sequence it is possible to find every combination of 0's and 1's that compose a 3 bit long subsequence with the exception of 000. For this example the possible subsequences are 010, 110, 101, 100, 111, 001 and 100 (they appear in figure 6.1 numbered in this order). Some of these require wrap.



Figura 6.1: Example of a pseudorandom sequence with a pattern length equal to 3.

DeterministicCyclic Mode As an example take the *bit stream '0100011101010101'*. The generated binary signal is displayed in.

DeterministicAppendZeros Mode Take as an example the *bit stream '0*100011101010101'. The generated binary signal is displayed in 6.2.

Sugestions for future improvement

Implement an input signal that can work as trigger.

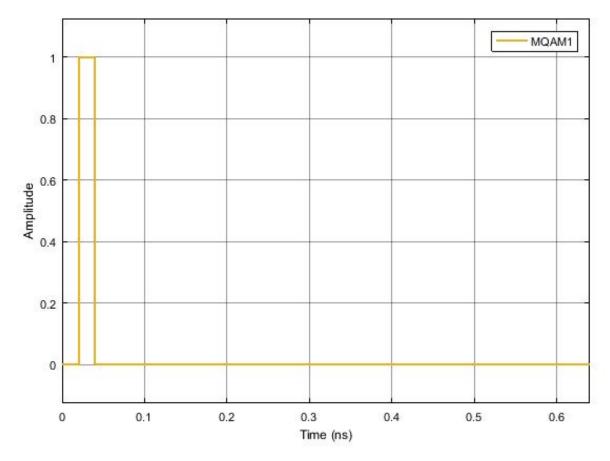


Figura 6.2: Binary signal generated by the block operating in the *Deterministic Append Zeros* mode with a binary sequence 01000...

6.3 Clock

This block doesn't accept any input signal. It outputs one signal that corresponds to a sequence of Dirac's delta functions with a user defined *period*.

Input Parameters

```
Parameter: period{ 0.0 };

Parameter: samplingPeriod{ 0.0 };

Methods

Clock()

Clock(vector<Signal *> &InputSig, vector<Signal *> &OutputSig) :Block(InputSig, OutputSig)

void initialize(void)

bool runBlock(void)

void setClockPeriod(double per)
```

Functional description

void setSamplingPeriod(double sPeriod)

Input Signals

Number: 0

Output Signals

Number: 1

Type: Sequence of Dirac's delta functions. (TimeContinuousAmplitudeContinuousReal)

Examples

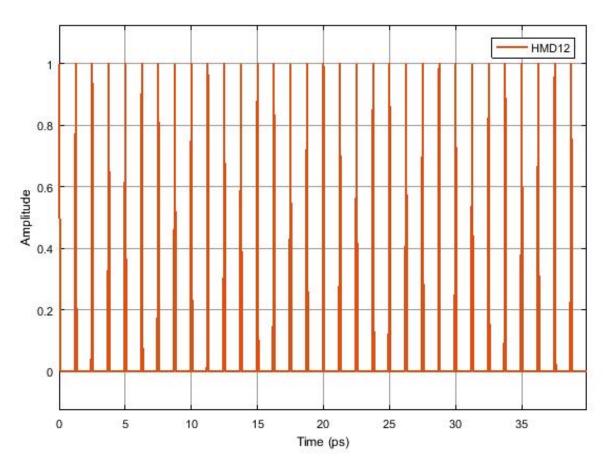


Figura 6.3: Example of the output signal of the clock

Sugestions for future improvement

6.4 Decoder

This block accepts a complex electrical signal and outputs a sequence of binary values (0's and 1's). Each point of the input signal corresponds to a pair of bits.

Input Parameters

```
Parameter: t_integer m{4}

Parameter: vector<t_complex> iqAmplitudes{{1.0, 1.0},{-1.0, 1.0},{-1.0, -1.0},{1.0, -1.0}};

Methods

Decoder()

Decoder(vector<Signal *> &InputSig, vector<Signal *> &OutputSig) :Block(InputSig, OutputSig)

void initialize(void)

bool runBlock(void)

void setM(int mValue)

void getM()

void setIqAmplitudes(vector<t_iqValues> iqAmplitudesValues)

vector<t_iqValues>getIqAmplitudes()
```

Functional description

This block makes the correspondence between a complex electrical signal and pair of binary values using a predetermined constellation.

To do so it computes the distance in the complex plane between each value of the input signal and each value of the *iqAmplitudes* vector selecting only the shortest one. It then converts the point in the IQ plane to a pair of bits making the correspondence between the input signal and a pair of bits.

Input Signals

Number: 1

Type: Electrical complex (TimeContinuousAmplitudeContinuousReal)

Output Signals

Number: 1

Type: Binary

Examples

As an example take an input signal with positive real and imaginary parts. It would correspond to the first point of the *iqAmplitudes* vector and therefore it would be associated to the pair of bits 00.



Figura 6.4: Example of the output signal of the decoder for a binary sequence 01. As expected it reproduces the initial bit stream

Sugestions for future improvement

6.5 Discrete to continuous time

This block converts a signal discrete in time to a signal continuous in time. It accepts one input signal that is a sequence of 1's and -1's and it produces one output signal that is a sequence of Dirac delta functions.

Input Parameters

```
Parameter: numberOfSamplesPerSymbol{8} (int)
```

Methods

```
DiscreteToContinuousTime(vector<Signal *> &inputSignals, vector<Signal *> &outputSignals):Block(inputSignals, outputSignals){};

void initialize(void);

bool runBlock(void);

void setNumberOfSamplesPerSymbol(int nSamplesPerSymbol)

int const getNumberOfSamplesPerSymbol(void)
```

Functional Description

This block reads the input signal buffer value, puts it in the output signal buffer and it fills the rest of the space available for that symbol with zeros. The space available in the buffer for each symbol is given by the parameter <code>numberOfSamplesPerSymbol</code>.

Input Signals

```
Number: 1
```

```
Type: Sequence of 1's and -1's. (DiscreteTimeDiscreteAmplitude)
```

Output Signals

```
Number : 1
```

Type: Sequence of Dirac delta functions (ContinuousTimeDiscreteAmplitude)

Example



Figura 6.5: Example of the type of signal generated by this block for a binary sequence 0100...

6.6 Homodyne receiver

This block of code simulates the reception and demodulation of an optical signal (which is the input signal of the system) outputing a binary signal. A simplified schematic representation of this block is shown in figure 6.6.

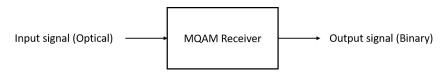


Figura 6.6: Basic configuration of the MQAM receiver

Functional description

This block accepts one optical input signal and outputs one binary signal that corresponds to the M-QAM demodulation of the input signal. It is a complex block (as it can be seen from figure 6.7) of code made up of several simpler blocks whose description can be found in the *lib* repository.

In can also be seen from figure 6.7 that there's an extra internal (generated inside the homodyne receiver block) input signal generated by the *Clock*. This block is used to provide the sampling frequency to the *Sampler*.



Figura 6.7: Schematic representation of the block homodyne receiver.

Input parameters

This block has some input parameters that can be manipulated by the user in order oto change the basic configuration of the receiver. Each parameter has associated a function that allows for its change. In the following table (table 6.2) the input parameters and corresponding functions are summarized.

Input parameters	Function	Туре	Accepted values
IQ amplitudes	setIqAmplitudes	Vector of	Example for a 4-qam
		coordinate	mapping: { { 1.0, 1.0 },
		points in the	{ -1.0, 1.0 }, { -1.0, -1.0 },
		I-Q plane	{ 1.0, -1.0 } }
Local oscillator	setLocalOscillatorOpticalPower_dB	ndouble(t_real)	Any double greater
power (in dBm)			than zero
Local oscillator	setLocalOscillatorPhase	double(t_real)	Any double greater
phase			than zero
Responsivity of the	setResponsivity	double(t_real)	∈ [0,1]
photodiodes			
Amplification (of	setAmplification	double(t_real)	Positive real number
the TI amplifier)			
Noise amplitude	setNoiseAmplitude	double(t_real)	Real number greater
(introduced by the			than zero
TI amplifier)			titati zeto
Samples to skipe	setSamplesToSkip	int(t_integer)	
Save internal signals	setSaveInternalSignals	bool	True or False
Sampling period	setSamplingPeriod	double	Givem by
			symbolPeriod/samplesPer\$

Tabela 6.1: List of input parameters of the block MQAM receiver

Methods

```
HomodyneReceiver(vector<Signal *> &inputSignal, vector<Signal *> &outputSignal) (constructor)
```

void setIqAmplitudes(vector<t_iqValues> iqAmplitudesValues)

vector<t_iqValues> const getIqAmplitudes(void)

void setLocalOscillatorSamplingPeriod(double sPeriod)

void setLocalOscillatorOpticalPower(double opticalPower)

void setLocalOscillatorOpticalPower_dBm(double opticalPower_dBm)

void setLocalOscillatorPhase(double lOscillatorPhase)

void setLocalOscillatorOpticalWavelength(double lOscillatorWavelength)

void setSamplingPeriod(double sPeriod)

 $void\ set Responsivity (t_real\ Responsivity)$

void setAmplification(t_real Amplification)

 $void\ set Noise Amplitude (t_real\ Noise Amplitude)$

 $void\ setImpulseResponseTimeLength (int\ impResponseTimeLength)$

void setFilterType(PulseShaperFilter fType)

void setRollOffFactor(double rOffFactor)

void setClockPeriod(double per)

void setSamplesToSkip(int sToSkip)

Input Signals

Number: 1

Type: Optical signal

Output Signals

Number: 1

Type: Binary signal

Example

Sugestions for future improvement

6.7 IQ modulator

This blocks accepts one inupt signal continuous in both time and amplitude and it can produce either one or two output signals. It generates an optical signal and it can also generate a binary signal.

Input Parameters

Parameter: outputOpticalPower{1e-3}

(double)

Parameter: outputOpticalWavelength{1550e-9}

(double)

Parameter: outputOpticalFrequency{speed_of_light/outputOpticalWavelength}

(double)

Methods

IqModulator(vector<Signal *> &InputSig, vector<Signal *> &OutputSig) :Block(InputSig,
OutputSig){};

```
void initialize(void);
bool runBlock(void);
void setOutputOpticalPower(double outOpticalPower)
void setOutputOpticalPower_dBm(double outOpticalPower_dBm)
void setOutputOpticalWavelength(double outOpticalWavelength)
void setOutputOpticalFrequency(double outOpticalFrequency)
```

Functional Description

This block takes the two parts of the signal: in phase and in amplitude and it combines them to produce a complex signal that contains information about the amplitude and the phase.

This complex signal is multiplied by $\frac{1}{2}\sqrt{outputOpticalPower}$ in order to reintroduce the information about the energy (or power) of the signal. This signal corresponds to an optical signal and it can be a scalar or have two polarizations along perpendicular axis. It is the signal that is transmited to the receptor.

The binary signal is sent to the Bit Error Rate (BER) meaurement block.

Input Signals

Number: 2

 $\begin{tabular}{lll} \textbf{Type} : & Sequence & of & impulses & modulated & by & the & filter \\ (Continuous Time Contious Amplitude)) & & & & \\ \end{tabular}$

Output Signals

Number: 1 or 2

Type: Complex signal (optical) (ContinuousTimeContinuousAmplitude) and binary signal (DiscreteTimeDiscreteAmplitude)

Example

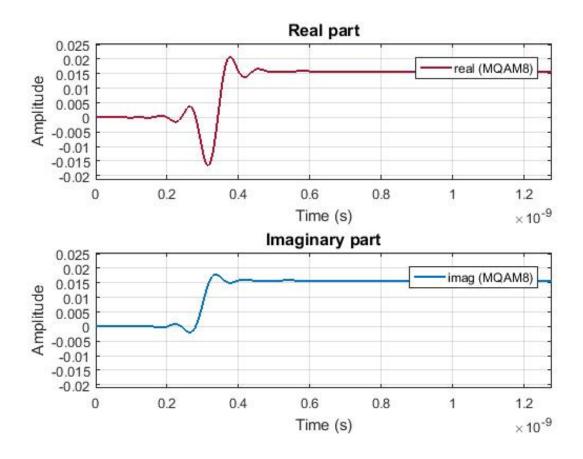


Figura 6.8: Example of a signal generated by this block for the initial binary signal 0100...

6.8 Local Oscillator

This block simulates a local oscillator which can have shot noise or not. It produces one output complex signal and it doesn't accept input signals.

Input Parameters

```
Parameter: opticalPower{ 1e-3 }
Parameter: wavelength{ 1550e-9 }
Parameter: frequency{ SPEED_OF_LIGHT / wavelength }
Parameter: phase{ 0 }
Parameter: samplingPeriod{ 0.0 }
Parameter: shotNoise{ false }
```

Methods

```
LocalOscillator()

LocalOscillator(vector<Signal *> &InputSig, vector<Signal *> &OutputSig)
:Block(InputSig, OutputSig){};

void initialize(void);

bool runBlock(void);

void setSamplingPeriod(double sPeriod);

void setOpticalPower(double oPower);

void setOpticalPower_dBm(double oPower_dBm);

void setWavelength(double wlength);

void setPhase(double lOscillatorPhase);
```

Functional description

void setShotNoise(bool sNoise);

This block generates a complex signal with a specified phase given by the input parameter *phase*.

It can have shot noise or not which corresponds to setting the *shotNoise* parameter to True or False, respectively. If there isn't shot noise the output of this block is given by $0.5 * \sqrt{OpticalPower} * ComplexSignal$. If there's shot noise then a random gaussian distributed noise component is added to the *OpticalPower*.

Input Signals

Number: 0

Output Signals

Number: 1

Type: Optical signal

Examples

Sugestions for future improvement

6.9 MQAM mapper

This block does the mapping of the binary signal using a *m*-QAM modulation. It accepts one input signal of the binary type and it produces two output signals which are a sequence of 1's and -1's.

Input Parameters

```
Parameter: m{4}
```

(m should be of the form 2^n with n integer)

Parameter: iqAmplitudes{{ 1.0, 1.0 }, { -1.0, 1.0 }, { -1.0, -1.0 }, { 1.0, -1.0 }}

Methods

```
MQamMapper(vector<Signal *> &InputSig, vector<Signal *> &OutputSig)
:Block(InputSig, OutputSig) {};

void initialize(void);

bool runBlock(void);

void setM(int mValue);

void setIqAmplitudes(vector<t_iqValues> iqAmplitudesValues);
```

Functional Description

In the case of m=4 this block atributes to each pair of bits a point in the I-Q space. The constellation used is defined by the *iqAmplitudes* vector. The constellation used in this case is ilustrated in figure 6.9.

Input Signals

```
Number: 1
```

Type: Binary (DiscreteTimeDiscreteAmplitude)

Output Signals

Number: 2

Type: Sequence of 1's and -1's (DiscreteTimeDiscreteAmplitude)

Example

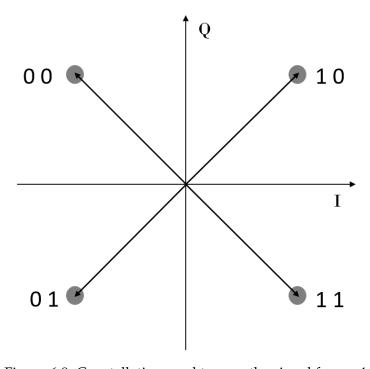


Figura 6.9: Constellation used to map the signal for m=4



Figura 6.10: Example of the type of signal generated by this block for the initial binary signal 0100...

6.10 MQAM transmitter

This block generates a MQAM optical signal. It can also output the binary sequence. A schematic representation of this block is shown in figure 6.11.



Figura 6.11: Basic configuration of the MQAM transmitter

Functional description

This block generates an optical signal (output signal 1 in figure 6.12). The binary signal generated in the internal block Binary Source (block B1 in figure 6.12) can be used to perform a Bit Error Rate (BER) measurement and in that sense it works as an extra output signal (output signal 2 in figure 6.12).



Figura 6.12: Schematic representation of the block MQAM transmitter.

Input parameters

This block has a special set of functions that allow the user to change the basic configuration of the transmitter. The list of input parameters, functions used to change them and the values that each one can take are summarized in table 6.2.

Input parameters	Function	Туре	Accepted values
Mode	setMode()	string	PseudoRandom Random DeterministicAppendZeros DeterministicCyclic
Number of bits generated	setNumberOfBits()	int	Any integer
Pattern length	setPatternLength()	int	Real number greater than zero
Number of bits	setNumberOfBits()	long	Integer number greater than zero
Number of samples per symbol	setNumberOfSamplesPerSymb	o l() t	Integer number of the type 2^n with n also integer
Roll of factor	setRollOfFactor()	double	∈ [0,1]
IQ amplitudes	setIqAmplitudes()	Vector of coordinate points in the I-Q plane	Example for a 4-qam mapping: { { 1.0, 1.0 }, { -1.0, 1.0 }, { -1.0, -1.0 },
Output optical power	setOutputOpticalPower()	int	Real number greater than zero
Save internal signals	setSaveInternalSignals()	bool	True or False

Tabela 6.2: List of input parameters of the block MQAM transmitter

Methods

```
MQamTransmitter(vector<Signal *> &inputSignal, vector<Signal *> &outputSignal);
(constructor)

void set(int opt);
```

(1 //

void setMode(BinarySourceMode m)

BinarySourceMode const getMode(void)

void setProbabilityOfZero(double pZero)

double const getProbabilityOfZero(void)

void setBitStream(string bStream)

string const getBitStream(void)

void setNumberOfBits(long int nOfBits) long int const getNumberOfBits(void) void setPatternLength(int pLength) int const getPatternLength(void) void setBitPeriod(double bPeriod) double const getBitPeriod(void) void setM(int mValue) int const getM(void) void setIqAmplitudes(vector<t_iqValues> iqAmplitudesValues) vector<t_iqValues> const getIqAmplitudes(void) void setNumberOfSamplesPerSymbol(int n) int const getNumberOfSamplesPerSymbol(void) void setRollOffFactor(double rOffFactor) double const getRollOffFactor(void) void setSeeBeginningOfImpulseResponse(bool sBeginningOfImpulseResponse) double const getSeeBeginningOfImpulseResponse(void) void setOutputOpticalPower(t_real outOpticalPower) t_real const getOutputOpticalPower(void) void setOutputOpticalPower_dBm(t_real outOpticalPower_dBm) t_real const getOutputOpticalPower_dBm(void)

Output Signals

Number: 1 optical and 1 binary (optional)

Type: Optical signal

Example



Figura 6.13: Example of the binary sequence generated by this block for a sequence 0100...

Sugestions for future improvement

Add to the system another block similar to this one in order to generate two optical signals with perpendicular polarizations. This would allow to combine the two optical signals and generate an optical signal with any type of polarization.

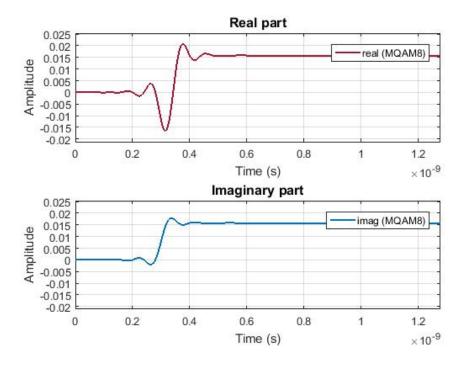


Figura 6.14: Example of the output optical signal generated by this block for a sequence 0100...

Capítulo 7

Mathlab Tools

7.1 sgnToWfm

This function will build a WFM file given an input signal filename.

Functional Description

This Matlab function converts signals produced by the simulator (files with the extension .sgn) to waveforms (files with the extension .wfm). This waveform files can be read, and later on, outputted by the Arbitrary Waveform Generator (AWG). The AWG we will be using is the Tekatronix AWG70002A witch has the following key specifications:

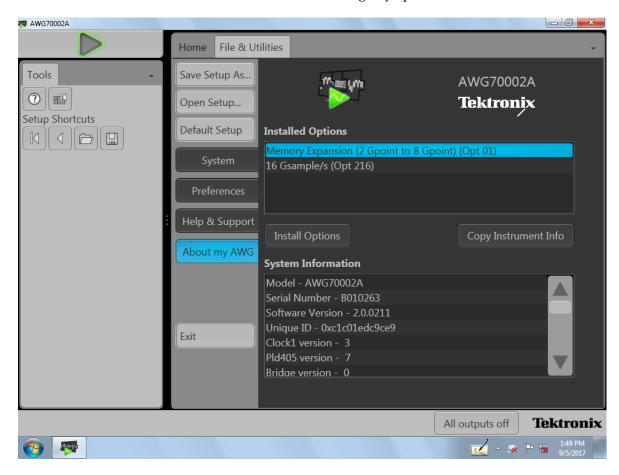


Figura 7.1: AWG70002A key performance specifications

Sampling rate up to 16 GS/s: This is the most important spec because it determines the maximum sampling rate that your signal can have. It must not , in this case be over 16 GS/s or else the AWG will not be able to recreate it appropriately.

8 GSample waveform memory: This determines how many data points you can have in your signal. So your signal must not have more than 8G points.

10 bit vertical resolution: This determines how accurate the Digital to Analog converter is. The 10 bits corresponds to 1024 levels, considering that the max range of the signal peek to peek is 500 mV, then each level is separated by approximately 0.5 mV. You may also use 9 bits with 1 marker and 8 bits with 2 markers.

After making sure this specifications are respected you can create your waveform using this function. When you load your waveform, the AWG will output the waveform created and will repeat it constantly until you stop playing it.

Inputs

The function requires only one input, a string with the name of the signal file that will be converted.

Type: Real signal (Continuous Time Continuous Amplitude Real)

Output

If specified correctly the function will return six variables in the Matlab workspace, as well as creating a waveform file in the current folder. Those variables are:

data: A vector with the waveform data.

symbolPeriod: Equal to the symbol period of the corresponding signal

samplingPeriod: Sampling period of the signal.

type: A string with the name of the signal type.

numberOfSymbols: Number of symbols retrieved from the signal.

samplingRate: This is equal to the sampling rate of the signal.

The samplingRate variable should be noted as it will be important later on.

Tutorial - Loading a signal to the AWG

- **1. Using the function sgnToWfm**: Start up Matlab and change your current folder to mtools and add the signals folder that you want to convert to the Matlab search path. Use the function accordingly, putting as the input parameter the signal file you want to convert.
- 2. AWG sampling rate: After calling the function there should be waveform file in the

mtools folder, as well as a variable called samplingRate in the Matlab workspace. Make sure this is equal or bellow the maximum sampling frequency of the AWG (16 GS/s), or else the waveform can not be equal to the original signal. If it is higher you have to adjust the parameters in the simulation in order to decrease the sampling frequency of the signal(i.e. decreasing the bit period or reducing the samples per symbol).

3. Loading the waveform file to the AWG: Copy the waveform file to your pen drive and connect it to the AWG. With the software of the awg open, go to browse waveforms, and select the waveform file you created (Figure 7.2).

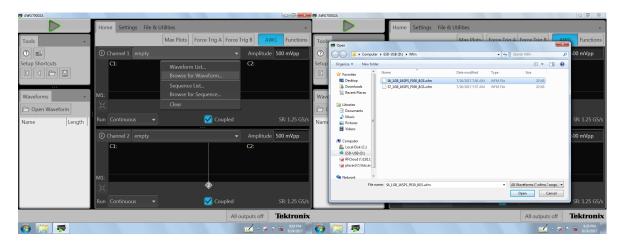


Figura 7.2: Selecting your waveform in the AWG

Now you should have the waveform displayed on the screen. Although it has the same shape, the waveform might not match the signal timing wise due to an incorrect sampling rate configured in the AWG. In this example (Figure 7.3), the original signal has a sample rate of 8 GS/s and the AWG is configured to 1.25 GS/s. Therefore it must be changed to the correct value.

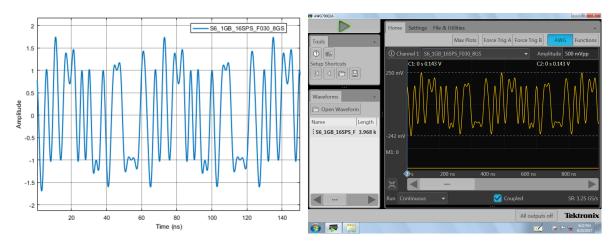


Figura 7.3: Comparison between the waveform in the AWG and the original signal before configuring the sampling rate

To do this go to the settings tab, clock settings, and change the sampling rate to be equal to the one of the original signal, 8 GS/s (Figure 7.4).



Figura 7.4: Configuring the right sampling rate

Compare the waveform in the AWG with the original signal, they should be identical (Figure 7.5).

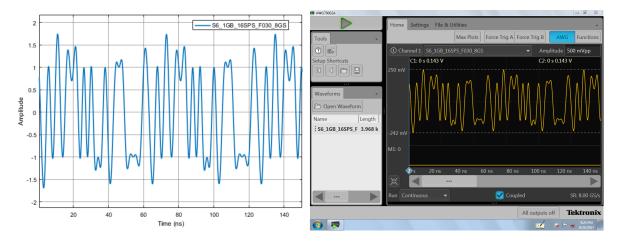


Figura 7.5: Comparison between the waveform in the AWG and the original signal after configuring the sampling rate

4. Generate the signal: Output the wave by enabling the channel you want and clicking on the play button.