

EE4615 Digital IC II

Corner Analysis Manual

This document briefly shows how to simulate with a different corner from your Analog Design Environment simulation setup window.

[center]caption

1 | Corner Analysis

1.1 Brief Instructions

1. Setup/open your testbench schematic.
2. Ensure that the schematic is (extracted,) checked and saved (shortcut: shift + X).
3. From your schematic, Launch-> ADE L/ADE Explorer will launch a test environment.
4. Setup your ADE test analyses, variables and outputs of interest. At this point, you can save your test as a cellview which can be recalled from the library when needed. To save the state: Session-> save state -> cellview. To load an already saved test state: Session-> load state -> cellview -> view name.
5. Now when you run a simulation, it is run in a TT (typical typical) corner. To change the corner, the model file used in the simulation needs to be changed. In your ADE window go to Setup-> Model libraries. The following library setup window will appear. Select the required corner and click OK.

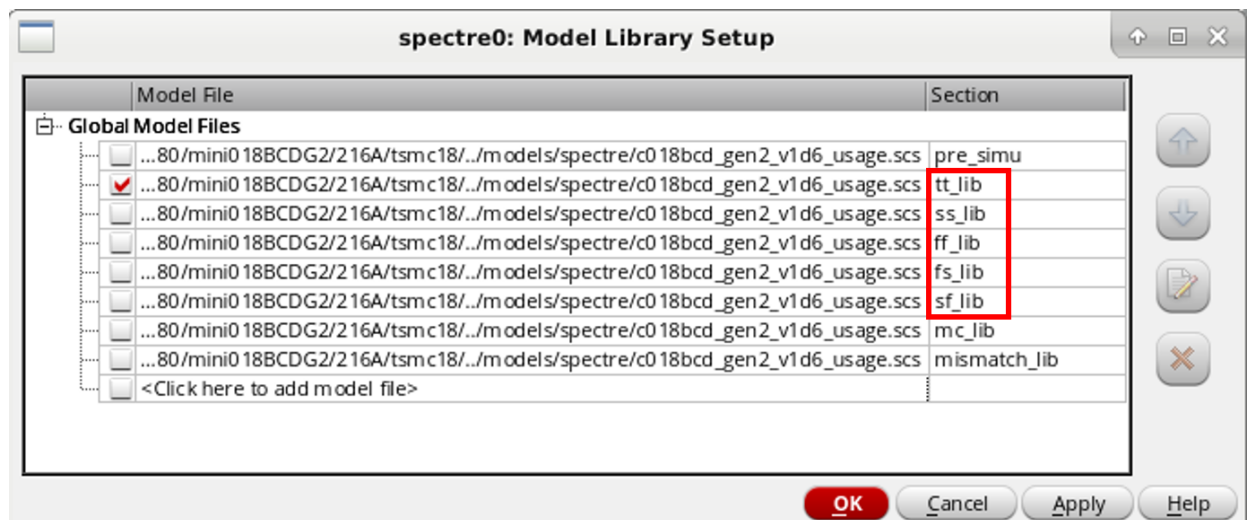


Figure 1: Model library setup to change corner.

6. Another way of changing corners is by using the ocean testbenches provided for TDC. It is only advantageous for the big TDC simulation or any other case when your top-level interfaces are set in stone.