(5) Remove lower link nuts and bolts and remove links (Fig. 9).

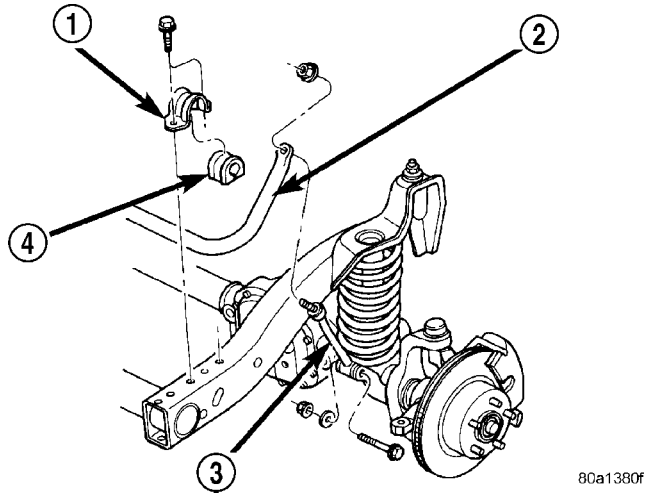

Fig. 9 Stabilizer Bar

1 - RETAINER
2 - STABILIZER BAR
3 - LINK
4 - BUSHING

INSTALLATION

(1) Center stabilizer bar on top of the frame rails and install retainers and bolts. Tighten bolts to 61 N·m (45 ft. lbs.).

(2) Position links on axle brackets and into the stabilizer bar. Install lower link bolts and nuts and tighten to 102 N·m (75 ft. lbs.).

(3) Install upper link nuts and tighten to 61 N·m (45 ft. lbs.).

(4) Install bumper valence.

TRACK BAR

DESCRIPTION

The bar is attached to a frame rail bracket with a ball stud and an axle bracket with a bushing. The bar is forged and has non replaceable isolator bushing and ball stud.

OPERATION

The track bar is used to control front axle lateral movement and provides cross car location of the axle assembly.

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the cotter pin and nut from the ball stud end at the frame rail bracket (Fig. 10).

(3) Use a universal puller tool to separate the track bar ball stud from the frame rail bracket.

(4) Remove the bolt and flag nut from the axle bracket (Fig. 10). Remove the track bar.

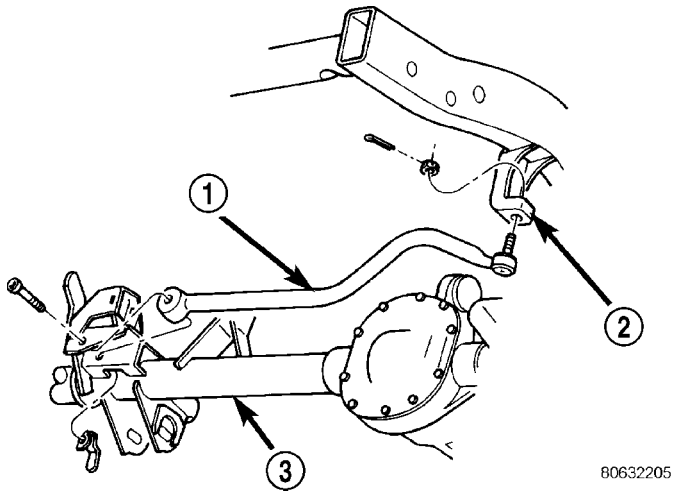

Fig. 10 Track Bar

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE

INSTALLATION

(1) Install the track bar at axle tube bracket. Loosely install the retaining bolt and flag nut.

(2) It may be necessary to pry the axle assembly over to install the track bar at the frame rail. Install track bar at the frame rail bracket. Install the retaining nut on the stud.

(3) Tighten the ball stud nut to 81N·m (60 ft. lbs.) and install a new cotter pin.

(4) Remove the supports and lower the vehicle.

(5) Tighten the bolt at the axle bracket to 47 N·m (40 ft. lbs.).

(6) Check alignment if a new track bar was installed. (Refer to 2 - SUSPENSION/WHEEL ALIGNMENT - STANDARD PROCEDURE).

UPPER BALL JOINT

REMOVAL

Ball stud service procedures below require removal of the hub bearing and axle shaft. (Refer to 2 - SUSPENSION/FRONT/HUB / BEARING - REMOVAL) (Refer to 3 - DIFFERENTIAL & DRIVELINE/ FRONT AXLE - 181FBI/AXLE SHAFTS - REMOVAL). Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

(1) Position tools as shown to remove and install ball stud (Fig. 11).