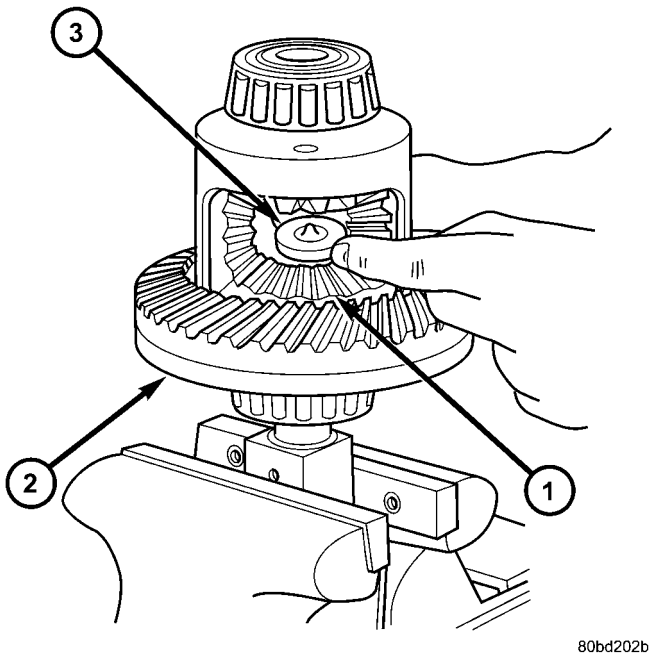

Fig. 51 DISC PLATE

1 - LOWER SIDE GEAR
2 - DIFFERENTIAL CASE
3 - DISC

(5) Install disc with threaded hole in the upper side gear. Thread forcing screw from Trac-Lok® Tool Kit 6960 through the upper disc until it comes in contact with lower disc.

(6) Insert a screw driver in slot of upper disc (Fig. 52) to prevent disc from turning.

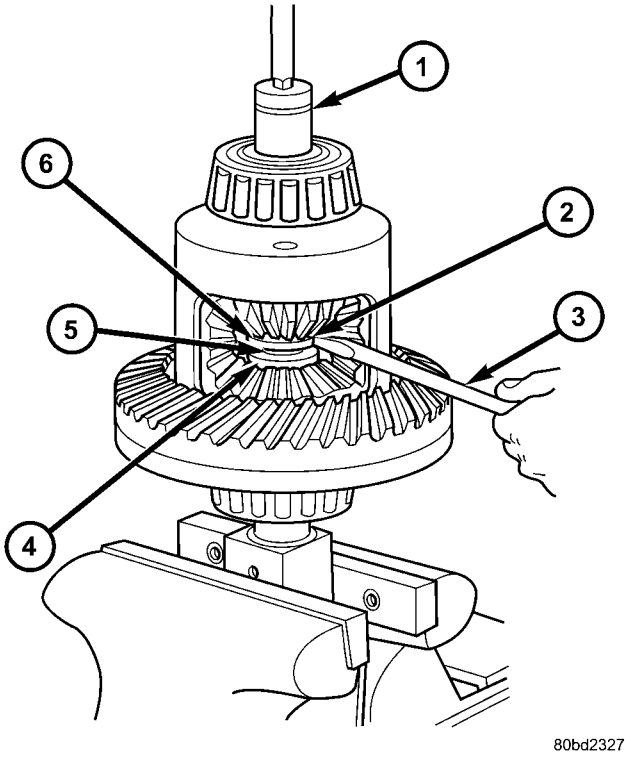

Fig. 52 THREAD ADAPTER DISC

1 - SOCKET
2 - SLOT IN DISC
3 - SCREWDRIVER
4 - LOWER DISC
5 - FORCING SCREW
6 - UPPER DISC

(7) Tighten forcing screw to 122 N·m (90 ft. lbs.) maximum to compress Belleville springs in clutch packs (Fig. 53).

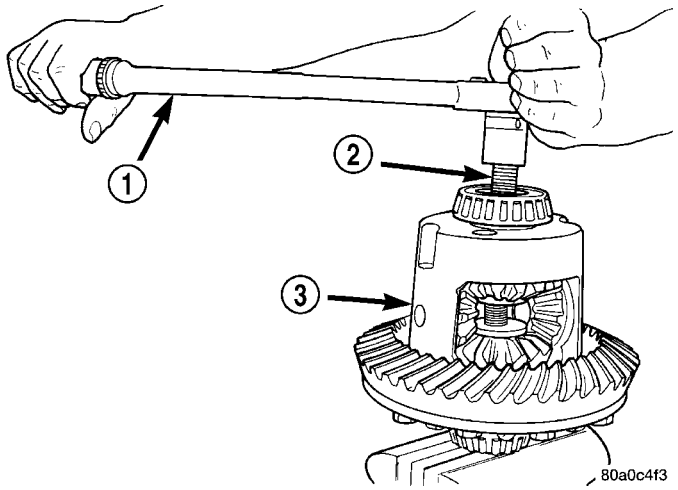

Fig. 53 TIGHTEN FORCING SCREW

1 - TORQUE WRENCH
2 - FORCING SCREW
3 - DIFFERENTIAL CASE

(8) With a feeler gauge remove thrust washers from behind the pinion gears (Fig. 54).