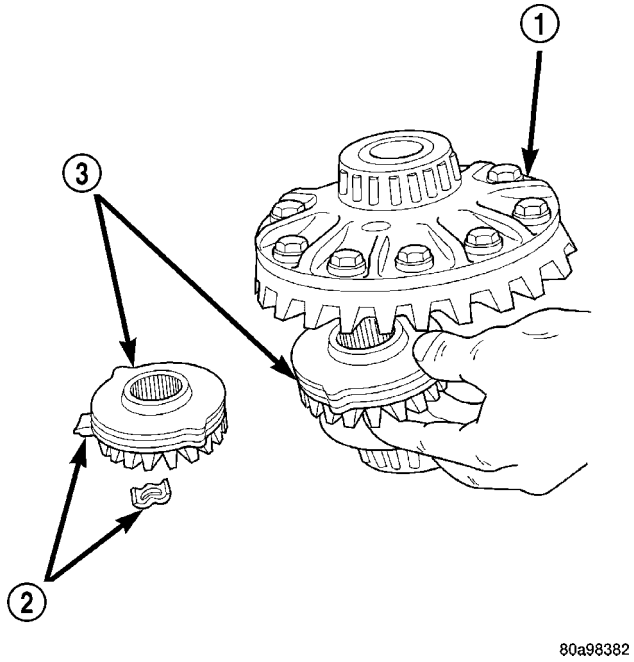

Fig. 56 SIDE GEARS AND CLUTCH DISCS

1 - DIFFERENTIAL CASE
2 - RETAINER
3 - SIDE GEAR AND CLUTCH DISC PACK

(15) Remove differential case from the Holding Fixture. Remove side gear, clutch pack retainer and clutch pack. Keep plates in order during removal.

ASSEMBLY

NOTE: New Plates and discs with fiber coating (no grooves or lines) must be presoaked in Friction Modifier before assembly. Soak plates and discs for a minimum of 20 minutes.

(1) Lubricate components with gear lubricant.
(2) Assemble clutch discs into packs and secure disc packs with retaining clips (Fig. 57).

NOTE: Dished plate is position with the convex side against the side gear.

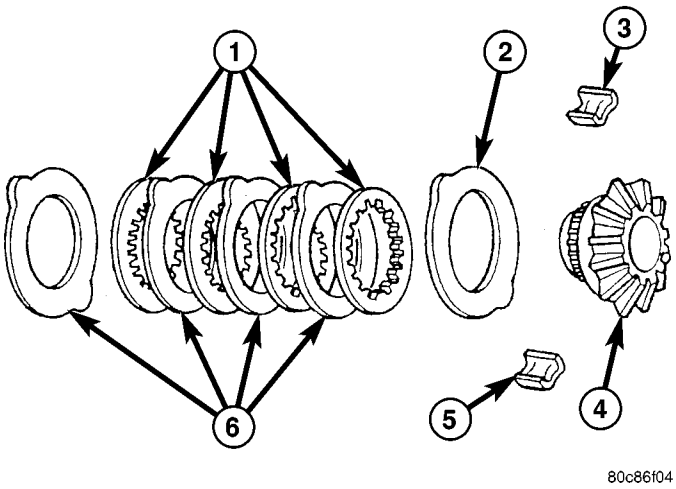

Fig. 57 CLUTCH PACK

1 - DISCS
2 - DISHED PLATE
3 - RETAINER
4 - SIDE GEAR
5 - RETAINER
6 - PLATES

(3) Position assembled clutch disc packs on the side gear hubs.
(4) Install clutch pack and side gear in the ring gear side of the differential case, with retaining clips seated in the case pockets (Fig. 58).

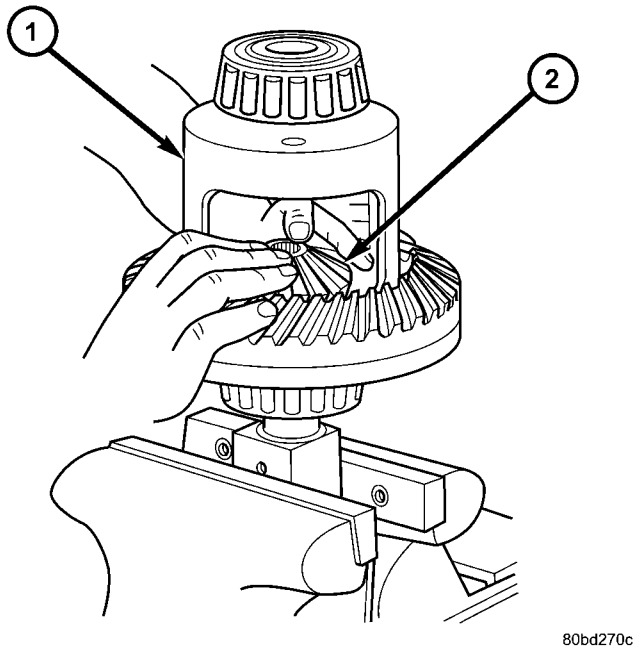

Fig. 58 CLUTCH PACK AND LOWER SIDE GEAR

1 - DIFFERENTIAL CASE
2 - SIDE GEAR AND CLUTCH PACK

(5) Position the differential case on the Holding Fixture 6965.