(8) Seat dust boot in caliper with Installer Tool C-4842 and Tool Handle C-4171 (Fig. 22).

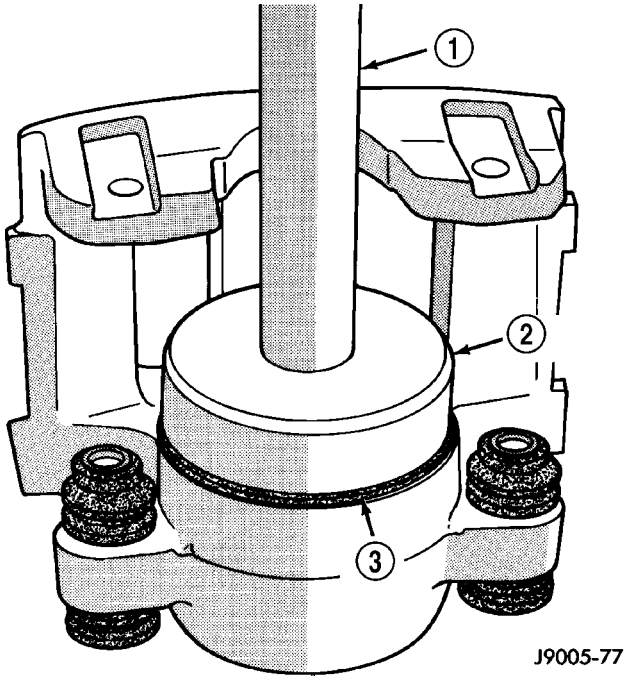


Fig. 22 Piston Dust Boot Installation

1 - HANDLE C-4171
2 - INSTALLER C-4842
3 - DUST BOOT

(9) Replace caliper bleed screw if removed.

INSTALLATION

INSTALLATION - FRONT

(1) Clean brake shoe mounting ledges with wire brush and apply light coat of Mopar multi-mileage grease to surfaces (Fig. 23).

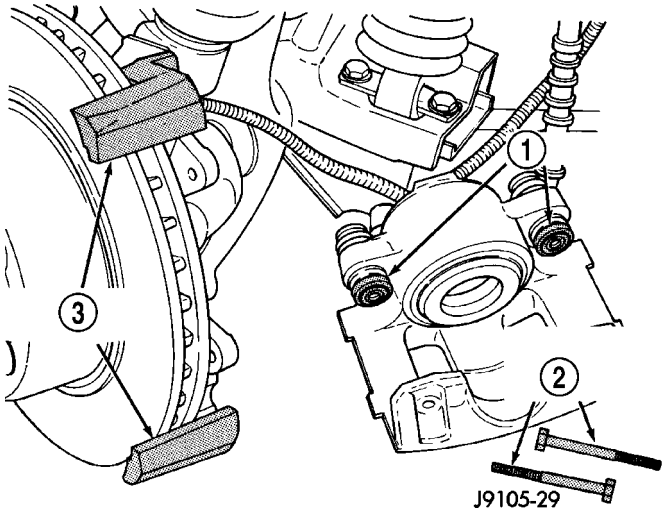


Fig. 23 Caliper Lubrication Points

1 - BUSHINGS
2 - CALIPER MOUNTING BOLTS
3 - MOUNTING LEDGES

(2) Install caliper by position notches at lower end of brake shoes on bottom mounting ledge. Then rotate caliper over rotor and seat notches at upper end of shoes on top mounting ledge (Fig. 24).

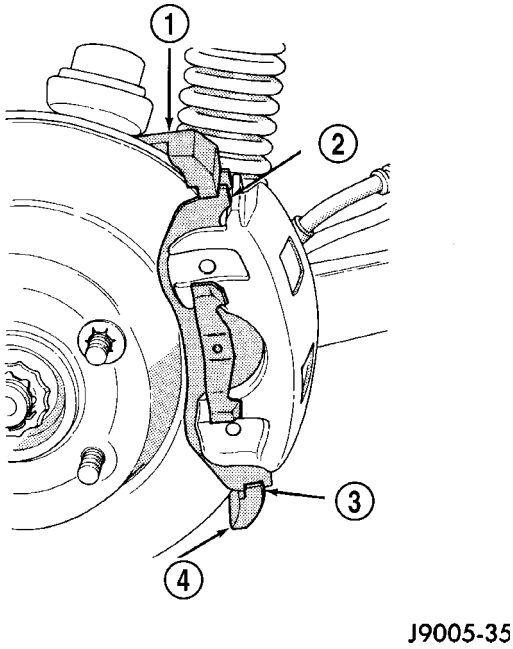


Fig. 24 Caliper Installation

1 - TOP LEDGE
2 - BRAKESHOE TAB ON LEDGE OUTER SURFACE
3 - LEDGE SEATED IN BRAKESHOE NOTCH
4 - BOTTOM LEDGE

(3) Coat caliper mounting bolts with silicone grease. Then install and tighten bolts to 15 N·m (11 ft. lbs.).