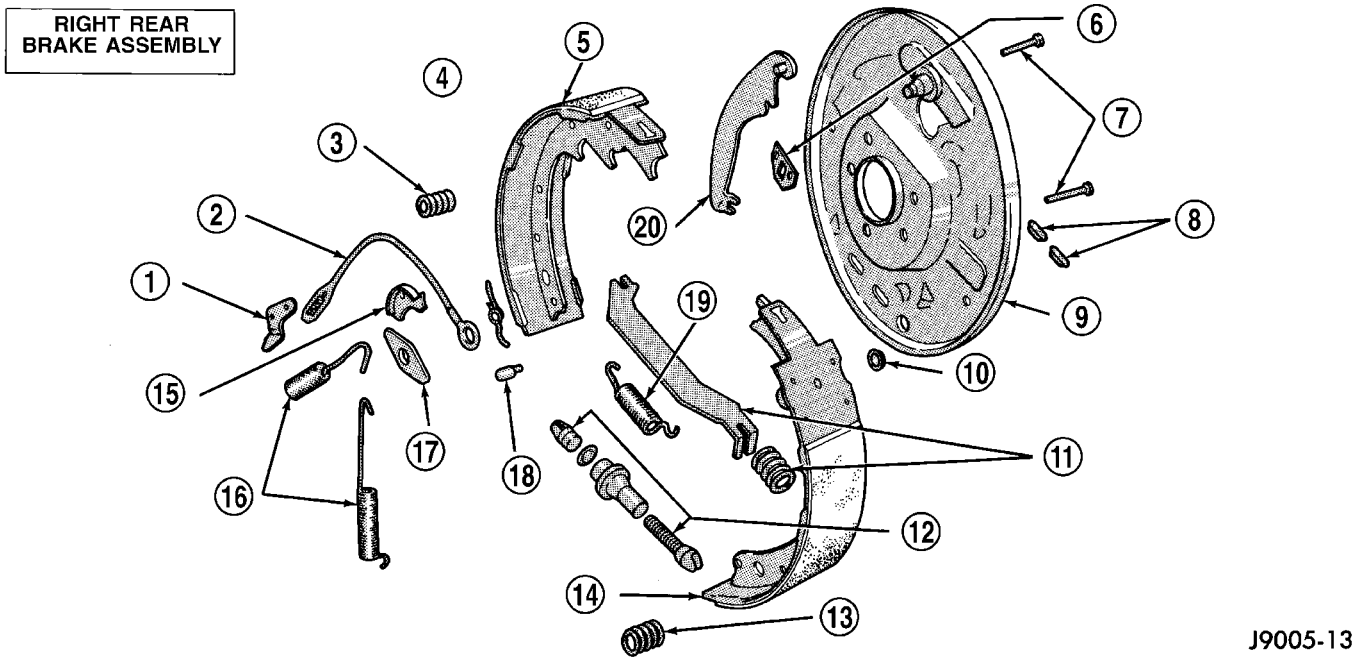

Fig. 30 Drum Brake Components—Typical

1 - ADJUSTER LEVER
2 - ADJUSTER CABLE
3 - HOLDDOWN SPRING AND RETAINERS
4 - ADJUSTER LEVER SPRING
5 - TRAILING SHOE
6 - CYLINDER-TO-SUPPORT SEAL
7 - HOLDDOWN PINS
8 - ACCESS PLUGS
9 - SUPPORT PLATE
10 - CABLE HOLE PLUG
11 - PARK BRAKE STRUT AND SPRING
12 - ADJUSTER SCREW ASSEMBLY
13 - HOLDDOWN SPRING AND RETAINERS
14 - LEADING SHOE
15 - CABLE GUIDE
16 - SHOE RETURN SPRINGS
17 - SHOE GUIDE PLATE
18 - PIN
19 - SHOE SPRING
20 - PARK BRAKE LEVER

REMOVAL - REAR DISC BRAKE PADS

(1) Raise and support vehicle.
(2) Remove the wheel and tire assemblies.
(3) Compress the caliper.
(4) Remove the caliper, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).
(5) Remove the caliper by tilting the top up and off the caliper adapter.

NOTE: Do not allow brake hose to support caliper assembly.

(6) Support and hang the caliper.
(7) Remove the inboard brake pad from the caliper adapter.
(8) Remove the outboard brake pad from the caliper adapter.

INSTALLATION

INSTALLATION - FRONT PADS

(1) Install inboard shoe in caliper and verify shoe retaining is fully seated into the piston.
(2) Starting one end of outboard shoe in caliper and rotating shoe downward into place. Verify shoe locating lugs and shoe spring are seated.
(3) Install caliper. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - INSTALLATION).
(4) Install wheel and tire assembly. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).
(5) Remove support and lower vehicle.
(6) Pump brake pedal until caliper pistons and brake shoes are seated.
(7) Top off brake fluid level if necessary.

INSTALLATION - DRUM BRAKE SHOES

(1) Clean support plate with brake cleaner.
(2) If new drums are being installed, remove protective coating with carburetor cleaner or brake cleaner.
(3) Apply multi-purpose grease to brake shoe contact surfaces of support plate (Fig. 31).