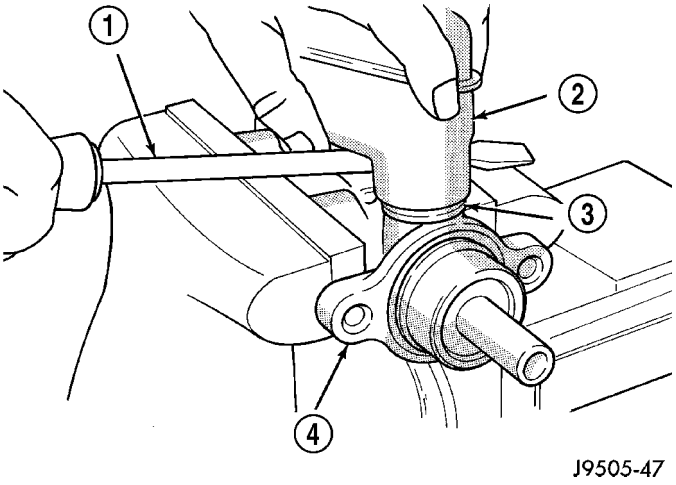

Fig. 38 Loosening Reservoir

1 - PRY TOOL
2 - RESERVOIR
3 - GROMMET
4 - MASTER CYLINDER BODY

(5) Remove reservoir by rocking it to one side and pulling free of grommets (Fig. 39).

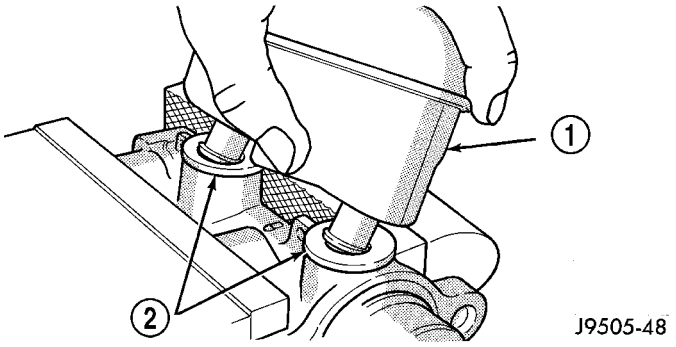

Fig. 39 Reservoir Removal

1 - RESERVOIR
2 - GROMMETS

(6) Remove old grommets from cylinder body (Fig. 40).

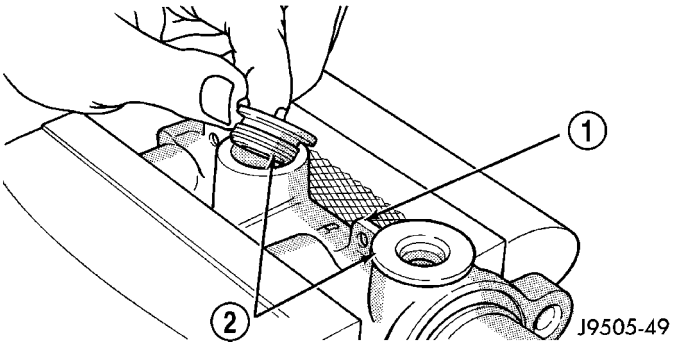

Fig. 40 Grommet Removal

1 - MASTER CYLINDER BODY
2 - GROMMETS

INSTALLATION

CAUTION: Do not use any type of tool to install the grommets. Tools may cut, or tear the grommets creating a leak problem after installation. Install the grommets using finger pressure only.

(1) Lubricate new grommets with clean brake fluid and Install new grommets in cylinder body (Fig. 41). Use finger pressure to install and seat grommets.

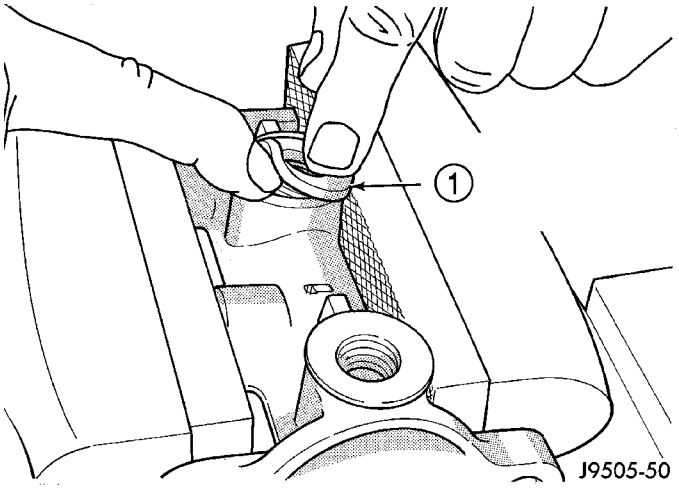

Fig. 41 Grommet Installation

1 - WORK NEW GROMMETS INTO PLACE USING FINGER PRESSURE ONLY

(2) Start reservoir in grommets. Then rock reservoir back and forth while pressing downward to seat it in grommets.

(3) Install pins that retain reservoir to cylinder body.

(4) Fill and bleed master cylinder on bench before installation in vehicle.

MASTER CYLINDER

DESCRIPTION

The master cylinder has a removable nylon reservoir. The cylinder body is made of aluminum and contains a primary and secondary piston assembly. The cylinder body including the piston assemblies are not serviceable. If diagnosis indicates an internal problem with the cylinder body, it must be replaced as an assembly. The reservoir and grommets are the only replaceable parts on the master cylinder.

OPERATION

The master cylinder bore contains a primary and secondary piston. The primary piston supplies hydraulic pressure to the front brakes. The secondary piston supplies hydraulic pressure to the rear brakes. The master cylinder reservoir stores reserve brake fluid for the hydraulic brake circuits.