STANDARD PROCEDURE - MASTER CYLINDER BLEEDING

A new master cylinder should be bled before installation on the vehicle. Required bleeding tools include bleed tubes and a wood dowel to stroke the pistons. Bleed tubes can be fabricated from brake line.

(1) Mount master cylinder in vise.

(2) Attach bleed tubes to cylinder outlet ports. Then position each tube end into the reservoir (Fig. 44).

(3) Fill reservoir with fresh brake fluid.

(4) Press cylinder pistons inward with wood dowel. Then release pistons and allow them to return under spring pressure. Continue bleeding operations until air bubbles are no longer visible in fluid.

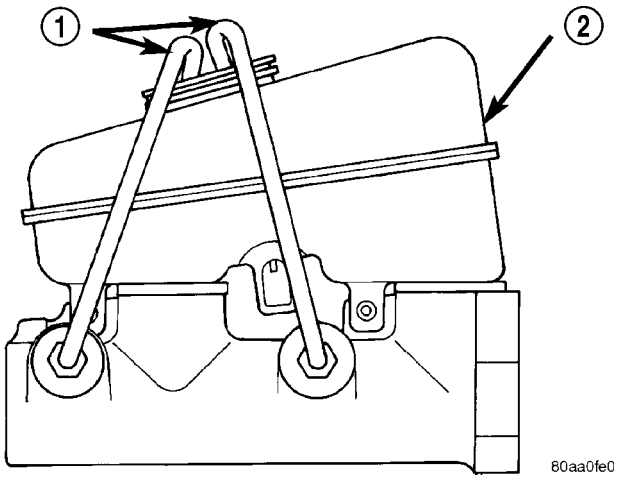

Fig. 44 Master Cylinder Bleeding

1 - BLEEDING TUBES
2 - RESERVOIR

REMOVAL

(1) Remove evaporative canister.

(2) Disconnect brake lines to master cylinder and combination valve (Fig. 45).

(3) Remove combination valve bracket mounting nuts and remove valve.

(4) Remove master cylinder mounting nuts and remove master cylinder.

(5) Remove cylinder cover and drain fluid.

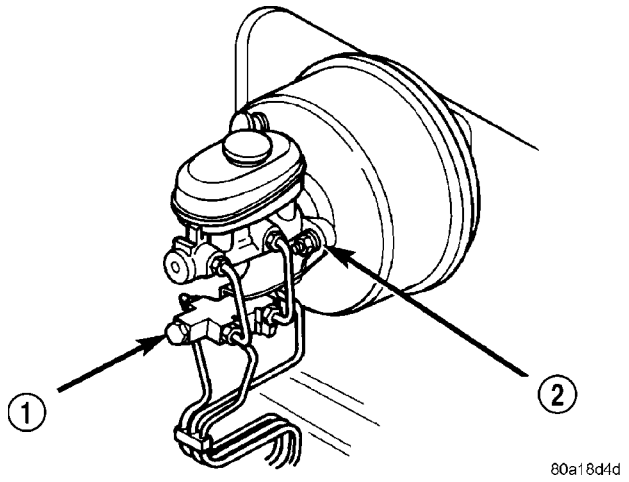

Fig. 45 Master

1 - COMBINATION VALVE
2 - MASTER CYLINDER

INSTALLATION

NOTE: If master cylinder is replaced, bleed cylinder before installation.

(1) Remove protective sleeve from primary piston shank on new master cylinder.

(2) Check condition of seal at rear of cylinder body. Reposition seal if dislodged. Replace seal if cut, or torn.

(3) Install master cylinder onto brake booster studs and tighten mounting nuts to 17 N·m (13 ft. lbs.).

NOTE: Use only original or factory replacement nuts.

(4) Install combination valve onto brake booster studs and tighten mounting nuts to 20 N·m (15 ft. lbs.).

(5) Install brake lines to master cylinder and combination valve by hand to avoid cross threading.

(6) Tighten master cylinder brake lines to 19 N·m (14 ft. lbs.).

(7) Tighten combination valve brake lines to 19 N·m (14 ft. lbs.).

(8) Install evaporative canister.

(9) Bleed base brake system. (Refer to 5 - BRAKES - STANDARD PROCEDURE).

PEDAL

DESCRIPTION

A suspended-type brake pedal is used, the pedal pivots on a shaft mounted in the pedal support bracket. The bracket is attached to the dash panel.

The brake pedal assembly and pedal pad are the only serviceable component.