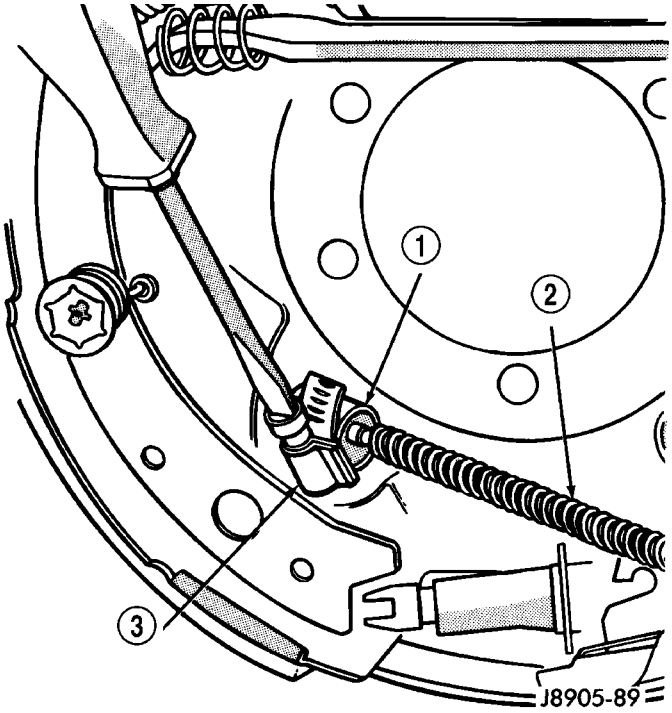

Fig. 70 Cable Retainer

1 - CABLE RETAINER
2 - REAR CABLE
3 - WORM DRIVE HOSE CLAMP

REMOVAL - DISC BRAKES

(1) Raise and support the vehicle.
(2) Lockout the parking brake cable.
(3) Loosen the brake cable at the equalizer and adjuster nut.
(4) Remove the cable from the front cable.
(5) Remove the cable from the equalizer.
(6) Remove the cable from the frame bracket.
(7) Remove the cable from the axle bracket.
(8) Remove the brake cable from the brake lever. (Fig. 71)

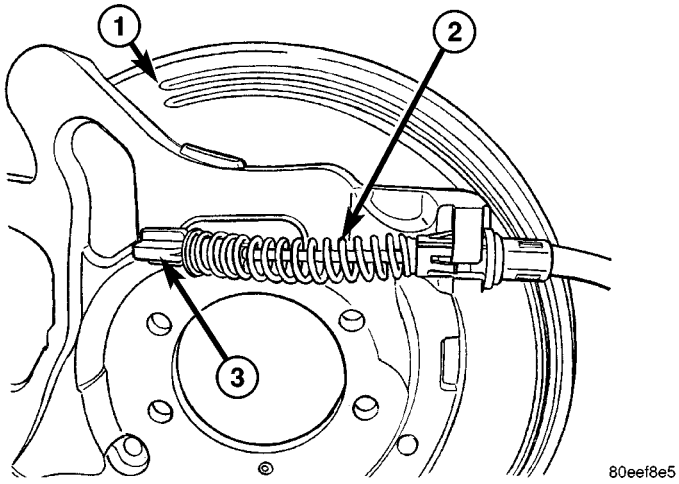

Fig. 71 CABLE REMOVAL/INSTALLATION

1 - SUPPORT PLAT
2 - PARK BRAKE CABLE
3 - EQUALIZER

INSTALLATION

INSTALLATION - DRUM BRAKES

(1) Install new cable in backing plate. Be sure cable retainer is seated.
(2) Attach cable to lever on brake shoe and install brake shoe on backing plate.
(3) Adjust brake shoes to drum with brake gauge.
(4) Install brake drum and wheel.
(5) Install cable/bracket on upper suspension arm.
(6) Engage cable in equalizer and install equalizer nuts.
(7) Adjust parking brakes.