HEATED SYSTEMS

TABLE OF CONTENTS

page

HEATED GLASS 1

HEATED MIRRORS 8

HEATED GLASS

TABLE OF CONTENTS

page

HEATED GLASS
DESCRIPTION 1
OPERATION 1
DIAGNOSIS AND TESTING
ELECTRIC BACKLIGHT (EBL) SYSTEM 2
REAR WINDOW DEFOGGER RELAY
DESCRIPTION 3
OPERATION 3
REMOVAL 3
INSTALLATION 4
REAR WINDOW DEFOGGER SWITCH
DESCRIPTION 4
OPERATION 4
DIAGNOSIS AND TESTING
REAR WINDOW DEFOGGER SWITCH 5
REMOVAL 5
INSTALLATION 6
REAR WINDOW DEFOGGER GRID
STANDARD PROCEDURE
GRID LINE AND TERMINAL REPAIR 6

HEATED GLASS

DESCRIPTION

CAUTION: Grid lines can be damaged or scraped off with sharp instruments. Care should be taken in cleaning glass or removing foreign materials, decals or stickers. Normal glass cleaning solvents or hot water used with rags or toweling is recommended.

The rear window defogger system, also known as electric backlight (EBL), consists of two vertical bus bars linked by a series of grid lines fired onto the inside surface of the rear window (Fig. 1).

The EBL system is turned On or Off by a control switch mounted into the accessory switch bezel in the instrument panel and the timer and logic circuitry in the instrument cluster assembly (Refer to 8 - ELECTRICAL/HEATED GLASS/REAR WINDOW DEFOGGER SWITCH - DESCRIPTION).

Circuit protection is provided by three cartridge fuses located in the fuse block. One fuse for the control circuit, another for the heated grid circuit and the third fuse for the rear window defogger indicator lamp circuit.

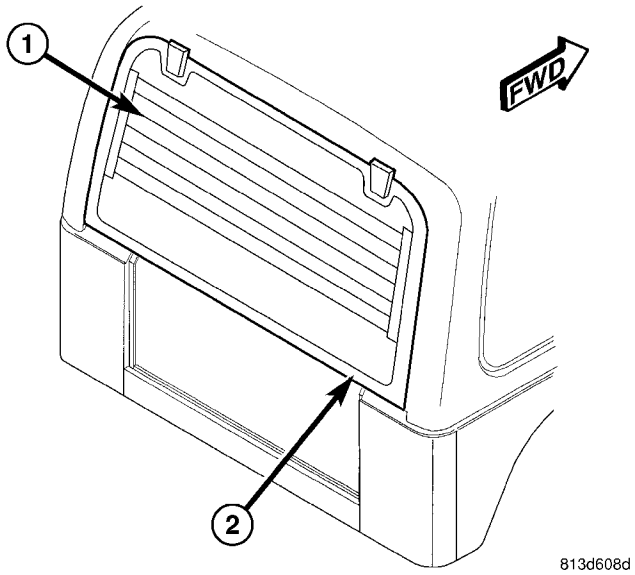

Fig. 1 Rear Window Defogger

1 - REAR DEFOGGER GRID
2 - REAR WINDOW

OPERATION

The electric backlight (EBL) system is controlled by a momentary switch located in the accessory switch bezel on the instrument panel (Fig. 2). When the rear window defogger switch is pressed to the On position, the instrument cluster energizes the rear window defogger (EBL) relay, which then directs