of the accessory switch bezel and pull the switch out of the bezel.

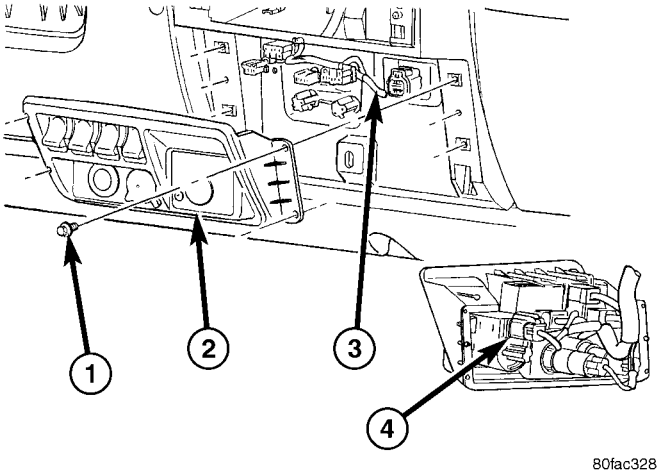

Fig. 8 Accessory Switch Bezel

1 - BEZEL SCREWS (4)
2 - BEZEL
3 - WIRE HARNESS
4 - ELECTRICAL CONNECTORS (7)

INSTALLATION

(1) Install the rear window defogger switch into the back of the accessory switch bezel by pushing the switch firmly into the bezel.

(2) Connect the wire harness connectors to the rear of the accessory switches and the cigar lighter/ power outlet.

(3) Install the accessory switch bezel to the instrument panel.

(4) Install the four screws that secure the accessory switch bezel to the instrument panel. Tighten the screws to 2 N·m (17 in. lbs.).

(5) Install the center bezel to the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/CLUSTER BEZEL - INSTALLATION).

(6) Reconnect the negative battery cable.

REAR WINDOW DEFOGGER GRID

STANDARD PROCEDURE

GRID LINE AND TERMINAL REPAIR

WARNING: Materials contained in the Repair Kit (Part Number 04549275) may cause skin or eye irritation. The kit contains epoxy resin and amine type hardener, which are harmful if swallowed. Avoid contact with the skin and eyes. For skin contact, wash the affected areas with soap and water. For contact with the eyes, flush with plenty of water. Do not take internally. If taken internally, induce vomiting and call a physician immediately. Use with adequate ventilation. Do not use near fire or flame. Contains flammable solvents. Keep out of the reach of children. Failure to follow the warnings could result in possible personal injury or death.

Repair of the rear glass heating grid lines, bus bars or terminals can be accomplished using the Mopar® Rear Window Defogger Repair Kit (Part Number 04549275) or equivalent.

(1) Mask the repair area with masking tape so that the conductive epoxy can be applied neatly (Fig. 9). Extend the epoxy application onto the grid line or the bus bar on each side of the break.

(2) Follow the instructions in the repair kit for preparing the damaged area.

(3) Remove the package separator clamp and mix the two conductive epoxy components thoroughly within the packaging. Fold the package in half and cut the center corner to dispense the epoxy.

(4) For grid line repairs, mask the area to be repaired with masking tape or use a template.

(5) Apply the epoxy through the slit in the masking tape or template. Overlap both ends of the break by at least 19 millimeters (0.75 inch).

(6) For a terminal replacement, mask the adjacent areas so the epoxy can be extended onto the adjacent grid line as well as the bus bar. Apply a thin layer of epoxy to the area where the terminal was fastened and onto the adjacent grid line.

(7) Apply a thin layer of conductive epoxy to the terminal and place it in the proper location on the bus bar. To prevent the terminal from moving while the epoxy is curing, it must be wedged or clamped.

(8) Carefully remove the masking tape or template.

CAUTION: Do not allow the glass surface to exceed 204° C (400° F) or the glass may fracture.

(9) Allow the epoxy to cure 24 hours at room temperature, or carefully use a heat gun for fifteen minutes. When using a heat gun, hold it approximately 25.4 centimeters (10 inches) from the repair and do not allow the glass surface to exceed 204° C (400° F).

NOTE: Do not attach the wire harness connectors to the terminals until the curing process is complete.