(10) After the conductive epoxy is properly cured, remove the wedge or clamp from the terminal.

(11) Connect the wire harness leads to the grid terminals and verify EBL operation.

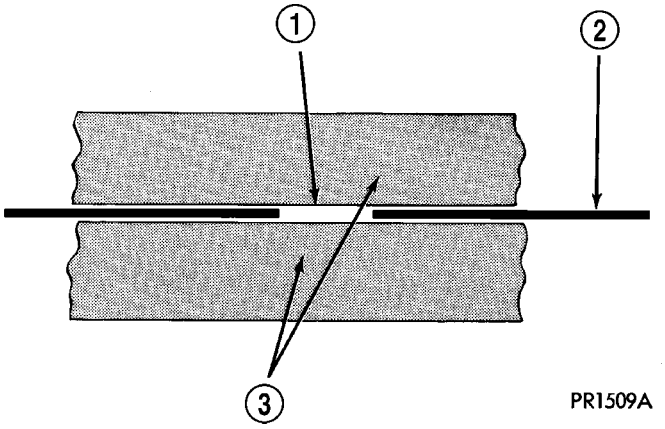

Fig. 9 Grid Line Repair

1 - BREAK
2 - GRID LINE
3 - MASKING TAPE