CENTER HIGH MOUNTED STOP LAMP UNIT

REMOVAL

NOTE: To remove to the CHMSL, it will be necessary to remove spare tire from the spare tire carrier bracket.

(1) Disconnect and isolate the battery negative cable.
(2) Remove the cover from CHMSL button contact plate (Fig. 3).
(3) Disconnect the CHMSL wire harness from the CHMSL button contact terminals.
(4) Disengage the CHMSL wire harness from the retaining clips.
(5) Disengage the wire harness grommet and route the CHMSL wire harness through the tailgate.
(6) Remove the bolts attaching CHMSL to the spare tire carrier bracket.
(7) Remove the CHMSL from the vehicle.

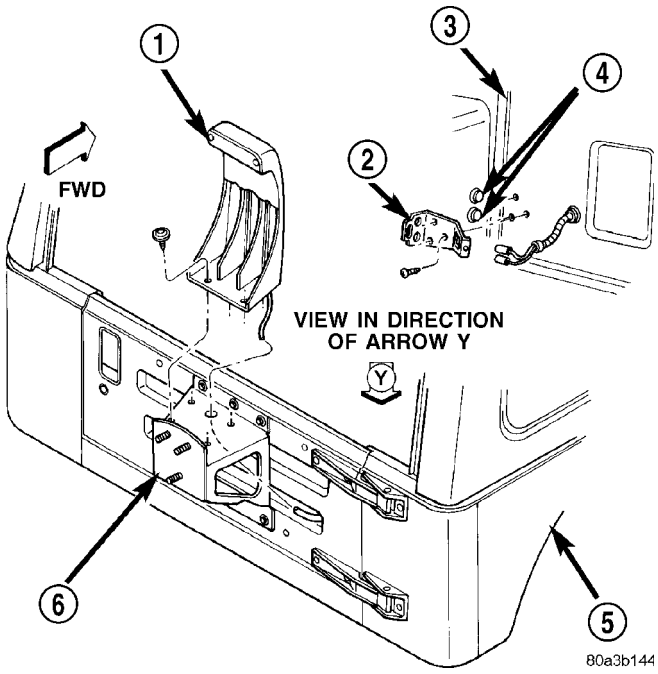

Fig. 3 CHMSL and Contact Buttons

1 - CHMSL
2 - CHMSL BUTTON CONTACT PLATE
3 - TAILGATE
4 - CHMSL CONTACT BUTTONS
5 - BODY
6 - SPARE TIRE CARRIER BRACKET

INSTALLATION

(1) Position the CHMSL to the vehicle.
(2) Install the bolts that secure the CHMSL to the spare tire carrier bracket.
(3) Route the CHMSL wire harness through the tailgate and seat the wire harness grommet.
(4) Connect the CHMSL wire harness to the CHMSL button contact terminals.
(5) Position the CHMSL wire harness into the retaining clips and engage the clips.
(6) Install the CHMSL button contact plate cover.
(7) Reconnect the battery negative cable.

CENTER HIGH MOUNTED STOP LAMP

REMOVAL

(1) Disconnect and isolate the battery negative cable.
(2) Remove the screws that secure the CHMSL lens to the CHMSL housing (Fig. 4).
(3) Remove the CHMSL lens from the CHMSL housing.
(4) Rotate the lamp socket one-third turn counterclockwise and separate the lamp socket from the CHMSL lens.
(5) Pull the lamp straight out of the socket.

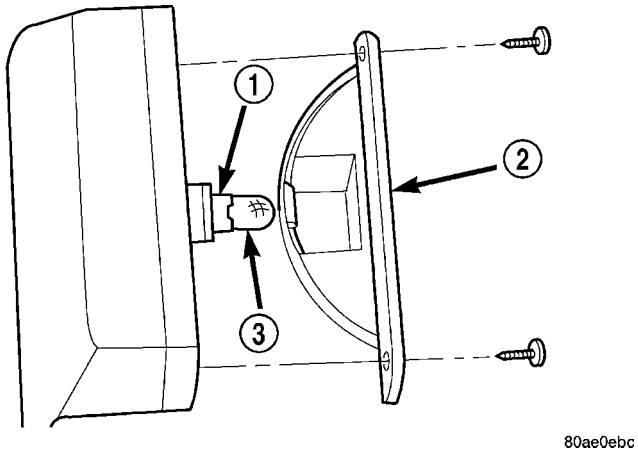

Fig. 4 CHMSL Lamp

1 - SOCKET
2 - CHMSL LENS
3 - LAMP

INSTALLATION

(1) Install the lamp into the socket by pushing it straight into the socket.
(2) Install the lamp socket into the CHMSL lens by turning the socket one-third turn clockwise.
(3) Position the CHMSL lens onto the CHMSL housing.
(4) Install the screws that secure the CHMSL lens to the CHMSL housing.
(5) Reconnect the battery negative cable.