(7) Open and close the door to verify proper door ajar switch operation.

REAR WIPER / WASHER SWITCH ILLUMINATION LAMP

REMOVAL

The rear wiper and washer switch in the accessory switch bezel of the instrument panel includes a single serviceable incandescent lamp and lamp holder unit.

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, DRIVER AIRBAG, PASSENGER AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the negative battery cable.

(2) Remove the rear wiper and washer switch from the accessory switch bezel (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER/WASHER SWITCH - REMOVAL).

(3) From the bottom of the switch housing, use a small thin-bladed screwdriver to rotate the lamp holder counterclockwise about 30 degrees in the mounting hole (Fig. 3).

(4) Pull the rear wiper and washer switch lamp holder and lamp assembly straight out of the mounting hole.

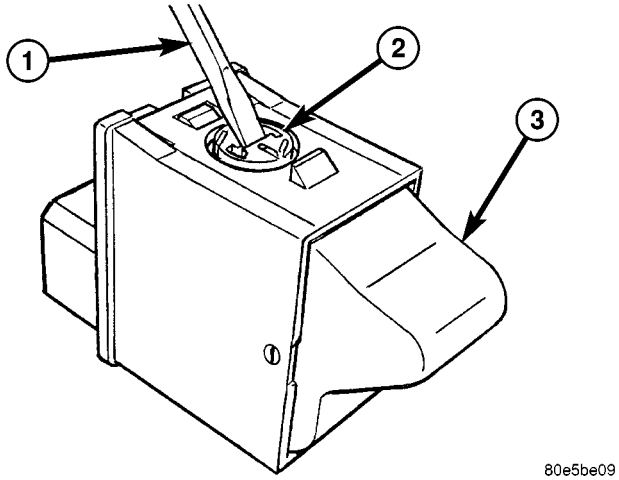

Fig. 3 Rear Wiper/Washer Switch Lamp

1 - SCREW DRIVER
2 - LAMP HOLDER
3 - REAR WIPER/WASHER SWITCH

INSTALLATION

CAUTION: Always use the correct lamp size and type for replacement. An incorrect lamp size or type may overheat and cause damage to the rear wiper and washer switch.

(1) Align the rear wiper and washer switch lamp holder and lamp assembly with the mounting hole in the bottom of the switch.

(2) Insert the rear wiper and washer switch lamp holder and lamp assembly straight into the mounting hole until it is firmly seated.

(3) Using a small thin-bladed screwdriver, rotate the lamp holder clockwise about 30 degrees in the mounting hole.

(4) Install the rear wiper and washer switch into the accessory switch bezel (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER/WASHER SWITCH - INSTALLATION).

(5) Reconnect the negative battery cable.