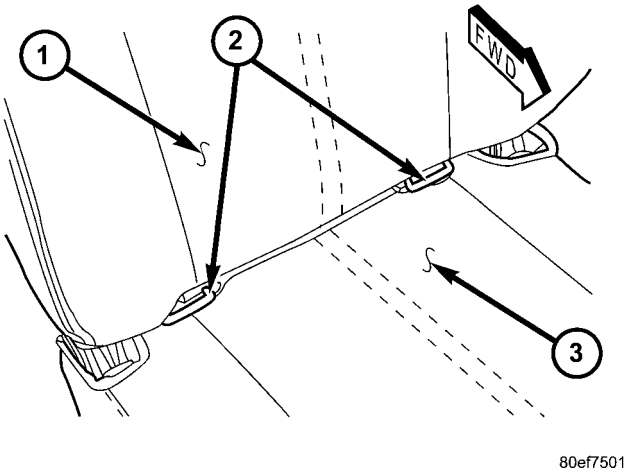

Fig. 11 Front Passenger Seat Lower Anchors

1 - SEAT BACK
2 - LOWER ANCHOR (2)
3 - SEAT CUSHION

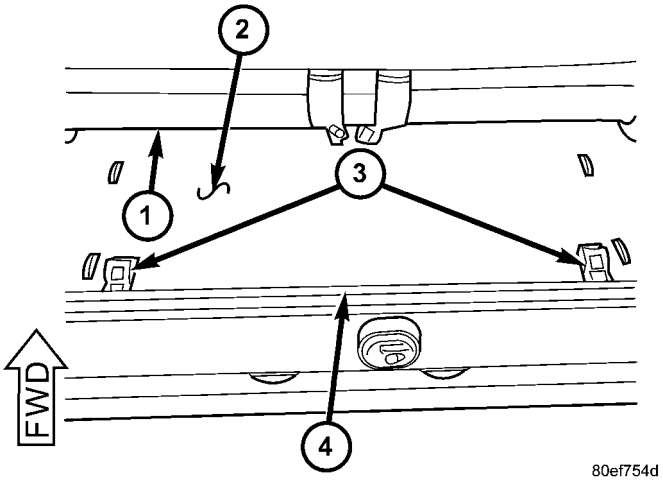

Fig. 12 Rear Seat Upper Anchors

1 - REAR SEAT
2 - REAR CARGO FLOOR
3 - UPPER ANCHOR (2)
4 - TAILGATE OPENING SILL

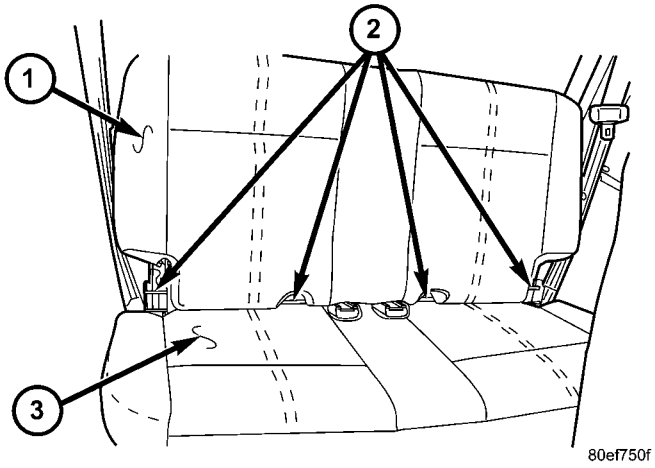

Fig. 13 Rear Seat Lower Anchors

1 - SEAT BACK
2 - LOWER ANCHOR (4)
3 - SEAT CUSHION

The upper tether anchor and both lower anchors for the front passenger seat are integral to the front passenger seat riser bracket. The upper tether anchor is accessed from behind the front seat. The lower anchors for the front passenger seat are formed from round steel bar stock that is formed into a U-shape, then securely welded to the seat riser bracket. They are accessed from the front of the seat, at each side where the seat back meets the seat cushion. The upper and lower front seat child restraint anchors cannot be adjusted or repaired and, if faulty or damaged, they must be replaced as a unit with the seat riser bracket.

The upper tether anchors for the rear seat are stamped steel brackets that are secured by screws to the rear cargo floor panel just forward of the tailgate opening, and are accessed from behind the rear seat. The upper tether anchors for the rear seat are available for individual service replacement. The four fixed lower anchors are integral to the rear seat back frame and are accessed from the front of the rear seat, where the seat back meets the seat cushion. The two inboard lower anchors are constructed from round steel bar stock that is formed into a U-shape, then securely welded at each end to the rear seat back frame. The two outboard lower anchors are machined steel pins that are secured between the two seat back hinge plates above the pivot pin on each outboard side of the rear seat back frame. These lower anchors cannot be adjusted or repaired and, if faulty or damaged, they must be replaced as a unit with the rear seat back frame.