FRONT WIPERS / WASHERS

DESCRIPTION

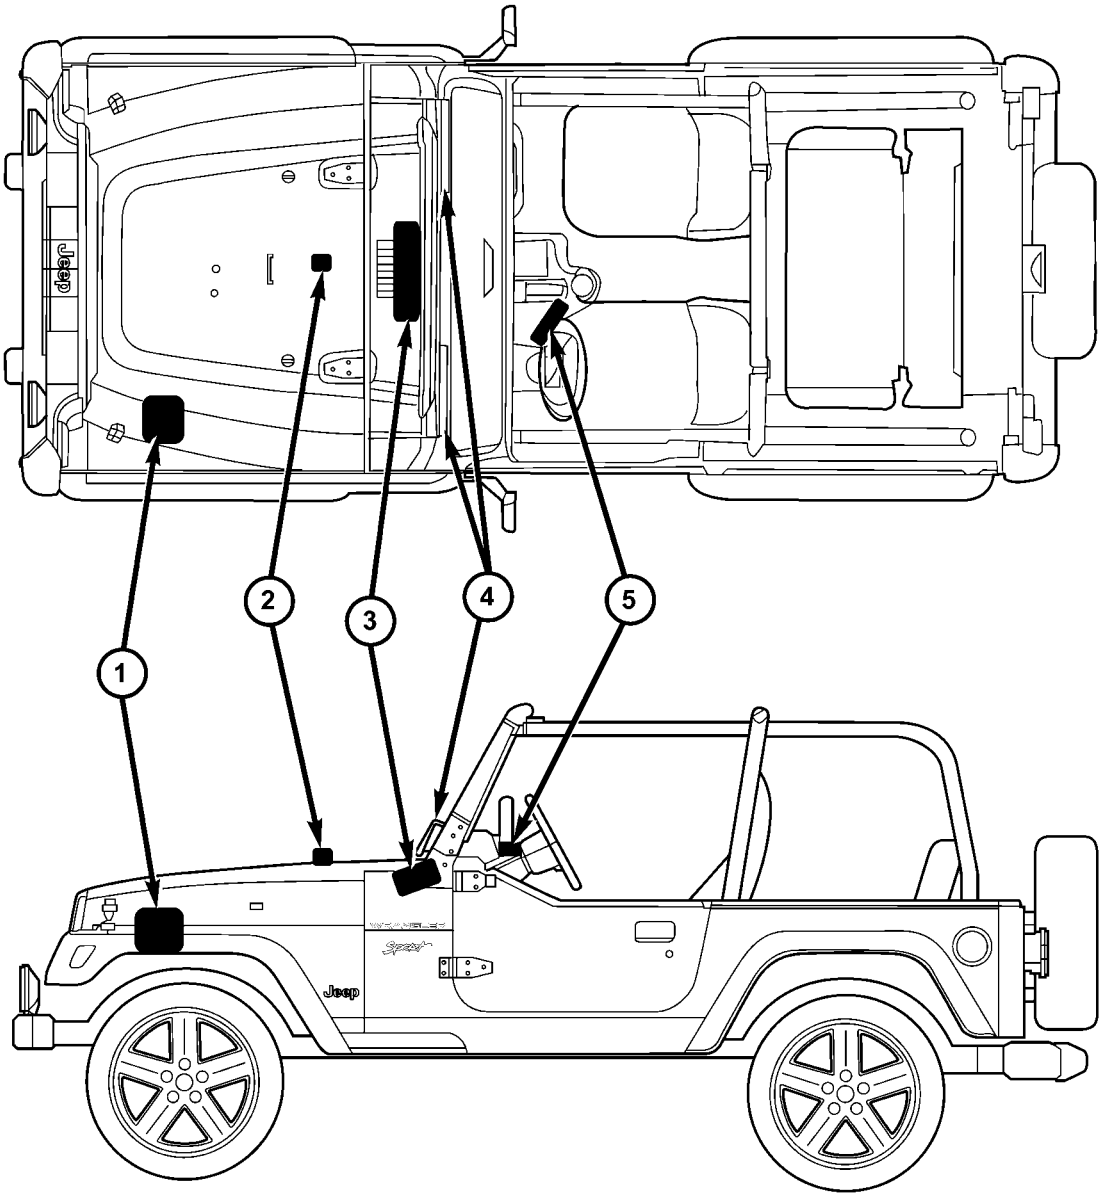

Fig. 1 Front Wiper & Washer System

1 - WASHER RESERVOIR, PUMP/MOTOR
2 - FRONT WASHER NOZZLE
3 - FRONT WIPER MODULE
4 - FRONT WIPER ARM & BLADE (2)
5 - RIGHT MULTI-FUNCTION SWITCH

An electrically operated intermittent front wiper and washer system is standard factory-installed safety equipment on this model (Fig. 1). The front wiper and washer system includes the following major components, which are described in further detail elsewhere in this service information:

- **Front Check Valve** - The front washer system check valve is located in the washer plumbing on the underside of the hood panel between the cowl and the front washer nozzle.
- **Front Washer Nozzle** - The single fluidic front washer nozzle is secured by an integral latch feature to a dedicated opening near the rear of the hood panel. The washer plumbing fitting for the washer nozzle is concealed beneath the hood panel.
- **Front Washer Pump/Motor** - The front washer pump/motor unit is located in a dedicated hole on the