SPECIFICATIONS

FRONT WIPER & WASHER SYSTEM

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Front Wiper Motor Mounting Screws	8	-	70
Front Wiper Motor Crank Arm Mounting Nut	12	-	101
Front Wiper Module Bracket Mounting Screws	12	-	105
Right Multi-Function Switch Mounting Screws	2	-	20
Left Multi-Function Switch Mounting Screws	2	-	20
Steering Column Shroud Mounting Screws	2	-	18
Washer Reservoir Mounting Screws	8	-	70

FRONT CHECK VALVE

DESCRIPTION

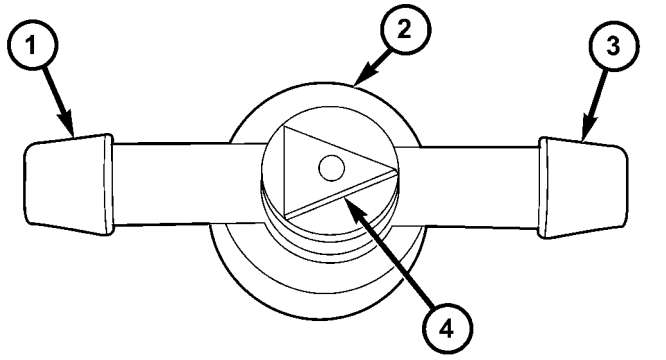

Fig. 3 Check Valve

1 - INLET NIPPLE
2 - CHECK VALVE
3 - OUTLET NIPPLE
4 - FLOW DIRECTION ARROW

A single front washer system check valve is standard equipment on this model, and is installed in the front washer system plumbing (Fig. 3). The front check valve is located in the engine compartment in the washer supply hose on the underside of the hood panel about 5 centimeters (2 inches) from the barbed nipple of the front washer nozzle. The check valve consists of a molded plastic valve body with a raised arrowhead molded into its center section that indicates the direction of the flow through the valve. A barbed hose nipple is formed on each side of the raised center section of the valve body. Within the check valve body, a small diaphragm is held against the lip of an integral sump well by a small plastic piston and a coiled spring. The front check valve cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

OPERATION

The front check valve provides more than one function in this application. It prevents washer fluid from draining out of the front washer supply hoses back to the washer reservoir. This drain-back would result in a lengthy delay from when the front washer switch is actuated until washer fluid was dispensed through the front washer nozzle, because the front washer pump would have to refill the front washer plumbing from the reservoir to the nozzle. Such a drain-back condition could also result in water, dirt, or other outside contaminants being siphoned into the washer system through the washer nozzle orifice. This water could subsequently freeze and plug the nozzle, while other contaminants could interfere with proper nozzle operation and cause improper nozzle spray patterns. In addition, the front check valve prevents washer fluid from siphoning out through the front washer nozzle after the front washer system is turned Off.

When the front washer pump pressurizes and pumps washer fluid from the reservoir through the front washer plumbing, the fluid pressure unseats a diaphragm from over a sump well within the valve by overriding the spring pressure applied to it by a