RIGHT MULTI - FUNCTION SWITCH

DESCRIPTION

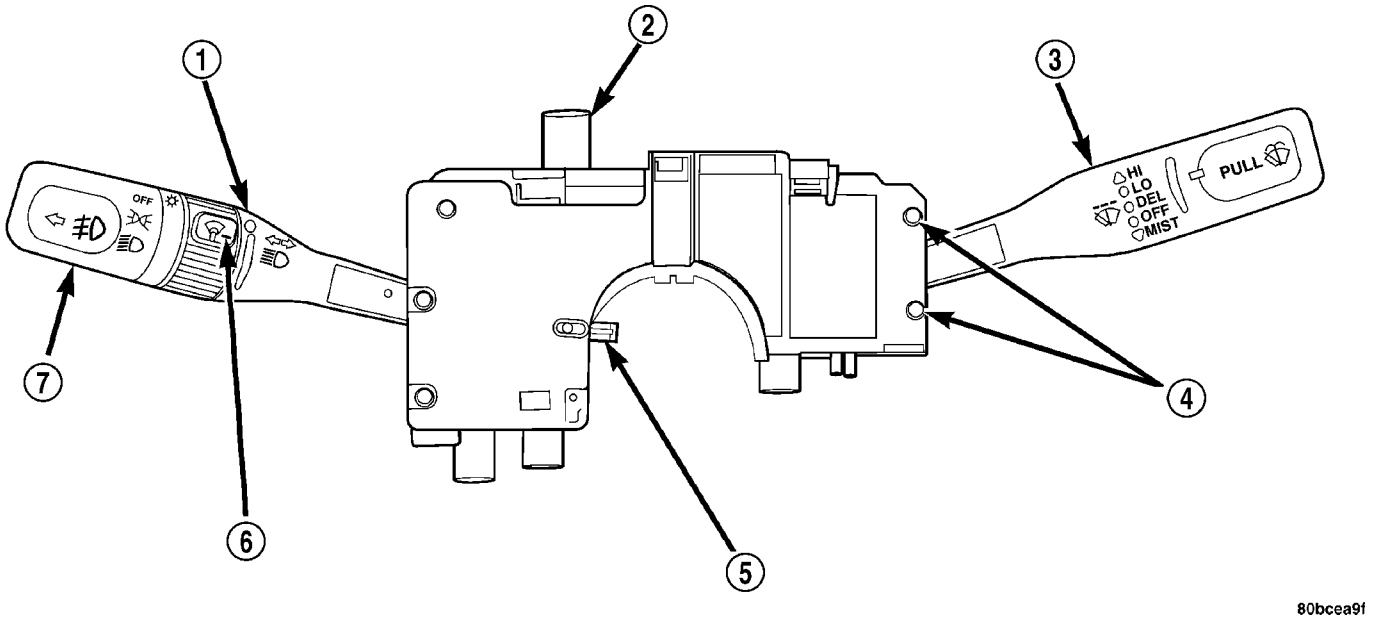

Fig. 19 Multi-Function Switch

1 - LEFT MULTI-FUNCTION SWITCH CONTROL STALK
2 - HAZARD WARNING SWITCH BUTTON
3 - RIGHT MULTI-FUNCTION SWITCH CONTROL STALK
4 - SCREW (2)
5 - TURN SIGNAL CANCEL ACTUATOR
6 - LEFT MULTI-FUNCTION SWITCH CONTROL RING
7 - LEFT MULTI-FUNCTION SWITCH CONTROL KNOB

The right multi-function switch is located on the right side of the steering column (Fig. 19). The only visible components of the right multi-function switch are the control stalk and control knob that extend through dedicated openings in the right side of the steering column shrouds, just below the steering wheel. The remainder of the switch, its mounting provisions, and its electrical connections are all concealed beneath the steering column shrouds. The switch housing and controls are constructed of molded black plastic. The right multi-function switch is secured by two screws to a mounting housing that is integral to the left multi-function switch.

The right multi-function switch control stalk has both white nomenclature and International Control and Display Symbols graphics applied to it, which clearly identify its many functions. On the end of the control stalk is a plastic control knob with a rounded end and a flattened face to allow it to be easily rotated. A single connector receptacle containing six terminal pins is integral to the back of the switch housing and connects the switch to the vehicle electrical system through a dedicated take out and connector of the body wire harness. The right multi-function switch cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

The right multi-function switch is the primary control for the front wiper and washer system, and contains switches, circuitry, an intermittent wipe logic circuit, and an internal wiper motor relay to provide the following functions and features:

- **Continuous Front Wipe Modes** - The internal circuitry and hardware of the right multi-function switch control stalk provide two continuous front wipe switch positions, low speed or high speed.
- **Front Washer Mode** - The internal circuitry and hardware of the right multi-function switch control stalk provide front washer system operation.
- **Front Wipe-After-Wash Mode** - The internal circuitry and hardware of the right multi-function switch control stalk provide a wipe-after-wash mode.
- **Front Wiper Mist Mode** - The internal circuitry and hardware of the right multi-function switch control stalk provide a front wiper system mist mode.
- **Intermittent Front Wipe Mode** - The internal circuitry and hardware of the right multi-function switch control stalk and control knob provide an intermittent front wipe mode with adjustable delay interval positions.

OPERATION

The right multi-function switch uses an internal logic circuit, an internal relay and conventionally switched outputs to control the many functions and