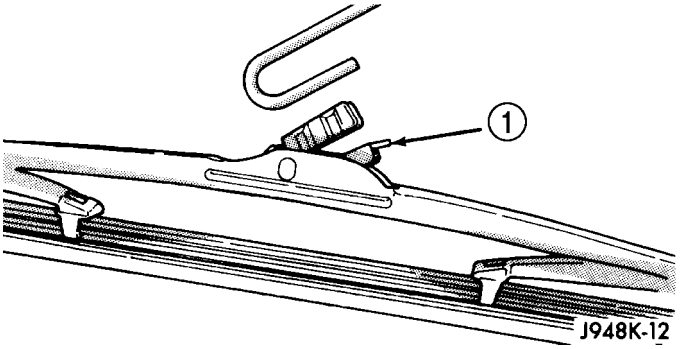

Fig. 17 Wiper Blade Remove/Install - Typical

1 - RELEASE TAB

(3) Slide the rear wiper blade away from the tip of the arm towards the pivot end of the arm far enough to disengage the pivot block from the hook formation on the end of the arm.

(4) Extract the hook formation on the tip of the wiper arm from the opening in the wiper blade superstructure ahead of the wiper blade pivot block/ latch unit.

CAUTION: Do not allow the wiper arm to spring back against the liftglass without the wiper blade in place or the glass may be damaged.

(5) Gently lower the wiper arm tip onto the glass.

INSTALLATION

NOTE: The notched end of the wiper element flexor should always be oriented towards the end of the wiper blade that is nearest to the rear wiper motor output shaft.

(1) Lift the rear wiper arm off of the liftglass.

(2) Position the rear wiper blade near the hook formation on the tip of the arm with the notched end of the wiper element flexor oriented towards the end of the wiper arm that is nearest to the rear wiper motor output shaft.

(3) Insert the hook formation on the tip of the wiper arm through the opening in the wiper blade superstructure ahead of the wiper blade pivot block/ latch unit far enough to engage the pivot block with the hook (Fig. 17).

(4) Slide the wiper blade pivot block/latch up into the hook formation on the tip of the wiper arm until the latch release tab snaps into its locked position.

(5) Gently lower the wiper blade onto the liftglass.

REAR WIPER MOTOR

DESCRIPTION

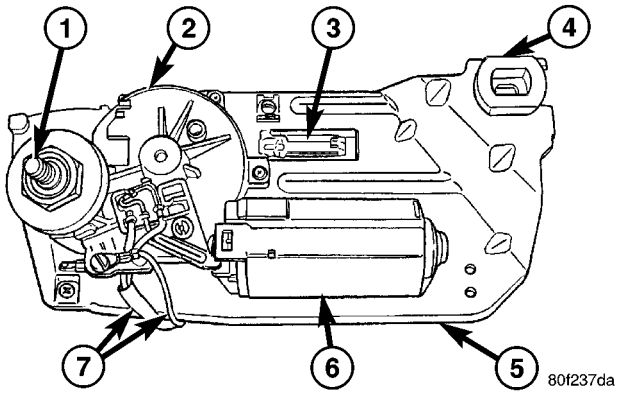

Fig. 18 Rear Wiper Motor

1 - OUTPUT SHAFT
2 - TRANSMISSION
3 - PIGTAIL CONNECTOR (ON BACK)
4 - INSULATOR
5 - BRACKET
6 - MOTOR
7 - PIGTAIL WIRES

The rear wiper motor is concealed behind a molded plastic trim cover on the inside of the liftglass near the right liftglass hinge at the top of the glass. A large blackout area of the liftglass conceals the unit from the exterior of the vehicle. The end of the motor output shaft that protrudes through a large rubber grommet in the liftglass to drive the rear wiper arm and blade is the only visible component of the rear wiper motor (Fig. 18). A large flat washer and a nut secure and seal the motor output shaft to the outside of the liftglass, while a rubber insulator in a slot on the outboard upper corner of the motor bracket is secured by a stud and nut to the inside of the liftglass near the right liftglass hinge. The connector of a short pigtail harness is secured to a tab on the back of the motor bracket, and connects the rear wiper motor to the vehicle electrical system through a dedicated take out and connector of the hardtop wire harness. The rear wiper motor consists of the following major components:

- **Bracket** - The rear wiper motor bracket consists of a stamped steel mounting plate that is secured with screws to the wiper motor and transmission. A rubber insulator in a slot on the upper outboard corner of the bracket is secured by a nut and washer to a stud on the inside surface of the liftglass. An integral tab on the back of the bracket supports the wiper motor pigtail wire connector.
- **Motor** - The single-speed permanent magnet rear wiper motor is secured with screws to the rear wiper motor bracket. The wiper motor includes an integral transmission, a motor output shaft, a diode, and the rear wiper motor park switch.