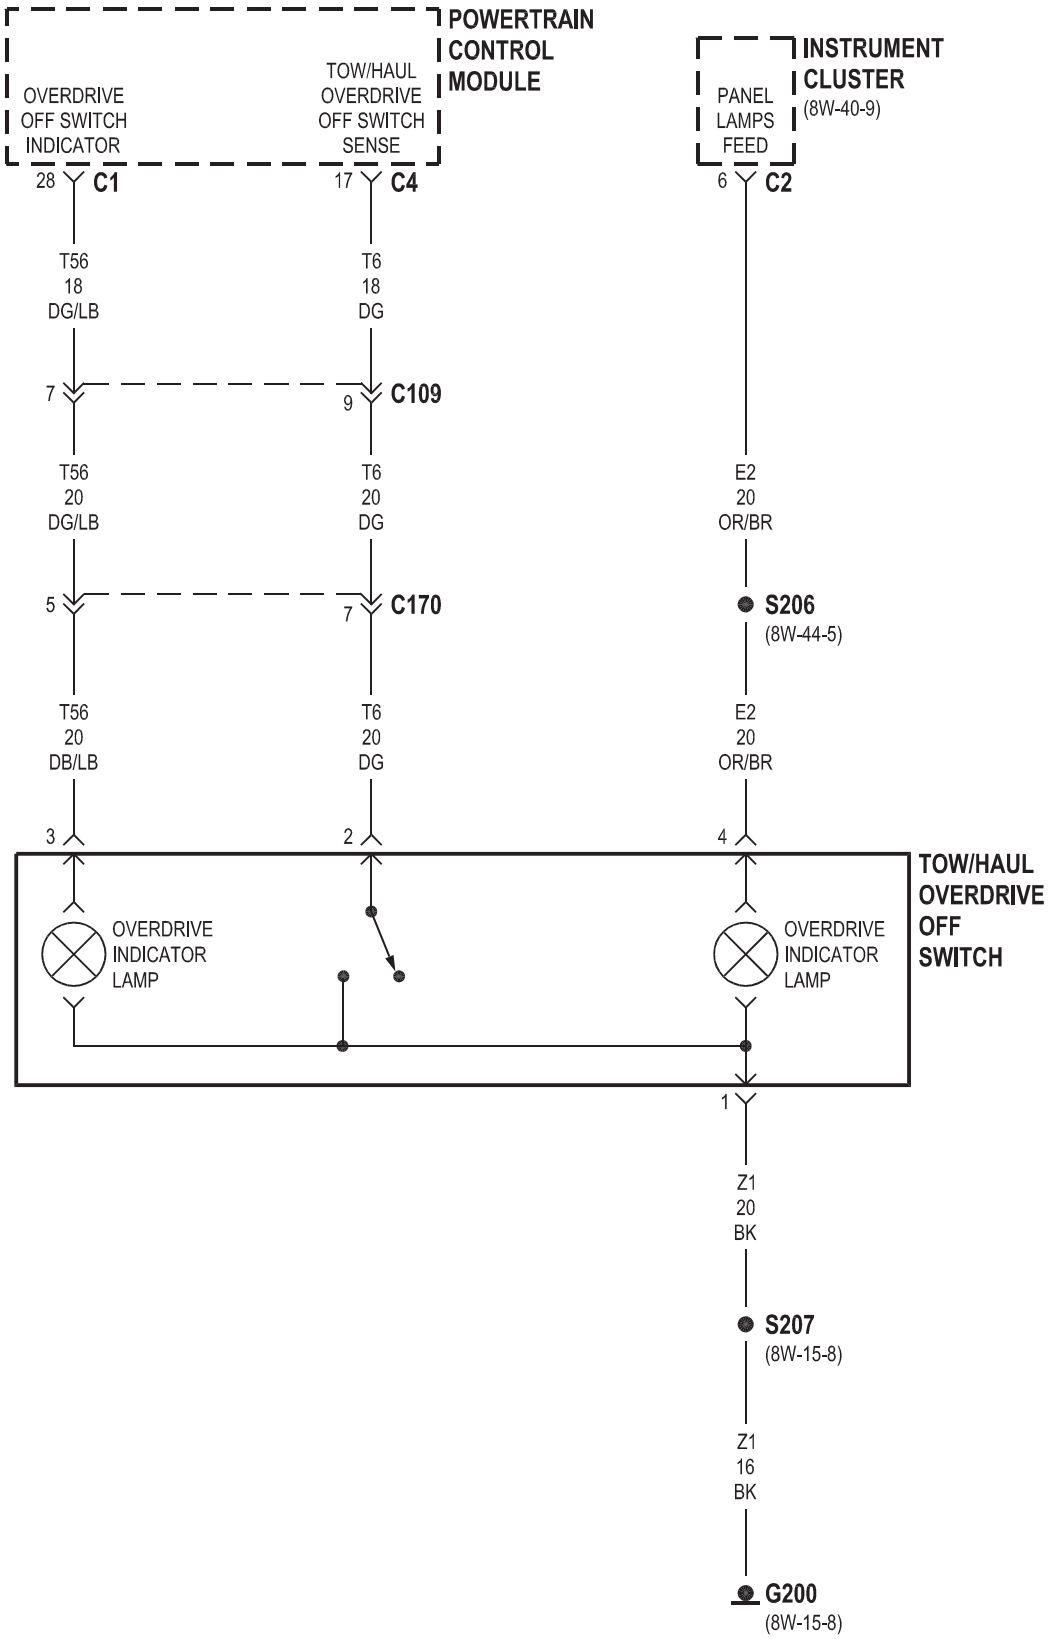

POWERTRAIN CONTROL MODULE
OVERDRIVE OFF SWITCH INDICATOR
TOW/HAUL OVERDRIVE OFF SWITCH SENSE
INSTRUMENT CLUSTER
(8W-40-9)
PANEL LAMPS FEED
28 C1
17 C4
6 C2
T56 18 DG/LB
T6 18 DG
7
9 C109
T56 20 DG/LB
T6 20 DG
E2 20 OR/BR
5
7 C170
S206
(8W-44-5)
T56 20 DB/LB
T6 20 DG
E2 20 OR/BR
3
2
4
TOW/HAUL OVERDRIVE OFF SWITCH
OVERDRIVE INDICATOR LAMP
OVERDRIVE INDICATOR LAMP
1
Z1 20 BK
S207
(8W-15-8)
Z1 16 BK
G200
(8W-15-8)