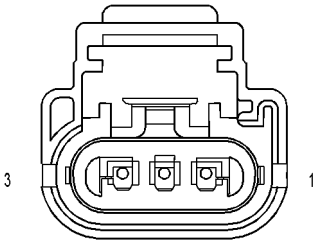

THROTTLE POSITION SENSOR (2.4L)

THROTTLE POSITION SENSOR (2.4L) - 3 WAY

CAV	CIRCUIT	FUNCTION
1	F855 20PK/YL	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K22 20BR/OR	TP NO. 1 SIGNAL

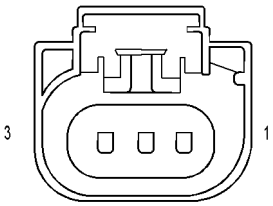

THROTTLE POSITION SENSOR (4.0L)

THROTTLE POSITION SENSOR (4.0L) - 3 WAY

CAV	CIRCUIT	FUNCTION
1	F855 20PK/YL	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K22 18BR/OR	TP NO. 1 SIGNAL

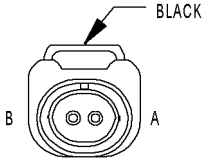

TORQUE CONVERTER CLUTCH SOLENOID

TORQUE CONVERTER CLUTCH SOLENOID - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
A	F12 20RD/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
B	T23 18OR/LG	TRANSMISSION LOW/OVERDRIVE SOLENOID

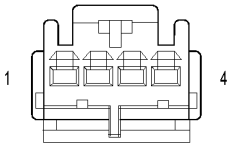

TOW/HAUL OVERDRIVE OFF SWITCH

TOW/HAUL OVERDRIVE OFF SWITCH - 4 WAY

CAV	CIRCUIT	FUNCTION
1	Z1 20BK	GROUND
2	T6 20DG	TOW/HAUL OVERDRIVE OFF SWITCH SENSE
3	T56 20DB/LB	OVERDRIVE OFF SWITCH INDICATOR
4	E2 20OR/BR	PANEL LAMPS FEED