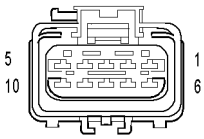

TRANSMISSION SOLENOID/ PRESSURE SWITCH ASSEMBLY

TRANSMISSION SOLENOID/PRESSURE SWITCH ASSEMBLY - 10 WAY

CAV	CIRCUIT	FUNCTION
1	T60 16YL/GY	OD SOLENOID CONTROL
2	T59 16YL/LB	UD SOLENOID CONTROL
3	T16 16YL/OR	TRANSMISSION CONTROL RELAY OUTPUT
4	T19 16YL/DB	2-4 SOLENOID CONTROL
5	T47 18YL/DG	2-4 PRESSURE SWITCH SENSE
6	T9 18DG/TN	OD PRESSURE SWITCH SENSE
7	T20 16DG/WT	L/R SOLENOID CONTROL
8	-	-
9	-	-
10	T50 18YL/TN	L/R PRESSURE SWITCH SENSE

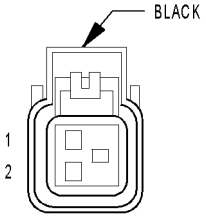

UNDERHOOD LAMP

UNDERHOOD LAMP - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
1	Z901 18BK	GROUND
2	M21 20YL/BR	FUSED B(+)

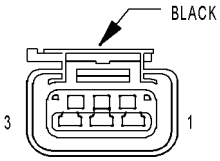

VEHICLE SPEED SENSOR

VEHICLE SPEED SENSOR - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	F856 18YL/PK (EXCEPT MAN 6 SPD TRANS)	5 VOLT SUPPLY
1	F856 20YL/PK (MAN 6 SPD TRANS)	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K75 18DB/OR (EXCEPT MAN 6 SPD TRANS)	VEHICLE SPEED SENSOR SIGNAL
3	K75 20DB/OR (MAN 6 SPD TRANS)	VEHICLE SPEED SENSOR SIGNAL