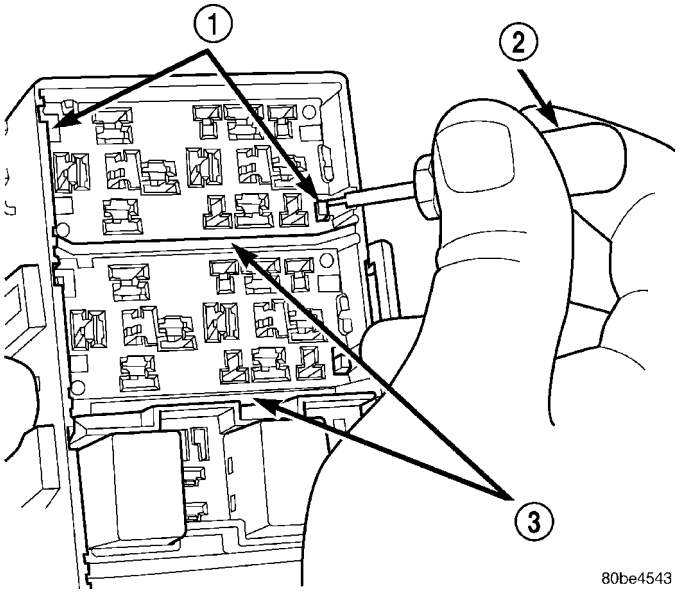

Fig. 13 PDC Relay Cassette Latches - Typical

1 - LATCHES
2 - FROM SPECIAL TOOL KIT 6680
3 - PDC RELAY CASSETTES

(3) Gently and evenly press the relay cassette down through the PDC housing.

(4) From the bottom of the PDC housing, remove the relay cassette from the PDC (Fig. 14).

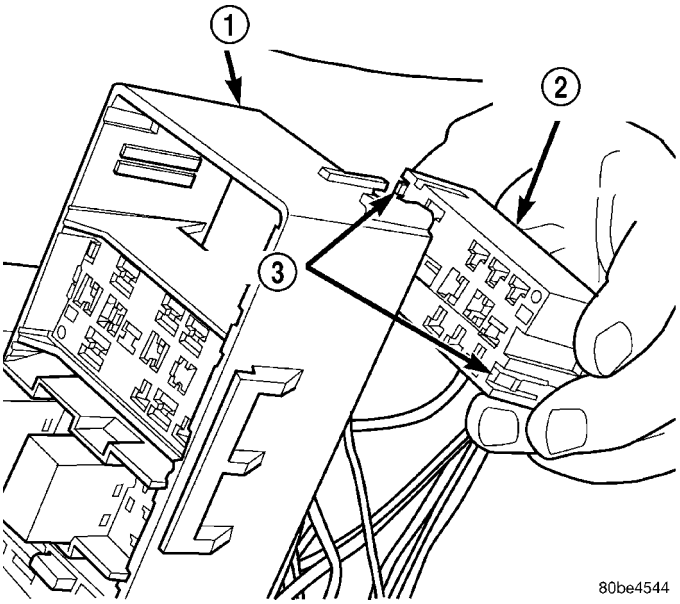

Fig. 14 PDC Relay Cassette Remove/Install - Typical

1 - PDC HOUSING
2 - PDC RELAY CASSETTE
3 - LATCHES

CAUTION: Do not remove the wiring and terminals from the terminal cavities of the faulty PDC relay cassette at this time. Refer to the Assembly procedure that follows for the proper procedures for transferring the wiring and terminals to the replacement PDC relay cassette.

ASSEMBLY

POWER DISTRIBUTION CENTER ASSEMBLY

PDC HOUSING LOWER COVER INSTALLATION

(1) Align the PDC housing lower cover to the bottom of the PDC.

(2) Press the PDC housing lower cover gently and evenly onto the PDC until each of the latches that secure the cover to the PDC is fully engaged.

(3) Engage the mounts on the PDC housing with the stanchions of the PDC bracket and push the unit downward until the mount latches fully engage the mounting tabs on the PDC bracket.

(4) Install the eyelet terminal over the two PDC B(+) terminal studs.

(5) Install and tighten the two nuts that secure the eyelet terminal to the B(+) terminal studs. Tighten the nuts to 11.3 N·m (100 in. lbs.).

(6) Install the B(+) terminal stud cover onto the PDC.

(7) Install the cover onto the PDC.

(8) Reconnect the battery negative cable.

PDC B+ TERMINAL MODULE INSTALLATION

(1) From the bottom of the PDC housing, align and insert the B(+) terminal module into the PDC.

(2) From the bottom of the PDC housing, align and insert the two studs of the PDC B(+) terminal module through the bus bar in the PDC.

(3) From the bottom of the PDC housing, press the B(+) terminal module gently and evenly into the PDC until both of the latches are fully engaged.

(4) Install the PDC housing lower cover.

PDC RELAY WEDGE INSTALLATION

(1) From the top of the PDC housing, align and insert the PDC relay wedge latch arms into the correct cavities in the relay cassette.

(2) Gently and evenly press the PDC relay wedge down into the relay cassette until both of the latches are fully engaged.

(3) Install each of the removed relays into the proper cavities of the PDC relay wedge.

(4) Install the PDC housing lower cover.

PDC RELAY CASSETTE INSTALLATION

(1) Move the faulty PDC relay cassette with its wiring away from the bottom of the PDC housing far enough to allow the replacement relay cassette to be installed into the PDC.

(2) Using the faulty relay cassette as a guide, be certain that the replacement relay cassette is correctly oriented before installing it into the PDC housing.

(3) From the bottom of the PDC housing, align and insert the replacement relay cassette into the PDC.