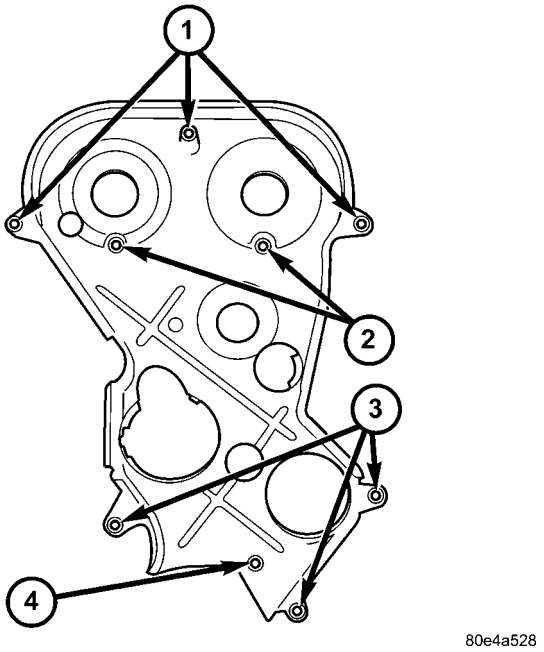

Fig. 94 TIMING BELT REAR COVER FASTENERS

1 - OUTER COVER TO REAR COVER FASTENERS (3)
2 - REAR COVER TO CYLINDER HEAD FASTENERS
3 - OUTER COVER TO REAR COVER FASTENERS (3)
4 - INNER COVER TO BLOCK FASTENERS

CAUTION: Do not use an impact wrench for tightening camshaft sprocket bolt. Damage to the timing locating pin can occur. Hand tighten using a wrench ONLY.

(2) Install camshaft sprockets, and camshaft target ring. Hold sprockets with Special Tool 6848 and tighten center bolt to 101 N·m (75 ft. lbs.).

(3) Install timing belt idler pulley and tighten mounting bolt to 61 N·m (45 ft. lbs.).

(4) Install timing belt. (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - INSTALLATION)

(5) Install accessory drive bracket (Fig. 95).

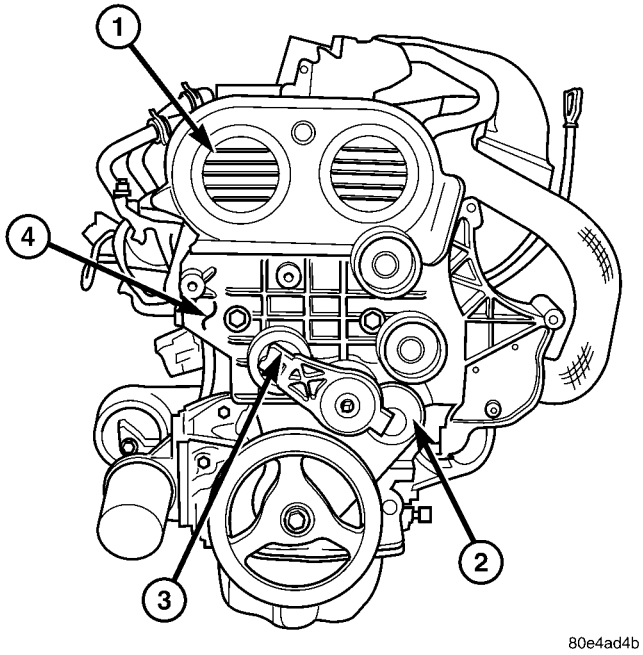

Fig. 95 ACCESSORY DRIVE BRACKET

1- UPPER TIMING BELT COVER
2- LOWER TIMING BELT COVER
3- BELT TENSIONER
4- ACCESSORY DRIVE BRACKET

(6) Install front covers.

FRONT COVER

(1) Install timing belt front covers (Fig. 96). Tighten fasteners to 7 N·m (60 in. lbs.).