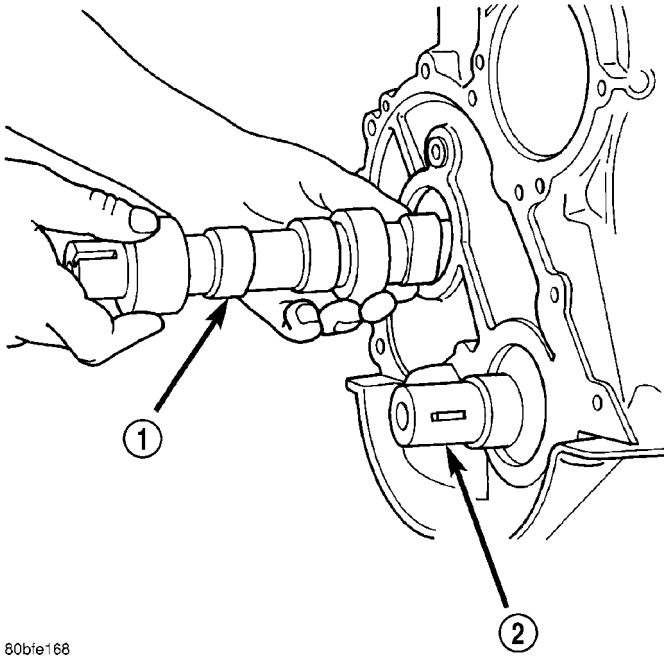

Fig. 34 Camshaft Removal

1 - CAMSHAFT
2 - CRANKSHAFT

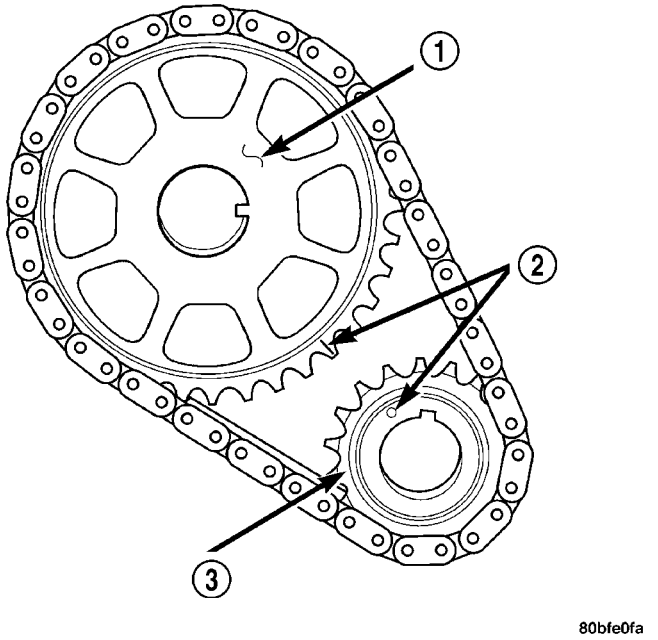

Fig. 35 Crankshaft / Camshaft Sprocket Timing Mark Alignment

1 - CAMSHAFT SPROCKET
2 - TIMING MARKS
3 - CRANKSHAFT SPROCKET

INSTALLATION

INSTALLATION - CAMSHAFT BEARINGS

CAUTION: Make sure outside diameter of number 1 bearing is clean. Make sure that the bearing is properly installed in the engine block, align the oil hole in the bearing with the oil gallery in the bearing bore. Failure to do so will cause inadequate oil supply for the sprockets and timing chain.

(1) Using recommended special tool 8544 Camshaft Bearing Remover/Installer, install new camshaft bearings.

INSTALLATION - CAMSHAFT

(1) Lubricate the camshaft with Mopar® Engine Oil Supplement, or equivalent.

(2) Carefully install the camshaft to prevent damage to the camshaft bearings.

(3) Position thrust plate and install retaining screws. Tighten screws to 24 N·m (18 ft. lbs.).

(4) Lubricate the camshaft with Mopar® engine oil supplement, or equivalent.

(5) Install the camshaft sprocket, crankshaft sprocket and timing chain (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - INSTALLATION).

(6) Tighten the camshaft sprocket bolt and washer to 68 N·m (50 ft. lbs.).

(7) To verify correct installation of the timing chain, turn the crankshaft two full revolutions then position the camshaft sprocket timing mark as shown in (Fig. 36).