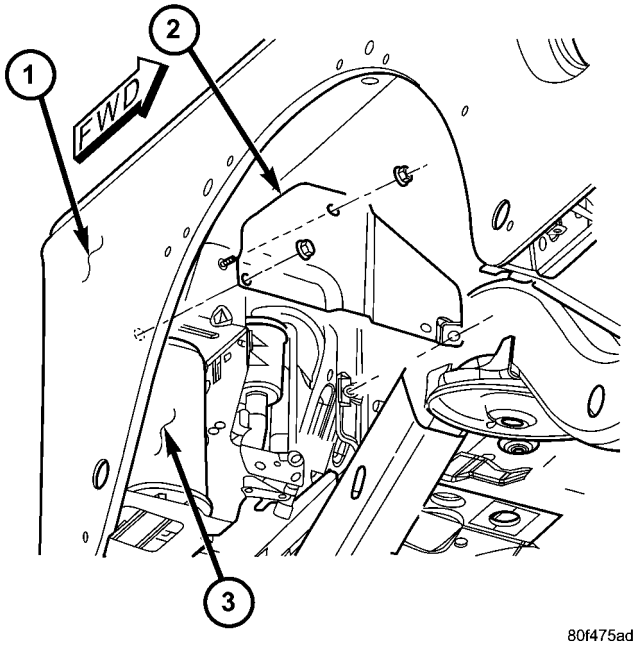

Fig. 12 EVAP CANISTER / NVLD PUMP LOCATION

1 - RIGHT / REAR FENDER (WHEELHOUSE)
2 - BRACKET
3 - EVAP CANISTER

(11) Remove vertical support bracket (2) (Fig. 12) to gain access to ORVR vapor line.

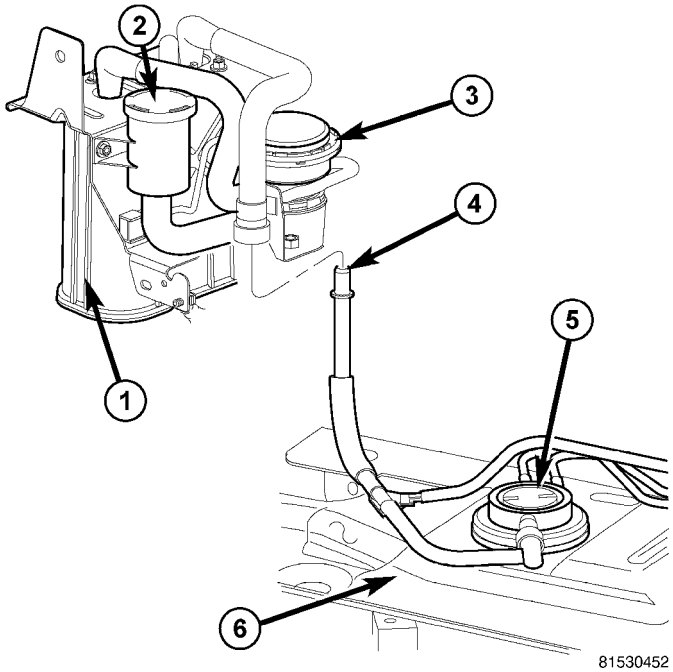

Fig. 13 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)

(12) A vapor line (4) connects the fuel tank to the EVAP canister and NVLD pump. This connection is made near the right/rear corner of the fuel tank. Carefully disconnect this vapor line (4) (Fig. 13). Be very careful not to bend or kink the vapor lines. If vapor lines leak, a Diagnostic Trouble Code (DTC) will be set.

(13) Cut plastic tie wrap securing rear axle vent hose to fuel fill hose.

(14) Disconnect fuel tank electrical connector at left/front of fuel tank.

(15) Disconnect 2 vapor lines at left/front of fuel tank.