(7) Install three skid plate mounting nuts (1) at front of tank (Fig. 18). Tighten to 16 N·m (141 in. lbs.) torque.

(8) Remove tank jacking device.

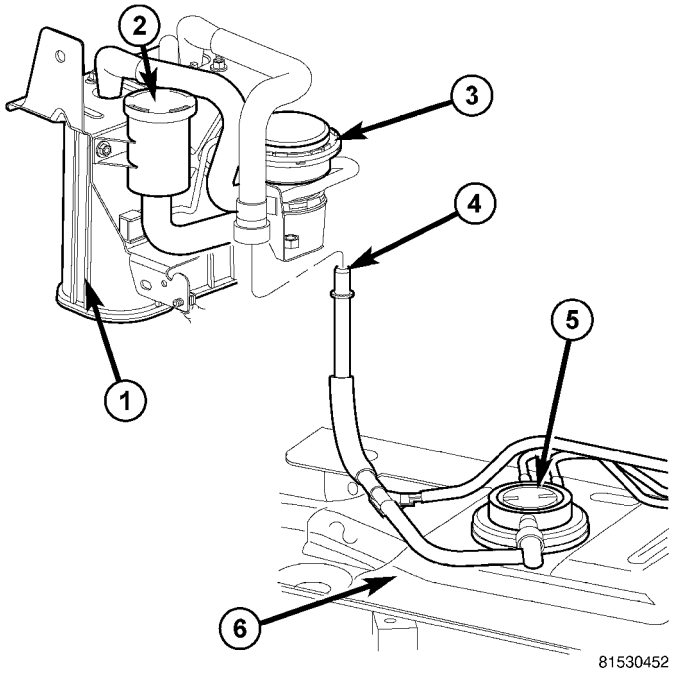

Fig. 19 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)

(9) Carefully connect the vapor line (4) (Fig. 19). Be very careful not to bend or kink the vapor lines. If lines leak, a Diagnostic Trouble Code (DTC) will be set.

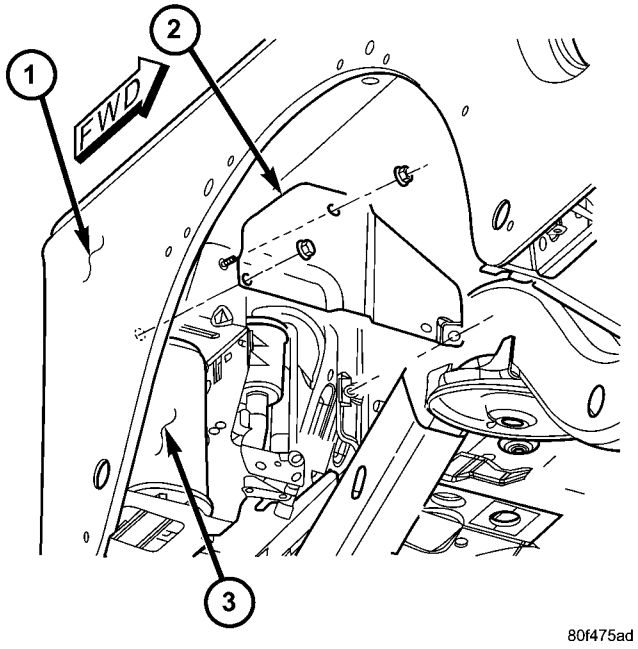

Fig. 20 EVAP CANISTER / NVLD PUMP LOCATION

1 - RIGHT / REAR FENDER (WHEELHOUSE)
2 - BRACKET
3 - EVAP CANISTER

(10) Install EVAP canister bracket (2) (Fig. 20).

(11) Install wheelhouse liner at right/rear wheel.

(12) Install right/rear tire/wheel.

(13) Connect electrical connector at of fuel tank.

(14) Connect vapor line at left/front of fuel tank.