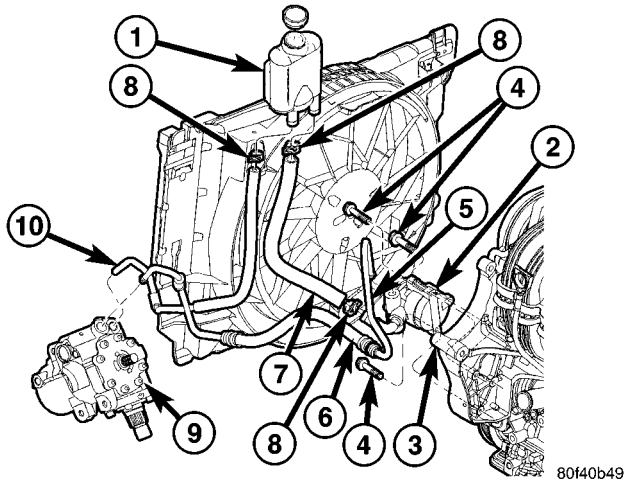

Fig. 3 POWER STEERING GEAR & PUMP - 2.4L

1 - REMOTE RESERVOIR
2 - POWER STEERING PUMP
3 - PUMP MOUNT BRACKET
4 - MOUNTING BOLTS (3)
5 - PRESSURE SWITCH LOCATION
6 - PRESSURE OUTLET HOSE (GEAR TO PUMP)
7 - RETURN HOSE (RESERVOIR TO PUMP)
8 - CLAMPS
9 - STEERING GEAR
10 - INLET HOSE (RESERVOIR TO GEAR)

OPERATION

The gear acts as a rolling thread between the worm shaft and rack piston. The worm shaft is supported by a thrust bearing at the upper end. When the worm shaft is turned the rack piston moves. The rack piston teeth mesh with the pitman shaft. Turning the worm shaft turns the pitman shaft, which turns the steering linkage.

CAUTION: Components attached with a nut and cotter pin must be torqued to specification. Then if the slot in the nut does not line up with the cotter pin hole, tighten nut until it is aligned. Never loosen the nut to align the cotter pin hole.

DIAGNOSIS AND TESTING - POWER STEERING GEAR LEAKAGE AREAS

NOTE: Do not service the Steering Gear, if the gear is leaking it must be replaced with a new gear assembly.

(1) Possible power steering gear leakage areas. (Fig. 4).

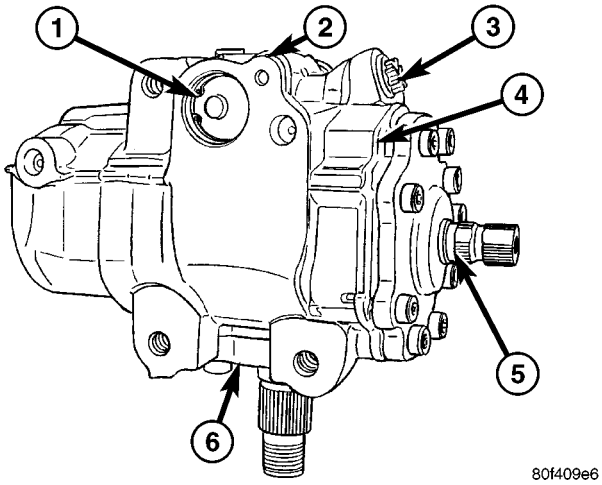

Fig. 4 STEERING GEAR

1 - VALVE HOUSING O-RING
2 - ADJUSTER NUT
3 - POWER STEERING LINE FITTINGS
4 - INPUT SHAFT HOUSING GASKET
5 - INPUT SHAFT SEAL
6 - PITMAN SHAFT SEAL HOUSING / COVER O-RING

REMOVAL

NOTE: The steering column on vehicles with an automatic transmission may not be equipped with an internal locking shaft that allows the ignition key cylinder to be locked with the key. Alternative methods of locking the steering wheel for service will have to be used.

(1) Place the front wheels in the straight ahead position with the steering wheel centered and locked.
(2) Siphon out as much power steering fluid as possible.
(3) Remove the bumper shield.
(4) Remove power steering hoses/tubes from steering gear.
(5) Remove the column coupler shaft from the gear.
(6) Remove pitman arm from gear. (Refer to 19 - STEERING/LINKAGE/PITMAN ARM - REMOVAL).
(7) Remove the steering gear retaining bolts and remove the gear (Fig. 5).