(3) Remove reverse clutch snap ring (3) (Fig. 157).

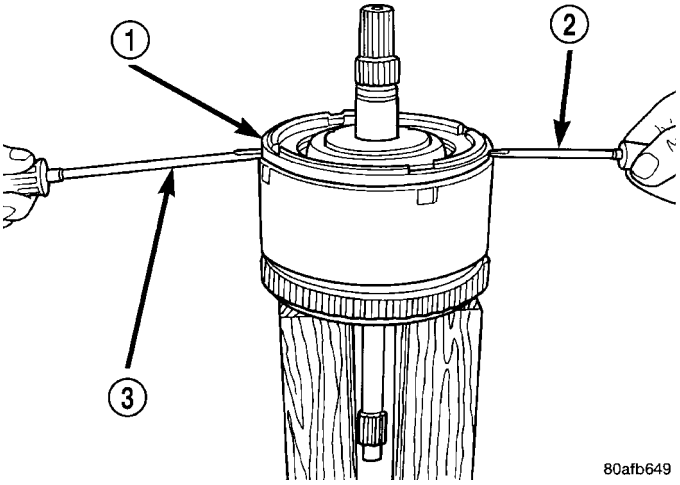

Fig. 158 Pry Reverse Clutch Reaction Plate

1 - REVERSE CLUTCH REACTION PLATE
2 - SCREWDRIVER
3 - SCREWDRIVER

(4) Pry up reverse clutch reaction plate (1) (Fig. 158).

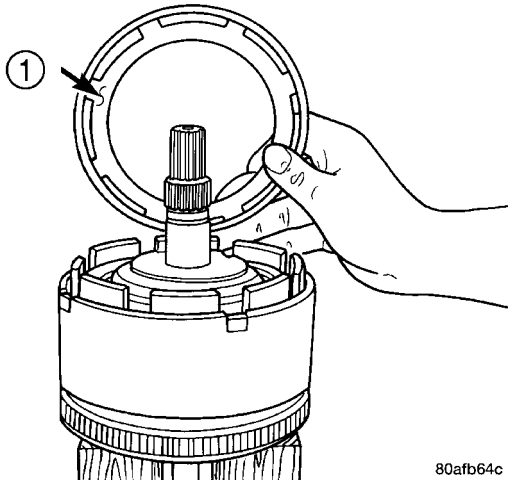

Fig. 159 Reverse Clutch Reaction Plate

1 - REVERSE CLUTCH REACTION PLATE (INSTALL FLAT SIDE DOWN)

(5) Remove reverse clutch reaction plate (1) (Fig. 159).

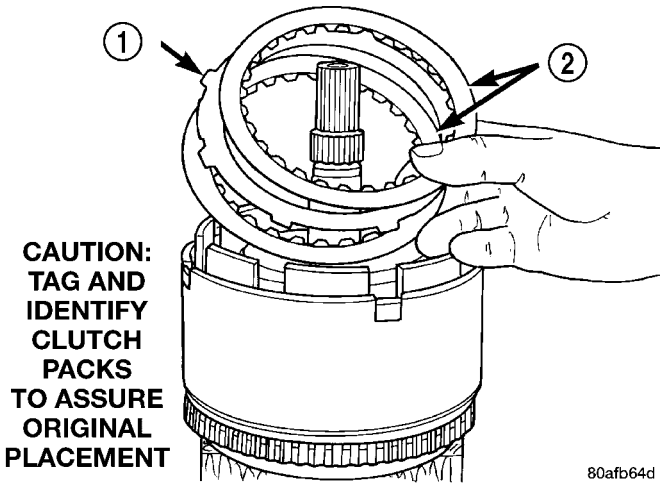

Fig. 160 Reverse Clutch Pack

1 - REVERSE CLUTCH PLATE
2 - REVERSE CLUTCH DISC

NOTE: Tag reverse clutch pack for reassembly identification.

(6) Remove the reverse clutch pack (two fibers/one steel) (1, 2) (Fig. 160).

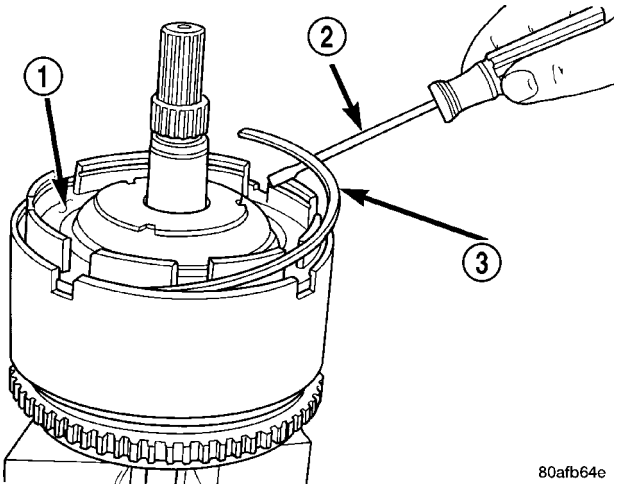

Fig. 161 OD/Reverse Pressure Plate Snap Ring

1 - OD/REVERSE PRESSURE PLATE
2 - SCREWDRIVER
3 - OD/REVERSE PRESSURE PLATE SNAP RING

(7) Remove the OD/Reverse reaction plate (1) snap ring (3) (Fig. 161).