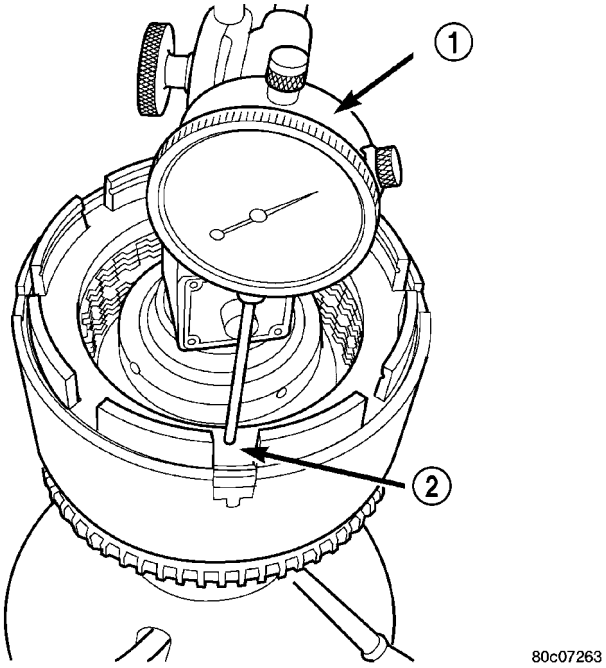

Fig. 209 Measure OD Clutch Pack Clearance

1 - DIAL INDICATOR
2 - OD/REVERSE PRESSURE PLATE

(28) Measure OD clutch pack clearance. Set up dial indicator (1) on top of the OD/Reverse reaction plate (2) (Fig. 209).

(29) Zero dial indicator and apply 30 psi (206 kPa) air pressure to the overdrive clutch hose on Tool 8391. Measure and record OD clutch pack measurement in four (4) places, 90° apart.

(30) Take average of four measurements and compare with OD clutch pack clearance specification. **The overdrive (OD) clutch pack clearance is 1.07-3.25 mm (0.042-0.128 in.).**

If not within specifications, the clutch is not assembled properly. There is no adjustment for the OD clutch clearance.

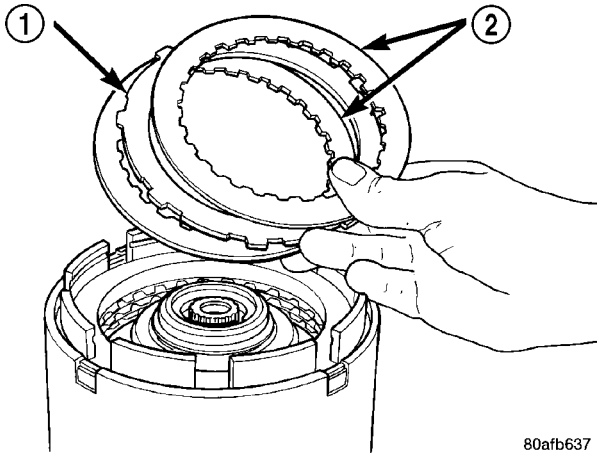

Fig. 210 Install Reverse Clutch Pack

1 - REVERSE CLUTCH PLATE
2 - REVERSE CLUTCH DISCS

(31) Install reverse clutch pack (two fibers/one steel) (1, 2) (Fig. 210).

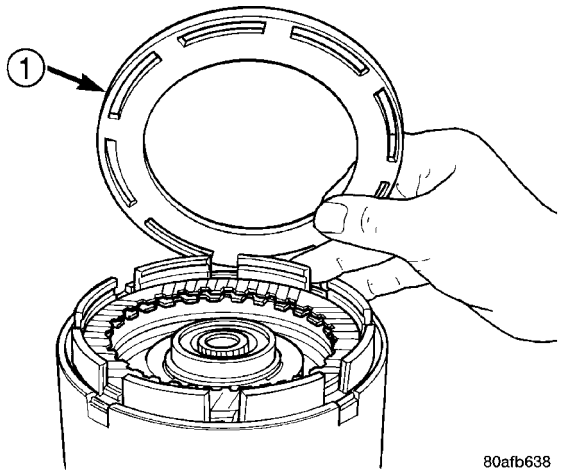

Fig. 211 Install Reaction Plate

1 - REVERSE CLUTCH REACTION PLATE (FLAT SIDE DOWN)

(32) Install reverse clutch reaction plate (1) with the flat side down towards reverse clutch (Fig. 211).

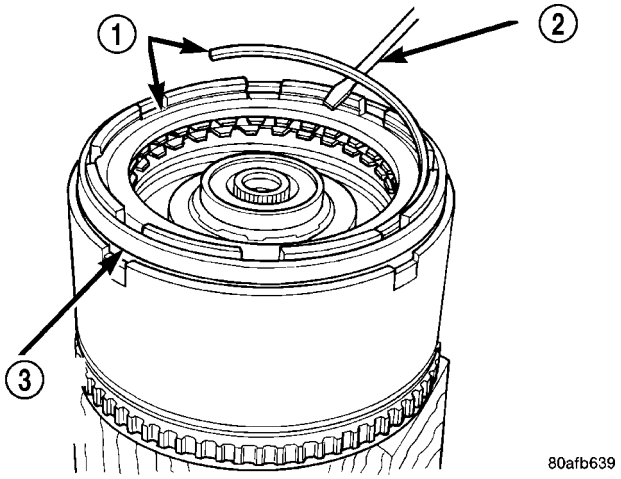

Fig. 212 Install Reverse Clutch Snap Ring

1 - REVERSE CLUTCH SNAP RING (SELECT)
2 - SCREWDRIVER
3 - REVERSE CLUTCH REACTION PLATE

(33) Tap reaction plate (3) down to allow installation of the reverse clutch snap ring (1). Install reverse clutch snap ring (1) (Fig. 212).