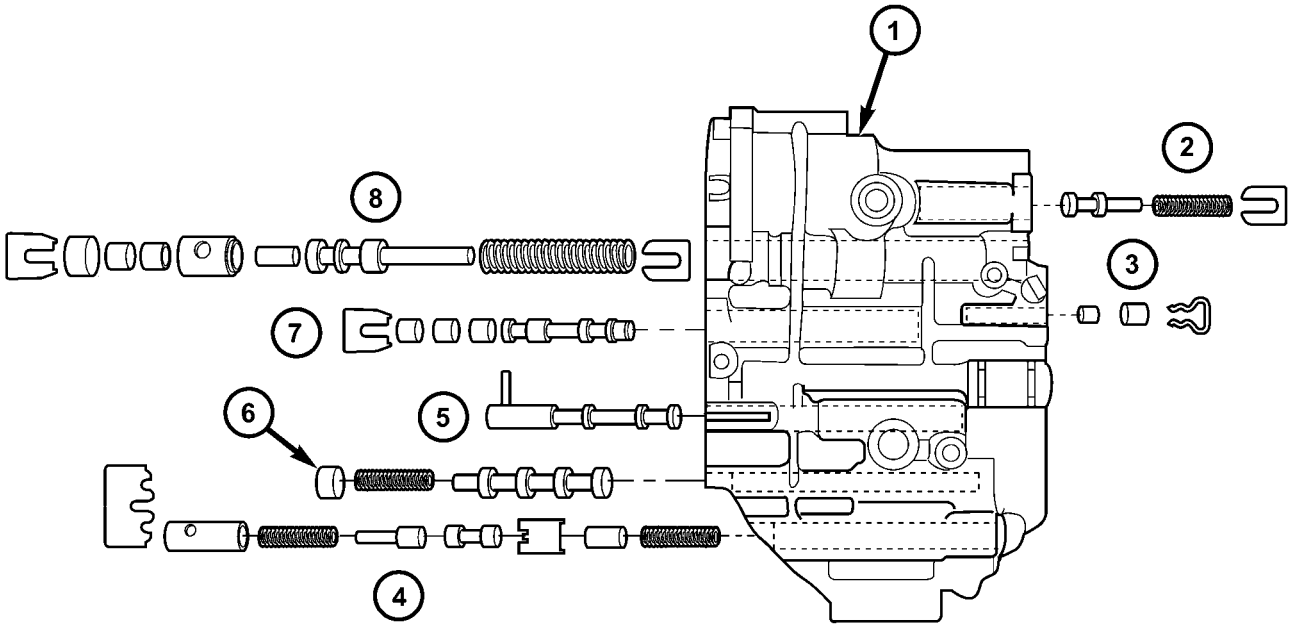

80865f21

Fig. 287 Valve Body Assembly

1 - VALVE BODY
2 - T/C REGULATOR VALVE
3 - L/R SWITCH VALVE
4 - CONVERTER CLUTCH CONTROL VALVE
5 - MANUAL VALVE
6 - CONVERTER CLUTCH SWITCH VALVE
7 - SOLENOID SWITCH VALVE
8 - REGULATOR VALVE

(1) Install all valves and springs as shown (Fig. 287).

(2) Install regulator valve spring retainer (2) (Fig. 288).

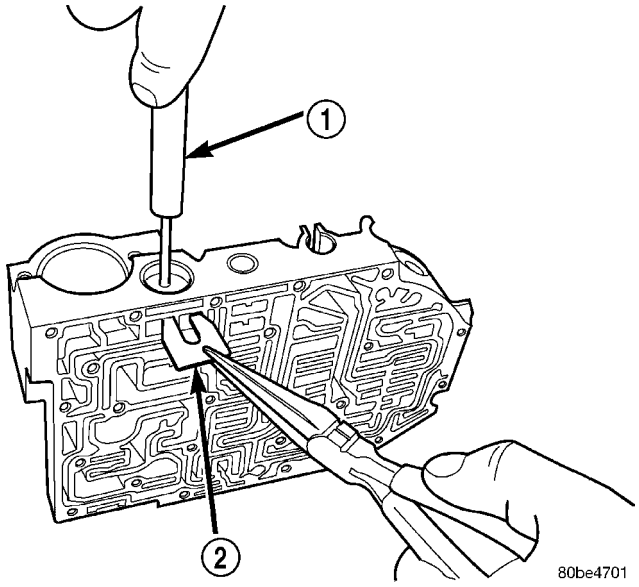

Fig. 288 Install Regulator Valve Spring Retainer using Tool 6302

1 - TOOL 6302
2 - RETAINER

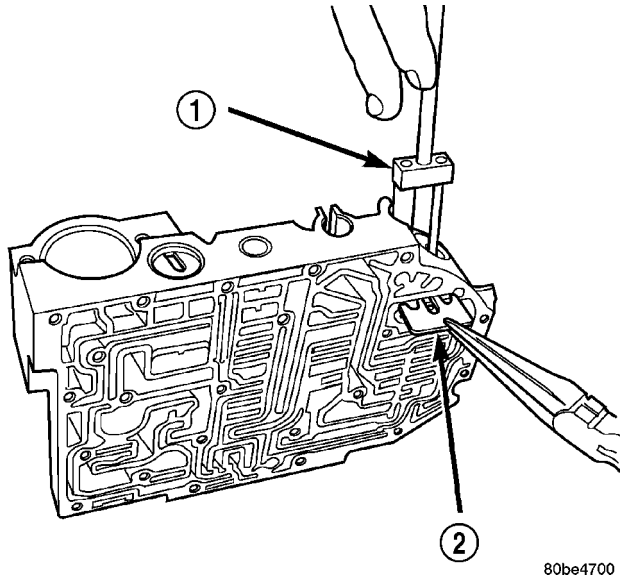

Fig. 289 Install Dual Retainer Plate using Tool 6301

1 - TOOL 6301
2 - RETAINER

(3) Install dual retainer plate (2) using Tool 6301 (1) (Fig. 289).