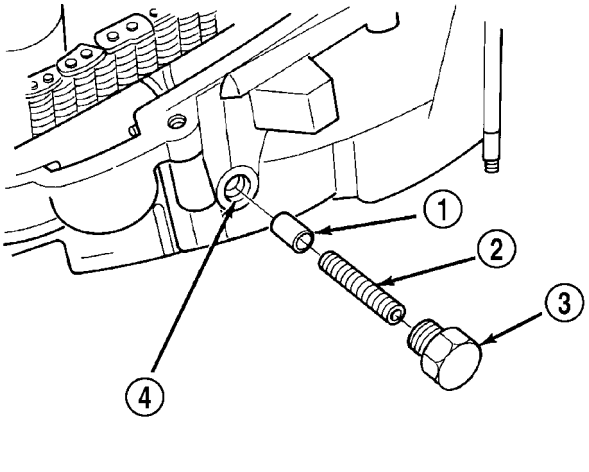


Fig. 68 Shift Detent Components

1 - POPPET
2 - SPRING
3 - SCREW
4 - POPPET BORE (IN CASE)

FRONT OUTPUT SHAFT AND DRIVE CHAIN

(1) Lubricate front output shaft-sprocket assembly, drive chain, and drive sprocket with transmission fluid.

(2) Assemble drive chain and front output shaft (Fig. 69).

(3) Start chain on mainshaft drive sprocket.

(4) Guide front shaft into bearing and drive sprocket onto mainshaft drive gear (Fig. 69).

(5) Install mode spring on upper end of mode fork shift rail (Fig. 70).

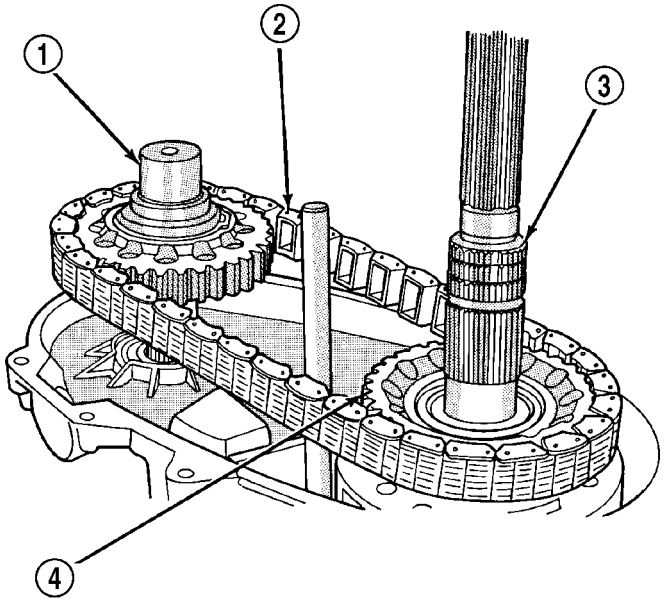


Fig. 69 Installing Drive Chain And Front Output Shaft

1 - FRONT OUTPUT SHAFT
2 - DRIVE CHAIN
3 - MAINSHAFT
4 - DRIVE SPROCKET

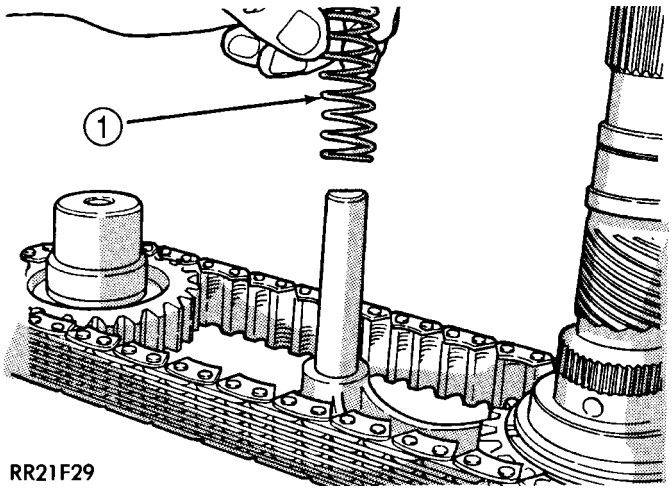


Fig. 70 Install Mode Fork Spring

1 - MODE SPRING

OIL PUMP AND REAR CASE

(1) Install magnet in front case pocket (Fig. 71).

(2) Assemble oil pickup screen, connecting hose, and tube.

(3) Install new pickup tube O-ring in oil pump (Fig. 72).